

ONE FOR ALL 4

English

Instructions manual P. 2

Deutsch

Français

Español

Português

Italiano

Nederlands



URC-7740

Universal remote

Universal Fernbedienung

Télécommande universelle

Mando a Distancia Universal

Telecomando Universal

Telecomando Universale

Universele Afstandsbediening

PICTURES OF THE ONE FOR ALL 4 REMOTE	3
BATTERIES	4
THE KEYPAD	4

INSTALLATION

SETTING UP THE ONE FOR ALL 4 **Page 6**

(How to set up the ONE FOR ALL 4 to control your devices)

- Direct code set up 6
- Search Method 7

SET UP CODES

Televisions	12
Video Recorders	17
Satellite Receivers	19
Cable Converters	22
DVD Players	22

CODE BLINK OUT	8
(To find out which code is currently programmed)	

QUICK CODE REFERENCE	8
-----------------------------------	---

EXTRA FEATURES

Mode re-assignment (Changing a device mode)	9
Colour and Brightness	10
Volume Punch Through	10

TROUBLE-SHOOTING

Problem & Solution	11
--------------------------	----

About Your ONE FOR ALL 4

Congratulations on your purchase of the ONE FOR ALL 4 Universal Remote Control. By choosing the ONE FOR ALL 4 remote you have opted for the User Friendly remote control solution. Made according to the highest quality, the ONE FOR ALL 4 will provide you with long-term satisfaction. Please read these enclosed instructions carefully before putting your ONE FOR ALL 4 to use.

 
Your ONE FOR ALL 4 Remote Package contains:

- Your ONE FOR ALL 4 Remote
- Your ONE FOR ALL 4 Manual

Your Manual is divided into two parts: the set-up instructions and the device codes.

PLEASE DO NOT DISCARD THIS MANUAL AS YOU MAY NEED IT AGAIN IN THE FUTURE!

Your ONE FOR ALL 4 can operate four devices: a Television, a Video Recorder, a DVD Player and a Satellite Receiver or Cable Converter.

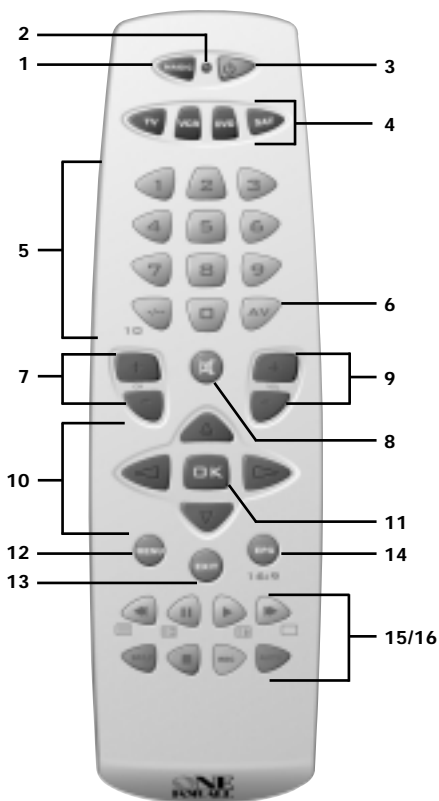

Batteries

Your ONE FOR ALL 4 Remote needs 2 new "AA/LR6" Alkaline batteries.

- 1 Push the battery door upwards and lift it up to remove it.
- 2 Match the batteries to the (+) and (-) marks inside the battery case, then insert the batteries.
- 3 Replace the battery cover by pushing downwards and allowing it to click back into position.

-
- In order to avoid having to re-program your ONE FOR ALL 4 after you remove the batteries, you will need to insert new batteries within 5 minutes. Also it is recommended that you do not use rechargeable batteries.
 - On the inside of the battery compartment door you will find a label on which to write your Set-Up Codes for future reference. This you will do after setting up your ONE FOR ALL 4 remote for your devices.
-

The Keypad

Please refer to the picture of the ONE FOR ALL 4 Remote Control on Page 3.

- 1 **Magic Key:**
The Magic key is used to set-up your ONE FOR ALL 4 Remote Control and to access special functions.
- 2 **LED:**
During the use of your ONE FOR ALL 4, the LED will light up red.
- 3 **Power Key:**
The Power key controls the same function as it did on your original remote.
- 4 **Device Keys:**
The TV, VCR, DVD & SAT keys select the home entertainment device you wish to control. For example, pressing the TV key allows the remote to control the functions of your television, etc.
- 5 **Number Keys:**
The Number keys (0-9, -/--(10)) provide the functions just like your original remote, such as the direct access to program/channel selection. If your original remote uses a 10 key, this function can be found by pressing the -/-- key.
- 6 **AV**
The AV key operates the same function it did on your original remote control.
- 7 **Channel Up / Down Control:**
These keys control the same functions as your original remote control. In DVD mode the Channel Up key operates the "Next Track" function, and the Channel down key operates the "Previous Track" function.
- 8 **Mute Key:**
The Mute key operates the same function it did on your original remote.
- 9 **Volume Up / Down Control:**
These keys operate just as those on your original remote.
- 10 **Directional Keys**
If available on your original remote, these keys will allow you to navigate through the menu of your device.

The Keypad

11 OK key

If your original remote control required that you press an "OK" or "ENTER" key during Menu operation, this key can be used for this function.

12 Menu Key:

Controls the same function as it did on your original remote control.

13 Exit Key:

The Exit key will exit the Menu.

14 EPG key

If available on your original remote, this key will provide the "Electronic Program Guide" (EPG) function. In TV mode this key allows you to access the wide screen (16:9) view option of your television (if available on your original remote). In VCR mode it obtains the TV/VCR function.

15 VCR / DVD keys (PLAY, STOP, REW etc.)

After pressing the VCR mode key, the Playback keys operate the same functions of your Video Recorder Keys. To prevent accidental recording, the RECORD key must be pressed **twice**. After pressing the DVD mode key, the Playback keys will operate the same functions of your DVD Players.

In VCR mode the SP/LP key controls the tape speed function, the AUTO key controls the auto tracking function, just like on your original remote.

16 Teletext Functions:

After pressing the TV key, the transport keys (REW, PLAY, FF, PAUSE) are used to operate the main Teletext functions. The symbols below the keys are for Teletext. The text keys are used to access the Teletext functions of your television. Of course, your television must have Teletext capability.



TEXT ON: Puts your television in the teletext mode.



HOLD/STOP: Stops the television changing text pages.



EXPAND: Shows the top half of the teletext page in larger letters. By pressing again, you can see the bottom half of the teletext page enlarged. To return to the regular teletext viewing, press the Expand key again, or press the Text key, depending on your television.



TEXT OFF: Switches the television back to regular viewing mode. On some televisions, this may be done by pressing the TEXT key several times.

After pressing the TV key and accessing the text mode, the bottom row of the Video Recorder keys marked **red**, **green**, **yellow** and **blue**, allow you to access the Fastext functions of your television. **If on your original remote control these keys are used for Menu navigation, the ONE FOR ALL Fastext keys may operate in the same way.**




 

- For a more detailed explanation of the Teletext and Fastext functions, please refer to the manual of your television. Remember, different televisions control Teletext and Fastext in different ways. Not all Teletext functions may be available for your particular model.

Setting up the ONE FOR ALL 4

(How to set-up the ONE FOR ALL 4 to control your devices)

 
Direct code set-up

Example: To set up the ONE FOR ALL 4 for your television:

1. **Make sure your device (television) you wish to operate is switched on** (not in standby).
2.  **Find the code for your device in the Code List (page 12 - 24).** The device codes are listed per device type and brand name. Also the most popular code for each brand is listed first. **If your brand is not listed at all, try the Search Method on page 7.**
3.  **Press the device mode key (TV)** on the ONE FOR ALL 4 remote for the device you wish to set up.
4.  **Press and hold down MAGIC** until the red light blinks twice (the red light will blink once then twice).
5.  **Enter your four-digit device code** using the number keys. The red light will blink twice.
6.  **Now aim the ONE FOR ALL 4 remote at your device (television) and press POWER.** If your device switched off, the ONE FOR ALL 4 is ready to operate your device.

- Most TV's do not switch back on pressing the POWER key, please try pressing a "number" key or the "TV-text off" key to switch your TV back on.
- If your device does not respond, follow steps 1 through 6 with each code listed for your brand. If none of the codes listed for your brand operate your device, then try the Search Method described on page 7, even if your brand is not listed at all.
- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.
- If the original remote control from your Video Recorder / DVD player did not have a POWER key, press PLAY instead of POWER during step 6.
- To set up your other devices, follow the same instructions above, only press the appropriate device key during step 3.
- Remember to press the correct device key before operating your device. Only one device can be assigned to a device key.
- **Write your device code in the applicable four digit boxes provided in the battery compartment and on page 8 for future reference.**

Devices can be found under the following keys:

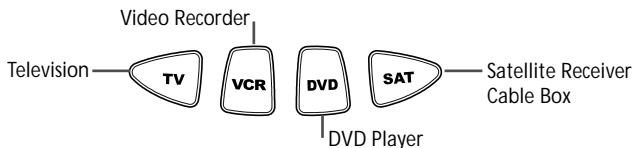

To set up for a second TV, VCR, DVD or SAT
(See mode re-assignment, Page 9).

Setting up the ONE FOR ALL 4

Search method


--> If your device does not respond to the ONE FOR ALL 4 after you have tried all the codes listed for your brand.


--> If your brand is not listed at all.


The Search Method allows you to scan through all the codes contained in the memory of the ONE FOR ALL 4.

Example: To search for your television code:


1. Switch your television on (not in standby).

2.  Press the **TV** key on the ONE FOR ALL 4.


3.  Press and hold down **MAGIC** until the ONE FOR ALL 4 red light blinks twice (the red light will blink once then twice).

4.  Press **9 9 1**. The red light will blink twice.

5.  Next, press **POWER**.

6.  Aim the ONE FOR ALL 4 at your Television. Now press **CH+** over and over, until your Television turns off (every time you press the CH+ key the ONE FOR ALL 4 will send out a POWER signal from the next code contained in the memory). **You may have to press this key many times (up to 150 times) so please be patient.**

If you skip past a code, you can go to the previous code(s) by pressing the CH- key. Remember to keep pointing the ONE FOR ALL 4 at your Television while pressing this key.

7.  As soon as your television turns off, press **MAGIC** to store the code.








-
- Most TV's do not switch on pressing the POWER key. Please try pressing a "number" key or the "TV-text off" key to switch your TV back on.
 - If you cannot control your Television properly, please continue the Search Method, you may be using the wrong Code.
 - To search for the code for another device follow the instructions above only press the appropriate device key instead of TV during step 2.
 - If the original remote control of your Video recorder or DVD player does not have a POWER key, press PLAY instead of POWER during step 5.
-

Code blink out

(To find out which code is currently programmed)

Once you have Set-Up your ONE FOR ALL 4, you can blink back your Set-up Code for future reference.

Example: to blink out your television code:

-  Press the **TV** key once.
-  Press and hold down **MAGIC** until the ONE FOR ALL 4 red light blinks twice (the red light will blink once then twice).
-  Press **9 9 0**. The red light will blink twice.
-  For the first digit of your four-digit code, press **1** and count all the red blinks. If there are no blinks, the digit is „0“.
-  For the second digit of your four-digit code, press **2** and count all the red blinks. If there are no blinks, the digit is „0“.
-  For the third digit of your four-digit code, press **3** and count all the red blinks. If there are no blinks, the digit is „0“.
-  For the fourth digit of your four-digit code, press **4** and count all the red blinks. If there are no blinks, the digit is „0“. **Now you have your four-digit code.**

- To blink back the code for your other devices, press the appropriate device key during step 1.

Quick Code Reference

Make sure you write down the codes for your devices in the boxes below and in the battery compartment for future easy reference.

Device Type

1

.....

--	--	--	--

2

.....

--	--	--	--

3

.....

--	--	--	--

4

.....

--	--	--	--

Extra Features

Mode re-assignment

(Changing a device mode)

It is possible to change the mode of any device key. This is useful if you want to set up two of the same devices on the ONE FOR ALL 4. The code can be set up using "Direct code set up" (p. 6) or "Search method" (p. 7). To change a device key, see the three examples below.


Example 1 if you like to program a second TV on the DVD key.

Example 2 if you like to program a second TV on the SAT key.

Example 3 if you like to program a second VCR on the SAT key.

Example 1:

 To program a second Television on the DVD key (for example), you need to change the DVD key into a TV key, so press:



The DVD key has now become a second TV key.

Now enter the Set-Up code for your second TV by pressing:



Example 2:

To program a second Television on the SAT key (for example), you need to change the SAT key into a TV key, so press:



The SAT key has now become a second TV key.

Now enter the Set-Up code for your second TV by pressing:



Example 3:

To program a second Video Recorder on the SAT key (for example), you need to change the SAT key into a VCR key, so press:



The SAT key has now become a second VCR key.

Now enter the Set-Up code for your second VCR by pressing:



Resetting a Device key

Example: To reset the DVD key to its original mode, press:



Example: To reset the SAT key to its original mode, press:



(*) Press and hold down the MAGIC key until the red light (LED) blinks twice.

(**) The red light (LED) will blink once then twice.

Extra Features

Colour and Brightness

Depending on the functions of your original remote control, the ONE FOR ALL 4 may operate the colour and brightness settings of your television.

Colour (+) = Press and release **MAGIC** then hold **Volume (+)**
Colour (-) = Press and release **MAGIC** then hold **Volume (-)**

Brightness (+) = Press and release **MAGIC** then hold **Channel (+)**
Brightness (-) = Press and release **MAGIC** then hold **Channel (-)**

Volume Punch Through

You may be able to use some functions of your Television, Video recorder, DVD player, Satellite receiver or Cable converter at the same time. For example: if you are watching a program on your video recorder, you can adjust the volume (a TV function) without pressing the TV mode key on your ONE FOR ALL 4. The table below lists some of the possibilities.




Last Device Mode Key Pressed:

VCR
SAT
DVD

You Can Control:





TV volume up and down, mute
TV volume up and down, mute
TV volume up and down, mute

To punch through to TV volume while in the VCR, DVD or SAT mode:

-  Press and hold **MAGIC** until the red light blinks twice.
-  Press **9 9 3**.
-  Then press the **TV** key and the red light will blink twice.




To cancel the "Volume Punch Through" per mode:

(Example: to cancel the "Volume Punch Through" for the VCR mode)

-  Press **VCR** once.
-  Press and hold down the **MAGIC** key until the red light blinks twice.
-  Press **9 9 3**.
-  Then press the **Volume (-)** key and the red light will blink four times.

Example: being in VCR mode, you will be able to control VOL+/- or MUTE functions of your VCR (provided it has volume control).

To cancel the „Volume Punch Through“:

-  Press and hold **MAGIC** until the red light blinks twice.
-  Press **9 9 3**.
-  Press the **Volume (+)** key and the red light will blink four times.

Trouble Shooting

Problem & Solution

Problem:	Solution:
Your brand is not listed in the code section?	Try the search method on page 7.
The ONE FOR ALL 4 does not operate your device(s)?	A) Try all the codes listed for your brand. B) Try the search method on page 7.
The ONE FOR ALL 4 is not performing commands properly?	You may be using the wrong code. Try repeating the Direct Set-Up using another code listed under your brand or start the search method over again to locate the proper code.
Problems changing channels?	Enter the program number exactly as you would on your original remote.
Video not recording?	As a safety feature on your ONE FOR ALL 4, you must press the Record key twice.
The ONE FOR ALL 4 does not respond after pressing a key?	Make sure you are using new batteries and are aiming the ONE FOR ALL 4 at your device.
The red light (LED) does not blink when you press a key?	Replace batteries with 2 fresh, new "AA/LR6" alkaline batteries.

Televisions

Fernseher

Téléviseurs

Televisores

Televisões

Televisori

Televisies

A.R. Systems	0037	0556							
Accent	0037	0556							
Accuphase	0556	1909							
Acec	0012								
Adcom	0625								
Admiral	0093	0418	0087	0163	0264				
Adyson	0217	0216							
AEA	0037	0556							
Agashi	0216	0264	0217						
AGB	0516								
Agef	0087								
Aiko	0009	0037	0556	0216	0371	0035	0433		
	0072	0361	0191	0264	0217				
Aim	0037	0072	0412	0556					
Aiwa	0701								
Akai	0361	0208	0371	0037	0433	0191	0035		
	0009	0072	0218	0714	0163	0516	0715		
	0602	0556	0548	0581	0480	0217	0631		
	0216	0264	0178	0377	0606	1037			
Akiba	0218	0282	0455	0037	0556	0294			
Akito	0037	0556							
Akura	0037	0556	0668	0412	0493	0009	0218		
	0282	0264							
Alaron	0216								
Alba	0009	0418	0370	0235	0371	0668	0037		
	0556	1037	0355	0218	0216	0247	0163		
	0487	0581	0036	0579					
Alkos	0035								
Allorgan	0206	0294	0217						
Allstar	0037	0556							
Ambassador	0177								
Amplivision	0217	0370	0320						
Amstrad	0177	0009	0516	0264	0371	0218	0037		
	0556	0433	0412	1037	0648	0581			
Anam	0037	0556	0009						
Anam									
National	0037	0556	0650						
Anglo	0009	0264							
Anitech	0009	0264	0037	0556	0282	0102			
Ansonic	0370	0037	0556	0009	0668	0374	0163		
	0292	0102	0411	0259	0247	0012	0104		
Apollo	0473								
Arc en Ciel	0109								
Arcam	0216	0217							
Ardem	0486	0714	0037	0556					
Aristona	0556	0037	0012						
Arthur Martin	0163								
ASA	0105	0346	0104	0087					
Asberg	0037	0556	0102						
Asora	0009								
Astra	0037	0556							
Asuka	0218	0217	0216	0264	0282				
Atlantic	0037	0556	0216	0206	0320	0259			
Atori	0009								
Auchan	0163								
Audiosonic	0009	0037	0374	0556	0109	0714	0715		
	0217	0370	0337	0264	0218	0486			
Audioton	0217	0486	0370	0264					
Autovox	0087	0206	0349	0217	0247				

AWA	0011	0036	0009	0157	0374	0412	0037		
	0556	0216	0606	0217	0108	0264			
Axent	0009								
Axxon	0714								
Baird	0109	0193	0343	0190	0072	0073	0217		
	0208								
Bang & Olufsen	0565	0087							
Barco	0380	0163							
Basic Line	0374	0037	0163	0668	0556	0009	0218		
	0282	0217	0455						
Bastide	0217								
Baur	0195	0512	0037	0556	0191	0361	0349		
	1505								
Bazin	0217								
Beaumont	0178								
Beko	0486	0035	0714	0370	0037	0556	0606		
	0715								
Beon	0037	0556	0418						
Berthen	0668								
Best	0337	0370							
Bestar	0037	0556	0370	0374					
Bestar- Daewoo	0374								
Binatone	0217								
Black Diamond	1037	0556							
Black Panther	0102								
Black Star	0247								
Blacktron	0282								
Blackway	0282	0218							
Blaupunkt	0191	0195	0455	0170					
Blue Sky	0037	0714	1037	0487	0668	0715	1909		
	0556	0218	0282	0455					
Blue Star	0282								
Bondstec	0247								
Boots	0217	0009							
Bosch	0320								
BPL	0037	0556	0282						
Brandt	0625	0109	0287	0335	0471	0343			
Brandt Electronique	0287	0335							
Brinkmann	0037	0556	0668	0519	0418	0486			
Brionvega	0037	0556	0087						
Britannia	0216	0217							
Brother	0264								
Bruns	0087								
BSR	0163	0294	0361						
BTC	0218								
Bush	0668	0218	0163	0349	0009	0036	0037		
	0371	0235	0282	0355	0374	0519	0264		
	0361	1037	0487	0208	0217	0698	0581		
	0294	0556	0714						
Canton	0218								
Capsonic	0264								
Carad	0610	0037	0556	0668					
Carena	0455	0037	0556						
Carrefour	0036	0037	0556						
Carver	0170								
Cascade	0009	0037	0556						
Casio	0037	0556	0163	0349					
Cathay	0037	0556							
CCE	0037	0556	0217						
Centrum	1037								
Centurion	0037	0556							
Century	0087	0247	0238						
CGE	0418	0247	0370	0163					
Cimline	0009	0235	0218						
City	0009								
Clarivox	0418	0037	0556	0102					
Clatronic	0037	0370	0371	0714	0218	0264	0556		
	0217	0247	0009	0102	0320	0579	0648		
Clayton	1037								
CMS	0216								
CMS hightec	0217								
Concorde	0009								

Condor 0320 0037 0556 0370 0216 0009 0282
 0102 0247 0418 0411 0163 0264
 Conrad 0037 0556
 Contec 0216 0009 0157 0011 0036 0264 0037
 0556
 Continental
 Edison 0109 0287 0487
 Cosmel 0009 0337 0037 0556
 Crosley 0087 0247 0163
 Crown 0009 0370 0486 0037 0556 0487 0714
 0606 0715 0418 0579 0208 0339
 CS Electronics 0216 0218 0247
 CTC 0247
 Curtis Mathes 0093 0166
 Cybertron 0218
 D-Vision 0037 0556
 Daewoo 0634 0374 1909 0499 0037 0556 0009
 0216 0218 0217 1137
 Dainichi 0218 0216
 Dansai 0037 0556 0264 0035 0216 0009 0036
 0217
 Dansette 0412
 Dantax 0370 0486 0714 0606 0715
 Datsura 0208
 Dawa 0037 0556
 Daytron 0009 0374 0037 0556
 de Graaf 0208 0044 0163 0548
 Decca 0072 0516 0037 0556 0217 1137
 Deltron 0037 0556 0374 0218
 Denko 0264
 Denver 0037 0556 0606
 DER 0193 0190
 Desmet 0320 0037 0556 0009 0087
 Diamant 0037 0556
 Diamond 0264 0698 0696
 Digatron 0037 0556
 Digiline 0037 0556
 Digator 0037 0556
 Digivision 0361
 DiK 0037 0556
 Dixi 0009 0037 0556 0247 0217 0087
 Domeos 0668
 Doric 0349
 DTS 0009
 Dual 0349 0217 0343 0519 0037 0556 0259
 0163
 Dumont 0087 0104 0102 0217 0072
 Dunai 0163
 Dux 0037 0556 0012
 Dynatron 0037 0556 0012
 E-Elite 0218
 Edison-
 Minerva 0487
 Elbe 0435 0238 0259 0292 0370 0163 0037
 0556 0218 0191 0411 0610 0217 0516
 0361
 Elbe-Sharp 0516
 Elicit 0087 0247 0516 0102 0163
 Elekta 0009 0037 0556 0264 0282
 ELG 0037 0556
 Elin 0216 0037 0556 0105 0104 0548 0361
 0349 0163 0009
 Elite 0218 0037 0556 0320
 Elman 0102
 Elta 0009 0264 0216
 Emco 0247
 Emerson 0177 0178 0087 0247 0037 0556 0371
 0282 0320 0361 1909 0486 0370 0163
 0321
 Emperor 0282
 Enzer 0696
 Erres 0037 0556 0012
 ESC 0037 0556 0217
 Estèle 0163
 Etron 0037 0556 0009 0163
 Eurofeel 0264 0217
 Euroman 0216 0264 0037 0556 0217 0370

Europa 0037 0556
 Europhon 0037 0516 0102 0163 0217 0556 0247
 0216
 Excel 0037 0556
 Expert 0206 0259 0163
 Exquisit 0037 0556 0247
 Fagor 0037 0556
 Family Life 0037 0556
 Fenner 0374 0009
 Ferguson 0073 0625 0287 0190 0335 0238 0193
 0109 0560 0037 0556 0035 0343 0104
 0108 0361 0471
 Fidelity 0163 0512 0037 0556 0371 0412 0193
 0216 0264
 Filsai 0217
 Finlandia 0208 0346 0548 0361 0163 0072 0287
 0343 0045
 Finlux 0105 0104 0037 0556 0714 0346 0217
 0072 0163 0516 0715 0087 0102 0411
 0631 0492 0480 0473 0418 0606
 Firstline 0037 0556 0374 0668 0714 0163 0009
 0294 0321 0216 0247 1909 0102 0217
 0411 0349 0238 0072 0235 0208 0361
 Fisher 0104 0217 0036 0208 0370 0045 0087
 0157 0361 0163 0349 0072
 Flint 0037 0556 0610 0072 0218 0455 0264
 FNR 0102
 Forgestone 0193
 Formenti 0163 0037 0556 0486 0216 0087 0320
 Formenti-
 Phoenix 0216 0320
 Fortress 0093 0087
 Fraba 0037 0556 0370
 Friac 0009 0037 0556 0102 0370 0499 0655
 Frontech 0247 0264 0349 0217 0009 0163
 Fujitsu 0206 0072 0102 0217 0163 0009 0037
 0556 0361 0259
 Fujitsu
 General 0009 0217 0206 0163
 Funai 0668 0264 0294 0412
 Future 0037 0556
 Galaxi 0102 0037 0556 0361 0163
 Galaxis 0370 0418 0037 0102 0556
 Galeria 0009
 GBC 0163 0009 0374 0218
 GE 0343 0178 0282 0560 0287 0109 0335
 Geant Casino 0163
 GEC 0163 0361 0349 0037 0516 0556 0072
 0217
 Geloso 0247 0009 0163 0374
 General 0109 0287 0471
 General
 Electric 0343 0287
 General
 Technic 0009
 Genesis 0009
 Genexxa 0218 0037 0556 0412 0493 0163 0009
 Giant 0217
 Goldfunk 0668
 Goldhand 0216
 Goldline 0337
 GoldStar 0037 0009 0370 0377 0217 0178 0247
 0216 0556 0163 0361 0109 0606 0044
 Gooding 0487
 Goodmans 0634 0374 0037 0499 0556 1037 0668
 1909 0036 0264 0072 0516 0009 0487
 0371 0343 0235 0035 0480 0560 0217
 0335 0218
 Gorenje 0370
 GPM 0218
 Gradiente 0170 0037 0556
 Graetz 0361 0371 0163 0037 0339 0556
 Gran Prix 0648
 Granada 0037 0556 0226 0356 0012 0045 0072
 0108 0208 0217 0036 0339 0516 0473
 0335 0560 0163 0225 0343 0548

Grandin	0037 0556 0009 0163 0610 0714 0715	ITT Nokia	0361 0548 0163 0473 0480 0349 0346
	0668 0374 0320 0282 0218 0455 0579		0208 0339 0606 0610 0631
Gronic	0102 0217 0163	ITV	0264 0037 0556 0247 0374
Grundig	0195 0191 0487 0037 0556 0587 0009	Jean	0036
	0036 0443 0370	JEC	0035
Haier	0698 0264	JMB	0037 0499 0634 0374 0556 0443
Halifax	0264 0216 0217	Jocel	0712
Hampton	0216 0217	Jubilee	0556
Hanimex	0294 0218	JVC	0653 0190 0036 0193 0371 0218 0606
Hanseatic	0037 0556 0499 0519 0349 0163 0361		0418
	0292 0282 0320 0634 0370 0009 0294	Kaisui	0218 0282 0037 0556 0216 0455 0217
	0217 0087 0377		0009
Hantarex	0009 0037 0556 0102 0516	Kamp	0216
Hantor	0037 0556	Kapsch	0163 0361 0206 0259 0104
Harwood	0009 0412 0037 0556	Karcher	0037 0556 0370 0610 0163 0282 0102
Hauppauge	0037 0556		0264
HCM	0009 0412 0037 0556 0217 0218 0418	Kathrein	0556 0037
	0282 0264	Kawa	0371
Hedzon	0556 0037	Kawasho	0216
Hema	0217 0009	KB Aristocrat	0163
Hemmermann	0349	Kendo	0610 0037 0556 0163 0519 0512 0370
Hifivox	0109		0377 0411 0102 0235 0247
Higashi	0216	Kennedy	0163 0206 0435
Highline	0264 0037 0556	Kenwood	0105
Hikona	0218	Kingsley	0216
Hinari	0208 0037 0556 0009 0218 0036 0163	Kiton	0556 0037
	0355 0443 0487 0235 0294 0264	Kneissel	0037 0370 0610 0411 0374 0499 0556
Hisawa	0282 0218 0455 0610		0435 0259 0292 0238
Hit	0087	Kolster	0037 0556 0102 0349
Hitachi	0225 1225 0349 0036 0356 0044 0108	Konka	0037 0556 0371 0714 0418 0218
	0473 0163 0343 0578 0217 0194 0516	Kontakt	0487
	0072 0481 0499 0037 0556 0109 0548	Korpel	0037 0556
	0719 0634 0178 1137 0105 0492 0361	Korting	0087 0370 0320
	0512 0480	Kosmos	0037 0556
Hitachi Fujian	0108 0225	Kotron	0412 0264
Hitsu	0009 0455 0218 0610	Koyoda	0009
HMV	0087	Kraking	0238
Hornophone	0037 0556 0012	Kriesler	0012
Hoshai	0218 0455	KTV	0217
HuanYu	0374 0216	Kuba	0349 0163
Hygashi	0217 0216	Kuba	
Hyper	0009 0216 0217 0247	Electronic	0349 0163
Hypersonic	0361	Kyoshu	0412 0418 0264
Hypson	0037 0556 0714 0715 0264 0217 0282	Kyoto	0163 0216 0217
	0455 0238	LaSAT	0486 0370
Hyundai	0037 0556	Leader	0009
Iberia	0037 0556	Lecson	0037 0556
ICE	0264 0037 0371 0009 0556 0218 0217	Lemair	0411
	0216	Lenco	0037 0009 0163 0374 0556 0104
Ices	0218 0216	Lenoir	0009
Icos	0012	Lesa	0247
Ict	0037 1137 0556	Levis Austria	0037 0556
Imperial	0037 0163 0370 0556 0411 0361 0349	Leyco	0264 0072 0037 0556 0294 0579
	0418 0247	LG	0037 0370 0009 0377 0217 0556 0714
Indiana	0037 0556		0247 0216 0163 0178 0361 0606 0109
Ingelen	0487 0610 0714 0163 0361	Liesen & Tter	0037 0556
Ingersoll	0009	Liesenkotter	0037 0012 0556
Inno Hit	0009 0072 0037 0556 0218 0217 0516	Lifetec	0037 0009 0519 0374 0668 0512 0655
	0247 0102 0282		1037 1137 0556 0218 0264
Innovation	0519 0037 0556	Lloyd's	0009
Interactive	0037 0556 0012 0087 0512 0163 0361	Loewe	0512 0037 0556 0655 0370 0633 0087
	0370 0109		0292
Interbuy	0009 0037 0264 0247 0512 0556	Logik	0011 0698 0037 0193 0556 0371
Interfunk	0037 0556 0012 0087 0512 0163 0361	Logix	0668
	0370 0109 0349 0247	Luma	0037 0206 0163 0411 0556 0374 0009
Internal	0037 0556 0499 0374 1909		0259
International	0216	Lumatron	0206 0037 0556 0163 0259 0361 0217
Intervision	0282 0217 0455 0037 0371 0377 0519		0264 0073
	0486 0370 0487 0218 0102 0163 0264	Lux May	0037 0009 0556 0581
	0247 0009 0556	Luxman	0579
Irradio	0009 0037 0556 0218 0247 0371	Luxor	0194 0480 0492 0349 0361 0208 0356
Isukai	0218 0037 0556 0282 0455		0548 0163 0346 0473 0217 0631
ITC	0217 0320	LXI	0178
ITS	0037 0371 0218 0282 0264 0216 0009	Madison	0037 0556
	0556	Magnadyne	0087 0247 0516 0102 0163
ITT	0163 0480 0349 0361 0473 0548 0193	Magnafon	0516 0102 0216 0073
	0346 0339 0208 0610	Magnavox	0037 0556 0036

Magnum 0648 0714 0037 0556 0715
Mandor 0264
Manesth 0037 0556 0235 0217 0264 0320 0035
0294 0163
Manhattan 0037 0556 0668 1037 0163
Marantz 0037 0556 0412
Marelli 0087
Mark 0037 0556 0217 0216 0374 0009 0714
0715
Masuda 0218 0371 0009 0264 0037 0217 0556
Matsui 0037 0556 0487 0009 0235 0177 0011
0355 0072 0036 0217 0294 0371 0433
0443 0579 0455 0163 0349 0516 0035
0208 0045 0195 0191 0335
Matsushita 0650
Matsuyama 0587
Mediator 0037 0556 0012
Medion 0037 0668 0519 0512 0556 1137 0698
Megas 0610
Megatron 0178
Meletronic 0346 0037 0512 0109 0343 0247 0105
0104 0374 0009 0217 0480 0492 0216
0411 0349 0163 0287 0556 0634 0361
0191 0195
Memorex 0009 0178
Memphis 0337 0072 0009
Mercury 0037 0009 0556
Metz 0195 0447 0191 0367 0037 0087 0556
0587 0668 1037
MGA 0178 0037 0556 0218 0104
Micromaxx 0037 0556 0668 1037
Minato 0037 0556
Minerva 0487 0195 0191 0516 0108
Minoka 0412 0037 0556
Mistral
Electronics 0193
Mitsubishi 0108 0093 0512 0037 0178 0087 0036
0193 0556 0208
Mitsuri
General 0163
Mivar 0292 0370 0216 0609 0516 0217
Monaco 0009
Morgan's 0037 0556
Motorola 0093
MTC 0370 0349 0512 0163 0216 0361
Multi-
broadcast 0193
Multistandard 0102
Multitec 0037 0556 0486 0668 1037
Multitech 0349 0009 0486 0037 0370 0556 0217
0216 0247 0102 0264
Murphy 0104 0216 0072 0163
Musikland 0037 0218 0247 0556
Myryad 0556 0037
NAD 0166 0178 0361 0163
Naiko 0037 0606 0556
Nakimura 0374 0037 0556
Naonis 0163
NAT 0226
National 0226
NEC 0170 0036 0320 0455 0009 0374 0217
0037 0556 0011 0499
Neckermann 0037 0191 0370 1505 0556 0163 0418
0349 0087 0247 0217 0411 0320 0512
NEI 0037 0556 0337 0371 0163
Nesco 0247
Netsat 0037 0556
Network 0337
Neufunk 0037 0009 0556 0610 0218 0282 0714
New Tech 0037 0009 0556 0343 0217
New World 0218
Nicomagic 0216
Nikkai 0072 0218 0037 0556 0217 0264 0035
0337 0216 0009 0036
Nikko 0178
Nobliko 0102 0216
Nogamatic 0109

Nokia 0361 0163 0480 0349 0548 0492 0473
0339 0208 0374 0631 0606 0346 0320
0610 0109
Nordic 0217
Nordmende 0109 0714 0287 0343 0560 0195 0037
0556 0335 0163 0471
Norfolk 0163
Normerel 0037 0556
Novak 0012
Novatronic 0037 0105 0374 0556
Nurnberg 0163 0361
Oceanic 0163 0361 0294 0208 0473 0548 0480
Odeon 0264
Okano 0370 0037 0556 0264 0072 0009
Omega 0264
Onwa 0371 0602 0218 0433 0581 0102
Opera 0037 0556
Optimus 0650 0166
Optonica 0093
Orbit 0037 0556
Orion 0037 0355 0556 0655 0714 0235 0294
0177 0320 0011 0009 0321 0443 0102
0264 0412 0516
Orline 0037 0218 0556
Ormond 0668 1037 0037 0556
Orsowe 0516
Osaki 0072 0218 0217 0264 0493 0037 0412
0374 0355 0556
Osio 0037 0556
Oso 0218
Osume 0157 0072 0036 0218 0037 0556
Otto Versand 1505 0036 0093 0512 0037 0556 0195
0349 0191 0361 0235 0109 0294 0226
0247 0320 0217 0009 0282 0343 0516
0519
Pacific 0037 0556 1137
Pael 0216
Palladium 0370 0037 0191 1505 0418 0556 0247
0349 0087 0163 0217 0411 0655 0519
Palsonic 0264 0412 0037 0217 0377 0218 0698
0556
Panama 0009 0217 0264 0216 0037 0556 0247
Panasonic 0650 0226 0361 0367 0516 0037 0556
0163 0548
Panavision 0037 0411 0556
Pathe Cinema 0163 0238 0216 0320 0292 0349 0370
Pathe Marconi 0109
Pausa 0009
Perdio 0072 0320 0163 0037 0216 0282 0556
Perfekt 0037 0556
Philco 0087 0418 0247 0163 0370 0037 0556
0519
Philex 0193 0163
Philharmonic 0217
Philips 0556 0037 0238 0012 0191 0087 0193
0343 0374
Phoenix 0037 0556 0370 0486 0163 0087 0072
0216 0320
Phonola 0037 0556 0012 0087 0193 0216
Pilot 0556 0037 0712
Pioneer 0166 0037 0556 0370 0343 0361 0109
0163 0287 0486 0512
Pionier 0370 0486
Plantron 0037 0556 0264 0009
Playsonic 0217 0714
Policom 0102 0109 0206 0238 0361 0163 0087
Polytron 0697
Poppy 0009
Portland 0374 1909
Powerpoint 0487
Prandoni-
Prince 0247 0516 0361
Precision 0217
Premier 0009
Prima 0009 0264 0412
Prinz 0072 0349 0361 0194
Profex 0009 0163 0361

Profi 0009
 Profitronic 0037 0556 0102
 Proline 0037 0556 0625 0634 0411 0012 0321
 0072
 Prosonic 0037 0556 0370 0374 0371 0668 0714
 0216 0579
 Protech 0037 0556 0217 0009 0247 0349 0102
 0264 0418 0337 0668 0282 0163 0486
 Proton 0178
 Provision 0499 0037 0556 1037
 Pye 0037 0556 0012 0087 0374 0349 0412
 Pymi 0009
 Quadral 0218
 Quasar 0247 0650 0009
 Quelle 0037 1505 0011 0109 0512 0349 0191
 0361 0036 0217 0247 0104 0105 0668
 0556 0157 0195 0264 0294 0346 0009
 Questa 0036
 R-Line 0037 0556 0163
 Radialva 0109 0218 0163 0037 0556 0287
 Radiola 0037 0556 0012 0217
 Radiomarelli 0087 0516 0247 0037 0556
 RadioShack 0037 0556 0178
 Radiotone 0009 0037 0556 0370 0579 0418 0412
 0648 0668 0264
 Rank Arena 0036 0157
 RCA 0625 0093 0560 0335 0343
 Realistic 0178
 Recor 0037 0556
 Rectiligne 0037 0556
 Rediffusion 0361 0548 0036 0346
 Redstar 0037 0556
 Reflex 0037 0556 1037 0668
 Reoc 0714 0634 1909
 Revox 0037 0556 0370
 Rex 0206 0411 0247 0163 0259 0264
 RFT 0087 0292 0370 0072 0264 0037 0556
 Rhapsody 0216
 Ricoh 0037 0556
 Roadstar 0009 0418 0037 1037 0556 0218 0264
 0282
 Robotron 0087
 Rodex 0037 0556
 Rowa 0264 0698 0217 0712
 Royal Lux 0370 0412 0335
 Rukopir 0556 0037
 Saba 0625 0287 0087 0163 0109 0516 0343
 0361 0498 0335 0548 0471 0560
 Saccs 0238
 Sagem 0610 0455 0282
 Saisho 0235 0516 0177 0009 0011 0217 0163
 0264
 Saivod 0037 0556
 Sakai 0163
 Salora 0194 0349 0163 0356 0361 0516 0548
 0339 0208
 Salsa 0335
 Sambers 0516 0102
 Samsung 0618 0587 0037 0178 0556 0009 0217
 0370 0264 0216 0644 0072 0208 0519
 0163
 Sandra 0216 0217
 Sanela 0238
 Sansui 0037 0556 0371 0655 0602 0455
 Santon 0009
 Sanyo 0208 0157 0292 0036 0011 0370 0339
 0072 0216 0217 0104 0045 0009 0163
 0037 0108 0556 0486
 Save 0037 0556
 SBR 0037 0556 0012 0193
 Schaub
 Lorenz 0349 0548 0714 0606 0361 0486 0374
 Schneider 1137 0037 0556 0519 0012 0349 0259
 0343 0217 0247 0371 0361 0218 0668
 1037 0163 0648 0714 1909
 Scotland 0163
 Scott 0178

Sears 0178
 SEG 0037 0556 1037 0668 0217 0487 0009
 0349 0163 0264 0634 0036 0102 0247
 0216 0218 1909
 SEI 0087 0102 1505 0163 0516 0349 0294
 0206 0037 0556 0177
 Sei-Sinudyne 0102 0206 0294 0516 1505 0037 0556
 0087
 Seleco 0206 0259 0163 0411 0371 0036 0264
 0346
 Sencora 0009
 Sentra 0035 0218 0009 0349
 Serino 0610 0455 0216 0093
 Sharp 0093 1193 0157 0036 0294 0653 0193
 0516
 Shintoshi 0037 0556
 Shivaki 0037 0556 0443 0374
 Shorai 0294
 Siarem 0163 0087 0102 0516
 Siemens 0191 0195 0157 0037 0556 0361
 Siera 0037 0556 0012
 Siesta 0370
 Silva 0037 0556 0216 0361 0648
 Silver 0036 0037 0455 0361 0556 0715 0163
 Singer 0009 0087 0037 0556 0102 0247 0435
 0335 0163
 Sinudyne 0177 0087 0235 0102 0294 0163 0361
 0516 0349 1505 0206 0037 0556
 Skantic 0356
 Sky 0037 0556
 Skymaster 0105
 Skysonic 0696
 SLX 0668
 Smaragd 0487
 Sogera 0320
 Solavox 0361 0072 0163 0548 0037 0556
 Sonawa 0218
 Soniko 0037 0556
 Sonitron 0208 0370 0339 0217
 Sonneclair 0037 0556
 Sonoko 0037 0556 0009 0264 0282 0217
 Sonolor 0208 0163 1505 0548 0361 0282
 Sontec 0037 0556 0370 0294 0009
 Sony 1505 1651 0011 0036 0102 0037 0556
 Sound &
 Vision 0102 0218 0374 0037 0556
 Soundesign 0178
 Soundwave 0037 0556 0320 0418
 Spectra 0009
 Ssangyong 0009
 Staksonic 0009
 Standard 0037 0556 1037 0218 0009 0217 0320
 0374
 Starlite 0009 0163 0037 0556 0264 0412
 Stenway 0282 0218
 Stern 0206 0259 0163 0264 0411 0435
 Strato 0037 0556 0264 0009
 Stylandia 0217
 Sunic Line 0037 0556
 Sunkai 0294 0355 0321 0455 0218 0235 0610
 0037 0556 0487
 Sunstar 0371 0037 0556 0009 0579 0264
 Sunwood 0037 0556 0009
 Superla 0516 0216 0217
 SuperTech 0009 0037 0556 0216 0218
 Supra 0374 0009
 Susumu 0335 0218 0287
 Sutron 0009
 Swissline 0247
 Sydney 0216 0217
 Sysline 0037 0556
 Sytong 0216
 T+A 0447
 Tandberg 0367 0411 0109 0337 0361 0163
 Tandy 0218 0072 0217 0247 0093 0163
 Tashiko 0036 0217 0170 0216 0163
 Tatung 0037 0556 0072 0516 0217 0011

TCM	0714
Teac	0698 0512 0037 1037 0556 0712 0668 0455 0217 0264 1909 0178 0009 0412 0349 0282 0418
TEC	0217 0009 0247 0471 0335 0337 0259 0037 0556 0361 0163
Tech Line	0037 0556 0668
Technica	0218
Technema	0320
TechniSat	0655 0037 0556 0163
Tecnimagen	0556
Tedelex	0217 0606 0009 0208 0587 0037 0556
Teiron	0009
Teleavia	0109 0287 0343
Telecor	0037 0163 0556 0218 0217 0259
Telefunken	0109 0498 0471 0287 0335 0073 0343 0037 0556 0486 0625
Telefusion	0037 0556
Telegazi	0037 0163 0556 0259 0218 0264
Telemeister	0320 0037 0556
Telesonic	0037 0556
Telestar	0037 0556 0579 0412
Teletech	0037 0556 0668 0009 0247 0337
Teleton	0217 0206 0163 0349 0259 0036
Televideon	0320 0163 0216
Television	0037 0556
Telexa	0102
Temco	0294
Tempest	0009 0037 0556
Tennessee	0037 0556
Tensai	0104 0218 0037 0556 0217 0294 0320 0009 0105 0374 0371 0377 0247 0715 0163
Tenson	0320 0009
Tevion	0519 0037 0556 0648 0668 1137
Textet	0217 0374 0009 0216 0218
Thomson	0625 0560 0287 0109 0471 0335 0343 0037 0556 0349
Thorn	0193 0073 0190 0238 0499 0037 0104 0556 0335 0512 0374 0035 0108 0109 0225 0343 0361 1505 0072
Thorn- Ferguson	0104 0108 0109 0190 0238 0193 0361 0335 0499 0073 0035
TMK	0178 0177
Tokai	0072 0037 0556 0337 0163 0668 0217 0374 0009
Tokyo	0216 0035
Tomashi	0282 0218
Toshiba	0035 0508 0036 0102 1508 0217 0109 0718 0195 0191 0618
Towada	0349 0102 0217
Toyoda	0009 0371
Trakton	0264
Trans	
Continens	0668 0217 0037 0556
Transonic	0037 0556 0455 0587 0512 0264 0698 0712
Transtec	0216
Triad	0037 0556
Trical	0157
Trident	0516 0217
Tristar	0264 0218 0193
Triumph	0177 0516 0346 0556 0037
Tsoschi	0282
TVTEXT 95	0556
Uher	0037 0556 0206 0320 0374 0418 0486 0370 0259
Ultravox	0087 0102 0374 0247 0216 0163 0037 0556
Unic Line	0037 0556 0473 0455 0349
United	0037 0556 0714 0715
Universum	0346 0105 0195 0473 0361 0247 0492 0480 0370 0418 0011 0512 0294 0036 0157 0163 0264 0104 0037 0556 0411 1505 0668 0349 0217 0109 0337 0177 0631 0009

Univox	0037 0556 0337 0087 0163 0238
Utax	0163
Vestel	0037 0163 0217 0556 0668 1037
Vexa	0009 0037 0556
Videologic	0218
Videologique	0216 0218 0217
Videosat	0247
VideoSystem	0037 0556
Videotechnic	0216 0320 0217 0374
Videoton	0356 0163
Vidikron	0102
Vidtech	0036 0178
Viper	0337
Visiola	0216
Vision	0037 0556 0320 0217
Vistar	0206 0361
Vortec	0037 0556
Voxson	0087 0037 0556 0418 0163
Waltham	0217 0668 0356 0418 0287 0037 0556 0109
Watson	0037 0320 0556 0163 0218 0579 0519 0009 0668 1037
Watt Radio	0102 0349 0163 0216
Wega	0037 0556 0036 0087
Wegavox	0009 0037 0556
Weltblick	0037 0556 0320 0217
Weston	0037 0556
Wharfedale	0037 0519 0556
White Westing- house	0320 0216 0037 0556 0337 1909
Windsor	0668
Windstar	0282 0337
Windy Sam	0556
Wintel	0714
Xrypton	0037 0556
Yamishi	0282 0455 0218 0037 0217 0556
Yokan	0037 0556
Yoko	0217 0037 0556 0218 0264 0009 0370 0339 0216 0247
Yorx	0218
Zanussi	0206 0217
Zenith	1909
Zenor	0339

Video Recorders

Videorecorder

Magnétoscopes

Vídeos

Vídeo Gravadores

Videoregistratori

Videorecorders

Accuphase	0637
Adyson	0072
Aiwa	0307 0000 0348 0352 0037 0041
Akai	0106 0315 0041 0352 0240
Akashi	0072
Akiba	0072
Akura	0072 0041
Alba	0278 0072 0352 0000 0315 0348 0081
Allorgan	0240
Allstar	0081
Amstrad	0000 0278 0072
Anitech	0072
Ansonic	0000
Aristona	0081
ASA	0037 0081
Asuka	0072 0037 0081 0000 0038
Audiosonic	0278

AVP 0352 0000
 AWA 0037 0278 0642 0043
 Baird 0106 0278 0104 0041 0000
 Bang & Olufsen 0499
 Basic Line 0278 0072
 Bestar 0278
 Black Diamond 0642 0278
 Black Panther 0278
 Blaupunkt 1562 0226 0081
 Blue Sky 0037 0348 0072 0352 0278 0000
 Bondstec 0072
 Brandt 0041 0320 0321
 Brandt Electronique 0041
 Brinkmann 0348
 Bush 0072 0278 0315 0352 0000 0348 0081
 Carena 0081
 Carrefour 0045
 Casio 0000
 Cathay 0278
 CGE 0041 0000
 Cimline 0072
 Clatronic 0072 0000
 Combitech 0352
 Condor 0278
 Crown 0278 0072
 Cyrus 0081
 Daewoo 0278 0642 0637 0348 0352 0045
 Dansai 0072 0278
 Daytron 0278
 de Graaf 0042 0081 0104 0048
 Decca 0000 0041 0081 0067 0348
 Deitron 0278
 Denko 0072
 Diamant 0037
 Dual 0041 0081 0278 0000
 Dumont 0000 0081 0104
 Elbe 0278 0038
 Elcatech 0072
 Elin 0240
 Elsay 0072
 Elta 0072 0278
 Emerson 0072 0045 0000
 ESC 0278 0240
 Etzuko 0072
 Ferguson 0041 0320 0321 0000 0278
 Fidelity 0000 0072 0240
 Finlandia 0104 0081 0042 0000 0048 0384
 Finlux 0000 0081 0104 0042
 Firstline 0072 0348 0043 0037 0045 0042 0278
 Fisher 0047 0104 0038
 Frontech 0072
 Fujitsu 0000
 Funai 0000
 Galaxi 0000
 Galaxis 0278
 GE 0320
 GEC 0081
 General Technic 0348
 Genexxa 0104
 Goldhand 0072
 GoldStar 0037 0000
 Goodmans 0000 0072 0240 0278 0037 0081 0348
 0637 0352 0642
 Graetz 0041 0104 0240
 Granada 0104 0048 0081 0240 0037 0226 0042
 0000
 Grandin 0072 0037 0000 0278
 Grundig 0081 0347 0226 0320 0348 0072
 Haaz 0348
 Hanimex 0352
 Hanseatic 0037 0278 0081 0038
 Harwood 0072
 HCM 0072

Hinari 0072 0352 0041 0278 0240
 Hisawa 0352
 Hischito 0045
 Hitachi 0042 0041 0000 0240 0081 0104 0384
 Hornyphone 0081
 Hypson 0072 0278 0352
 Imperial 0000 0240
 Ingersoll 0240
 Inno Hit 0240 0278 0072
 Interbuy 0037 0072
 Interfunk 0081 0104
 Internal 0278 0637
 International 0278 0037
 Intervention 0000 0278 0037 0348
 Irradio 0072 0037 0081
 ITT 0106 0041 0384 0104 0240
 ITT Nokia 0048
 ITV 0278 0037
 JMB 0352
 Joyce 0000
 JVC 0041 0067 0384
 Kaisui 0072
 Karcher 0278
 Kendo 0106 0315 0348 0072 0037
 Kenwood 0041 0038
 KIC 0000
 Kimari 0047
 Kneissel 0352 0348 0037
 Kolster 0348
 Korpel 0072
 Kuba 0047
 Kuba Electronic 0047
 Kuwa 0226
 Kyoto 0072
 Lenco 0278
 Leyco 0072
 LG 0037 0000 0278
 Lifetec 0348
 Loewe 0081 1562 0226 0037
 Logik 0240 0072 0106
 Lumatron 0278
 Luxor 0106 0043 0072 0104 0047 0048
 Magnavox 0081
 Manesth 0072 0045 0081
 Marantz 0081 0038
 Mark 0278
 Matsui 0348 0037 0240 0352 0000
 Mediator 0081
 Medion 0348 0352
 Melectronic 0000 0037 0038
 Memorex 0104 0000 0037 0048 0047
 Memphis 0072
 Metz 1562 0347 0081 0226 0037
 Micormay 0348
 Migros 0000
 Mitsubishi 0043 0067 0081
 Multitec 0037
 Multitech 0000 0072 0104
 Murphy 0000
 Myryad 0081
 NAD 0104
 National 1562 0226
 NEC 0041 0038 0067 0104 0037
 Neckermann 0041 0081
 Nesco 0072 0000 0352
 Nikkai 0072 0278
 Nokia 0104 0106 0315 0041 0278 0240 0048
 0042 0081
 Nordmende 0041 0384 0320 0321 0067
 NU-TEC 0348
 Oceanic 0000 0048 0106 0081 0104 0041
 Okano 0315 0348 0072 0278
 Orbit 0072
 Orion 0352 0348
 Orson 0000
 Osaki 0000 0037 0072

VCR

VCR

Osume	0072
Otto Versand	0081
Palladium	0072 0315 0037 0041 0240 0348 0432
Palsonic	0072 0000
Panasonic	1562 0226
Pathe Cinema	0043
Pathe	
Marconi	0041
Perdio	0000
Philco	0038 0072
Phillips	0081 0384
Phoenix	0278
Phonola	0081
Pioneer	0067 0081 0042
Portland	0278 0637
Prinz	0000
Profitronic	0081 0240
Proline	0000 0320 0321
Proscoc	0278
Prosonic	0278 0000
Protech	0081
Provision	0278
Pye	0081
Quasar	0278
Quelle	0081
Radialva	0037 0072 0081 0048
Radiola	0081
Rank	0041
Reoc	0348 0637 0278
Rex	0041 0384
RFT	0072
Roadstar	0240 0072 0037 0278
Royal	0072
Saba	0041 0320 0321 0384 0278
Saisho	0348
Salora	0043 0106 0104
Samsung	0240 0432 0620
Sansui	0041 0067 0106 0072 0348
Sanyo	0104 0047 0048 0067
Saville	0352 0278 0240
SBR	0081
Scan Sonic	0240
Schaub Lorenz	0041 0104 0000 0106 0315
Schneider	0072 0000 0037 0081 0278 0240 0042
Seaway	0278
SEG	0072 0240 0278 0642 0081
SEI	0081
Sei-Sinudyne	0081
Seleco	0041 0384 0037
Sentra	0072
Setron	0072
Sharp	0048 0037 0569
Shintom	0072 0104
Shivaki	0037
Siemens	0037 0104 0081 0320 0347
Siera	0081
Silva	0037
Silver	0278
Singer	0045
Sinudyne	0081
Smaragd	0348
Sonitron	0047
Sonneclair	0072
Sonoko	0278
Sonolor	0048
Sontec	0037 0278
Sony	0032 0106 1032
Soundwave	0037 0348
Ssangyong	0072
Standard	0278
Starlite	0037 0104
Stern	0278
Sunkai	0348 0278
Sunstar	0000
Suntronic	0000
Sunwood	0072
Supra	0037 0240

VCR

Symphonic	0000 0072
T+A	0226
Tandberg	0278
Tashiko	0000 0048 0240 0081 0037
Tatung	0000 0041 0081 0048 0043 0348 0352
Teac	0072 0041 0000 0278 0642 0037 0081
	0307
TEC	0278 0072
Tech Line	0072
TechniSat	0348
Televia	0041
Telefunken	0041 0320 0321 0384 0278
Teletex	0072 0278 0000
Tenosal	0072
Tensai	0000 0037 0072
Tevion	0348
Thomson	0320 0722 0321 0041 0067 0384 0278
Thorn	0041 0104 0037
Thorn-	
Ferguson	0320
Tokai	0072 0037 0041 0104
Tokiwa	0072
Topline	0348
Toshiba	0045 0041 0384 0043 0081
Towada	0072
Tredex	0278
Uher	0037 0240
Ultravox	0278
Unitech	0240
United	
Quick Star	0278
Universum	0000 0081 0240 0037 0106 0348 0104
Victor	0067
Watson	0081 0352 0278 0642
Weltblick	0037
Yamaha	0041
Yamishi	0072 0278
Yokan	0072
Yoko	0037 0072 0240
Zenith	0637

VCR

Satellite Receivers

Satellitenempfänger

Récepteurs satellites

Receptores de satélite

Receptores de satélite

Ricevitori via Satellite

Satelliet-ontvangers

@sat	1300
ABsat	0832 0668 0123 1323 0710
ADB	0642
Adcom	0200
Aegir	0520
AGS	0668 0710
Akai	0200
Akena	0668
Alba	0455 0713
Aldes	0520
Allsat	0200 1017 1043
Alltech	0713
Alpha	0668 0200
Altai	0396
Amitronica	0713
Ampere	0396 0132
Amstrad	0345 0847 0713 0742 0396 0132 0882
	0885 0863 0501 0795 1113
Anglo	0713
Ankaro	0713

SAT

AntSat 1017 1083
 Apollo 0455
 Arcon 1205 1043 0834 0132 1075
 Armstrong 0200
 Asat 0200
 ASLF 0713
 AssCom 0853
 Astacom 0668 0710
 Aston 1129
 Astra 0108 0607 0713
 Astrastar 0548
 Astro 0133 0173 0520 0501 0658 0548 0607
 1113 1099 1100 0200 0292
 Athena 0668
 Atlanta 0871
 Aurora 0879
 Austar 0863 0642 0497 0879 1176
 Avalon 0396
 Axiel 0668 0710
 Axis 1111 0834
 Barcom 0108
 Beko 0455
 Bentley
 Walker 1017
 Blaupunkt 0173
 Blue Sky 0713 0885
 Boca 0132 0713
 Boston 0132 0710 0668
 Broco 0713
 BskyB 0847 1175
 BT 0668 0710
 Bubu Sat 0713
 Cambridge 0501
 Canal
 Satellite 0853 0292
 Canal+ 0853 0292
 Cherokee 0123 0710 1323
 Chess 0157 0605 0713 1085
 CityCom 1176 0115 0607 0299 0818
 Claasen
 Nachrichten 0520
 Clemens
 Kamphus 0834 0396
 CNT 0520
 Cobra 0396
 Colombia 0668 0132
 Columbia 0132
 Columbus 0668
 Comag 0132
 Condor 0607
 Connexions 0396
 Conrad 0607 0573 0115 0501
 Conrad
 Electronic 0607 0713
 Cryptovision 0455 0795
 Cyrus 0200
 D-box 1127 1114 0723
 Daeryung 0396
 Daewoo 1296 0713
 Delfa 0863
 Deltasat 1075
 DGTEC 1242
 Digatron 1294
 Digenius 0299
 Digiality 0607
 DigiPro 1105
 DigiQuest 0863
 Discoverer 0605 0157
 Discovery 0668 0710
 Diseqc 0710
 Distratel 0084 0885 1205
 Distrisat 0200
 DMT 1075
 DNT 0200 0396
 DREAM multi-
 media.TV 1237
 Dynasat 0679

SAT

Echostar 0610 1169 0871 0167 0853 1086 1200
 0454 0396 0713 0668 0511 0453
 Einhell 0132 0713 0501
 Elap 0713 1129 0668 0710
 Elekta 0520
 Elsat 0713
 Elta 0200
 Emme Esse 0679 0871
 Engel 1017 0713
 EP Sat 0455
 Eurieult 0084 0885 0882
 Eurocrypt 0455 0108
 Europa 0863 0607 0501 0200
 Europhon 0299 0607
 Eurosky 0607 0132 0299 0115 0114 0501
 Eurostar 0607 0679 0115
 Fenner 0668 0157 0605 0713
 Ferguson 0455 0711
 Fidelity 0501
 Finlandia 0455 0108
 Finlux 0108 0573 0455
 Flair Mate 0713
 Force 1101
 Fortec Star 1017 1083
 Foxtel 0879 0720 0455 0497 0795 1176 0345
 Fracarro 0871 0668
 Freecom 0501 0173
 Freesat 0882
 FTEmaximal 0713 0863
 Fuba 0396 0173 0573 0108 0115 0299
 Fugionkyo 1105
 Galaxis 1111 1101 0834 0863 1176 0853 0115
 0879
 Gardiner 0818
 Garnet 1075
 GF 0834 1043
 GF Star 1043
 GOD Digital 0200
 Goldbox 0292 0853
 Goldvision 1017
 Gooding 0571
 Goodmans 1284 0455
 Gradiente 0887
 Granada 0108 0455
 Grandin 0084
 Grundig 0173 0847 1150 1291 0571 0750 0345
 0879 0885 0853 0501 1297
 Hanseatic 0605 1099 1100
 Hansel &
 Gretel 0132 0607
 Hanuri 0520
 Hauppauge 1294
 HDT 1011
 Heliocom 0607
 Helium 0607
 Hirschmann 0396 0882 1113 1111 0173 0573 1085
 0299 0501 0710 0607 0668 0108
 Hitachi 0455
 HNE 0742
 Houston 0668 0396
 Humax 1176 0863
 Huth 0132 0607 1017 1075
 Hyundai 1011 1159 1075
 ID Digital 1176 0863
 Imex 0084
 Ingelen 0396 0882
 International 0132
 Interstar 1105 1017
 Intervision 0628 0607
 Invideo 0871
 IRTE 0609
 Italtel 0871
 ITT 0108
 ITT Nokia 0108 0573 0455 0723
 JOK 0710
 JVC 0571
 K-SAT 0713

SAT

Kamm 0713
 Kaon 1300
 KaTelco 1111
 Kathrein 0658 0249 1057 0173 1221 0200 0713
 0668 0818 0742 0123 0115 1323 0710
 Kathrein
 Eurostar 0115
 Kiton 0114
 Klap 0668 0710
 Konig 0607
 Koscom 0834 1043
 Kreiling 0658 0249 0114
 Kreiselmeier 0173
 Kyostar 0132
 L&S Electronic 1043
 Labgear 1296
 LaSAT 0520 0607 0115 0132 0157 0299
 Lenco 0713 0115 0607
 Lenson 0501
 Lexus 0200
 LG 1075
 Lifesat 0605 0299 1043 0713
 Logix 1017 1075
 Lorenzen 0299 1294 0607 0742 0132
 Luxor 0108 0345 0573 0501
 M&B1 0605
 Manata 0710 0668 0713
 Manhattan 1083 0455 0520 0710 0668 0834 1017
 Marantz 0200
 Maspro 0750 0713 0173 0571
 Matsui 0571 0710 0173
 Max 0607
 MB 0605
 Mediabox 0292 0853
 Mediacom 1206
 MediaSat 0501 0292 0853
 Medion 0713 0299 1043
 Medison 0713
 Mega 0200
 Meletronic 0818
 Metronic 0713 1215 0520 0084 0818 0885 1205
 Metz 0173
 Micro 0607 0501 0713
 Micro
 electronic 0713
 Micro
 Technology 0713
 Micromaxx 0299
 Microtec 0713
 Minerva 0571
 Mitsubishi 0455
 Morgan's 0200 0713 0132
 Motorola 0856
 Multichoice 0642 0879
 Multitec 0157
 Myryad 0200
 Mysat 0713
 Netgem 1322
 Neuhaus 0501 0713 0834 0607
 Neusat 0713 0834
 Nikko 0713 0723 0200
 Nokia 1023 1114 0751 1127 0723 0853 0573
 0108 0455 1723
 Nordmende 0455 0520
 Nova 0879
 OctalTV 1294
 Okano 0668
 OnDigital 0751 0329 0241 0867 0133
 Optex 0834
 Optus 0879 0292 0853
 Orbit 1022
 Orbitech 1099 1100 0200 0292 0501 0548 0157
 Origo 0497
 OSAT 0345
 Ouralis 1205
 Oxford 0668

Pace 0455 0847 0887 1175 0241 0867 0123
 1323 0791 0795 0720 0497 0200 0853
 0710
 Packsat 0710
 Palcom 0299
 Palladium 0571 0501
 Palsat 0501
 Panasat 0879 0615
 Panasonic 0847 1104 0455
 Panda 0455 0108 0607 0173 0834
 Patriot 0668
 Phillips 0200 1114 0292 0853 0455 0750 0710
 0668 0571 0173 0133 0818
 Phonotrend 0863 1017 1200
 Pioneer 0329 0853 0292 0352
 Planet 0871 0396
 Polytron 0396
 Praxis 0511
 Preisner 0132 0396 1101 1113
 Premier 0292
 Premiere 0853 1114 1127 0723 1111 1176 1100
 0249 0658
 Primacom 1111
 Pro Visat 0520
 Profile 0668 0710
 Promax 0455
 Prosat 0628
 Prosonic 0742
 Provision 0520
 Pye 0571
 Pyxis 0834
 Quadral 0628 0668 0710 1323
 Quelle 0607 0742 0115
 Radiola 0200
 Radix 0396 1113 0882
 RFT 0200
 Roadstar 0713
 Rover 0628 0713
 Saba 0520 0710 0885 0115 0607
 Sabre 0455
 Sagem 0820 1114 1253
 Salora 0108
 Samsung 0863 1243 0853 1206 1017
 SAT 0501
 Sat Control 1300
 Sat Partner 0520 0501
 Sat Team 0713
 Satcom 0605 0607
 Satec 0713 0834
 Satline 0628
 Satstation 1083
 Schneider 0710 0668 0157 1206
 Schwaiger 0605 0157 0607 0885 1111 0132 1075
 SCS 0115 0299
 Seemann 0396
 SEG 0605 0742 0114 1087
 Seleco 0871
 Septimo 1205 0885
 Siemens 0173
 Skantin 0713
 Skinsat 0501
 SKR 0713
 Sky 0847 0856 0887 1014 0711
 SKY+ 1175
 Skymaster 0713 0605 0157 1200 1085 1075 0628
 Skymax 0200
 SkySat 0157 0605 0713
 SL 0132 0742
 SM Electronic 0157 0713 1200 1075 1085
 Smart 0132 0299 1101 0882 0396 1113 0115
 0713
 Sony 0282 0847 0853 0455 0292
 SR 0132
 Starland 0713
 Strong 0520 0879 0853 1105 1159
 Sunsat 0713
 Sunstar 0132

Super Sat	0679
Tantec	0455
Tatung	0455
Tecatel	1200
TechniSat	0200 0292 1099 1100 0501 0548
Technosat	1206
Technowelt	0607 0885
Teched	1017
Techwood	0114
Telasat	0605 0115 0607
Teleciel	1043
Telecom	0713
Telefunken	0710
Teleka	0396 0750 0501 0607 0834
Telemaster	0520
Telesat	0605 0607
Telesat	0501 1099 1100 0114 0200 0157 0292
Teletech	0114
Televs	0455 0501 0132
Thomson	0455 0711 0713 0292 0853 0115 0607
	1291 0820 0668 0710 1046
Thorn	0455
Tokai	0200
Tonna	0455 0668 0501 0713 0834
Topfield	1206
Toshiba	0455
TPS	0820 1253
Triasat	0501
Triax	0501 0115 0200 0396 0713 0853 0114
	1296 1291 0132
Turnsat	0713
Twinner	0132 0713
UEC	0879
Uher	0157
Unisat	0200
Universum	0173 0571 0607 0299 0115 0742 1087
Van Hunen	0299
Variosat	0173
Ventana	0200
Vestel	0742
VH-Sat	0299
Visionic	1105
Visiosat	0710 0713
VTech	0818
Wetekom	0157 0605 0501
Wewa	0455
Wisi	0173 0396 0299 0455 0501 0607 0834
Woorisat	0520
Worldsat	0710 0114 0123 0668
XCOM	0832 0123 0668
XSat	0832 0668 0713 0123
Xtreme	1300
YES	0887
Zehnder	1075 0742 0114 0115 0818 0520 0419
Zenith	0856
Zeta	
Technology	0200
Zinwell	1176

SAT

Cable Converters

Kabelsignalumwandler

Décodeurs de câble

Decodificadores

Conversores de Cabo

Decoder

Kabel Decoders

Austar	0012 0276
BT	0003
Cabletime	0448 0665
Canal Plus	0443
Comcrypt	0443
Decsat	0423
Filmnet	0443
France	
Telecom	0451 0817
General	
Instruments	0276
Golden	
Channel	1110
HyperVision	0619
Jerrold	0003 0276
Kabelvision	0003
Macab	0817
Melita	0003
MNet	0443 0019
Mr Zapp	0817
Noos	0817
NTL Cabletell	0276
Oak	0019
Ono	1068
Optus	0276 1060
Pace	1068 1060
Philips	0619 0451 0817 0286
PVP Stereo	
Visual	0003
Sagem	0817
Scientific	
Atlanta	0277
Tele+1	0443
Teledanmark	0619
Telepiu	0443
Thomson	1110
Tudi	0286 0619
United Cable	0003
Videotron	0250
Videoway	0250
Visiopass	0451 0817

DVD

3DLAB	0539
A-Trend	0714
Acoustic	
Solutions	0730
AEG	0788 0770
Aiwa	0641 0695
Akai	0790 0788 0690 0716 0713 0705
AKI	0718
Akira	0699
Alba	0717 0699 0713 0723 0695
All-Tel	0790
Amitech	0770
Amstrad	0713
Ansonic	0774
Apex Digital	0672
Audiosonic	0690

CBL

DVD

AWA 0730
 Black
 Diamond 0713
 Blaupunkt 0717
 Blue Sky 0699 0695 0713 0672
 Boman 0783
 Brain Wave 0770
 Brandt 0651
 Bush 0699 0690 0689 0717 0713 0774 0818
 0695 0723
 C-Tech 0768
 Cambridge
 Audio 0696
 Cambridge
 Soundworks 0696
 CAT 0699
 Celestial 0672
 Centrex 0672 1004
 Centrum 0713
 cineULTRA 0699
 Classic 0730
 Clatronic 0788
 Clayton 0713
 Coby 0730
 Conia 0672
 Crown 0770 0651 0690
 Cybercom 0774
 CyberHome 0714 0816
 Cytron 0716 0651 0705
 Daewoo 0770 0705 0714
 Daewoo
 International 0699
 Dansai 0770 0783
 Dantax 0723
 DEC 0699 0818
 Decca 0770
 Denon 0490 0634
 Denver 0699 0788
 Denzel 0665
 Diamond 0651 0768 0723
 Digihome 0713
 digiRED 0717
 Digitrex 0672
 DiK 0774
 Dinamic 0788
 DiViDo 0705
 DK digital 0774
 DMTECH 0783 0790
 Dragon 0774
 Dual 0665 0651 0713 0730 0783 0790 0774
 E-Boda 0723
 Eclipse 0723
 Electrohome 0770
 Elin 0770
 Elta 0690 0770 0788 0790
 Emerson 0591 0705
 Enzer 0665
 Ferguson 0651
 Finlux 0741 0770 0783
 Funai 0695
 GE 0717
 Global
 Solutions 0768
 Global Sphere 0768
 Go Video 0783
 GoldStar 0591 0741
 Goodmans 0651 1004 0790 0690 0783 0723 0818
 Graetz 0665
 Grandin 0716
 Grundig 0539 0695 0651 0775 0705 0790 0713
 0670 0723
 Grunkel 0770
 H&B 0818 0713
 Haaz 0768
 Hanseatic 0741
 HCM 0788
 HDT 0705

HE 0730
 Henß 0713
 Hitachi 0664 0665 0573
 Hiteker 0672
 Hoher 0774
 Home
 Electronics 0730
 Hyundai 0783
 Ingelen 0788
 ISP 0695
 Jeken 0699
 JMB 0695
 JVC 0623 0539 0503 1940
 Karcher 0783
 Kendo 0699
 Kenwood 0534 0490 0737
 Kiilo 0718 0770
 Kingavon 0818
 Kiss 0665
 Koda 0818
 Koss 0651
 Lawson 0705 0716 0768
 Lecson 0696
 Lenco 0699 0774 0651 0770 0818
 Lenoxx 0690
 Lexia 0699
 LG 0591 0741 1906
 Lifetec 0651 0774
 Limit 0716 0768
 Loewe 0539
 LogicLab 0768
 Logix 0705 0783
 Lumatron 0705
 Luxman 0573
 Luxor 1004
 Magnavox 0503 0818
 Magnex 0723
 Manhattan 0705
 Marantz 0539
 Mark 0713
 Matsui 0651 0695
 MBO 0690 0730
 MDS 0699
 Medion 0651 0774 0783 0716
 Memorex 0774
 Metz 0571 0713
 MiCO 0723
 Microboss 0718
 Micromaxx 0695
 Micromedia 0503 0539
 Micromega 0539
 Microsoft 0522
 Microstar 0774
 Minax 0713
 Minoka 0770
 Mitsubishi 0713
 Mizuda 0818
 Monyka 0665
 Mustek 0730
 Mx Onda 0651 0723
 NAD 0741
 Naiko 0770
 Neufunk 0665
 Nordmende 0774
 Omni 0690 0699
 Onkyo 0627 0503
 Optimus 0571
 Orava 0818
 Orion 0695
 Oritron 0651
 P&B 0818
 Pacific 0768 0790 0774 0713
 Palladium 0695
 Palsonic 0689 0672
 Panasonic 0490 1908
 Panda 0783
 Phillips 0539 0646 0503 1914

DVD

DVD

Phonotrend 0699
 Pioneer 0571 1902
 Pointer 0770
 Powerpoint 0718
 Proline 0651 0686 0672 0790 1004
 Proscan 0522
 Prosonic 0699
 Provision 0699
 Radionette 0741
 Raite 0665
 Rank Arena 0718
 RCA 0522 0651
 REC 0689 0490
 Red Star 0770 0788
 Reoc 0768
 Revoy 0699
 Roadstar 0699 0690 0689 0713 0818
 Rotel 0623
 Rowa 1004
 Saba 0651
 Sabaki 0768
 Salora 0741
 Samsung 0573 0490
 Sansui 0695 0716 0768 0723 0770
 Sanyo 0670 0695 0790
 Scan 0705
 ScanMagic 0730
 Schaub
 Lorenz 0788 0770
 Schneider 0651 0783 0705 0790 0788
 Scientific Labs 0768
 Scott 0718 0651 0672
 SEG 0665 0713 0768
 Shanghai 0672
 Sharp 0630 0695
 Sherwood 0717 0741 0633
 Shinco 0717
 Silva 0788
 SilvaSchneider 0774
 Singer 0690 0716 0723
 Skymaster 0730 0768
 Slim Art 0770
 SM Electronic 0730 0768 0690
 Smart 0718 0705 0713
 Sonashi 0716
 Sony 0533 0573 1903 1904
 Soundmaster 0768
 Soundmax 0768
 Soundwave 0783
 Standard 0651 0768
 Starmedia 0818
 Sunwood 0788
 Supervision 0730 0768
 SVA 0672
 Synn 0768
 Tatung 0770
 Teac 0717 0741 0571 0591 0768 0790
 Technics 0490 1908
 Technika 0770
 Techwood 0713
 Tensai 0690 0651
 Tevion 0651 0768
 Theta Digital 0571
 Thomson 0551 0522
 Tokai 0665 0788
 Tokiwa 0705 0716
 Toshiba 0503
 Umax 0690
 United 0788 0730 0790
 Universum 0741 0713 0591
 Venturer 0790
 Vieta 0705
 Voxson 0774 0730
 Walkvision 0717
 Welkin 0774
 Wesder 0699
 Wharfedale 0686 0696 0723

Windy Sam 0573
 Xbox 0522
 XLogic 0770 0768
 XMS 0788 0689
 Yamada 1004
 Yamaha 0490 0539 0646
 Yamakawa 0665 0710 0765
 Yelo 0718
 Yukai 0730
 Zenith 0503 0591 0741

DVD

DVD