
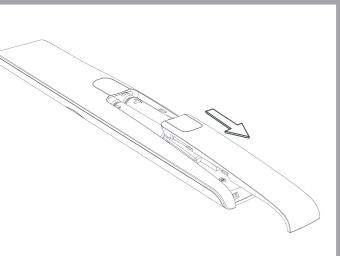


## URC 7955


## ENGLISH SIMPLE SET UP GUIDE

WELCOME, PREPARE YOUR  
REMOTE FOR INSTALLATION


Open the battery door.

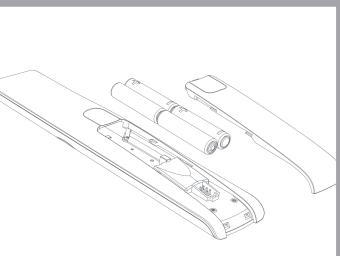

Insert 4 AAA batteries.

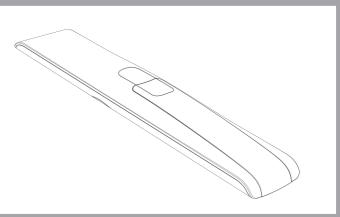Universal Electronics BV –  
Europe & International  
P.O. Box 3332, 7500 DH Enschede  
The Netherlands

## KEY TABLE

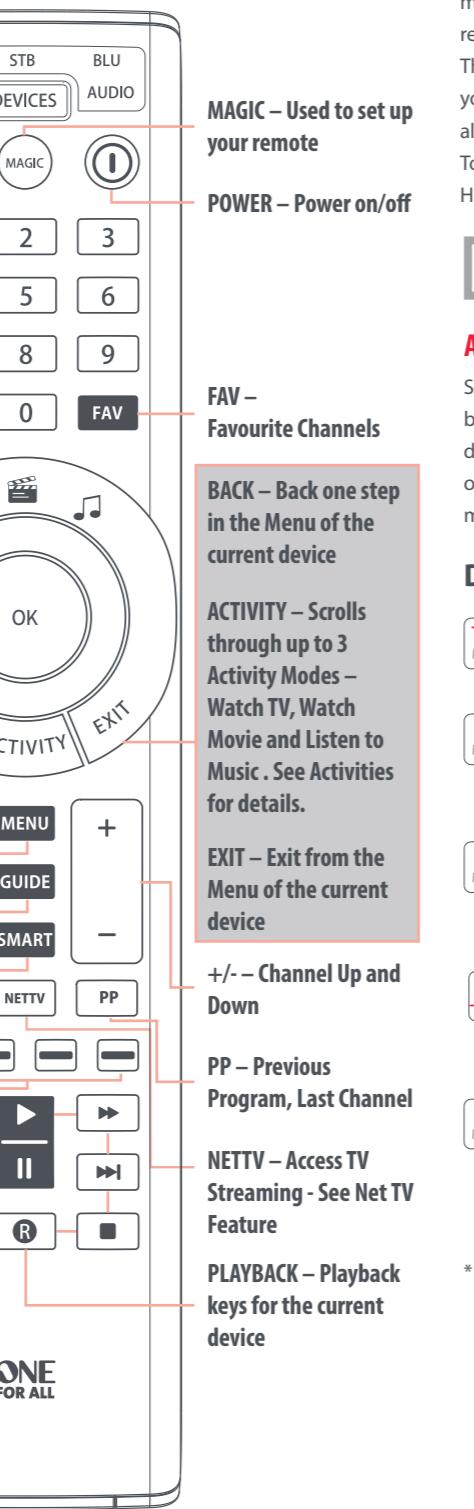**DEVICES** – Scroll through the devices your remote is set up to control**AV** – Select the input on the current device**POWER** – Power on/off**INFO** – Displays info of current playback**VOL** – Volume Up, Down and Mute**MENU** – Shows the menu of the current device**GUIDE** – TV Guide, EPG**SMART** – Access internet and Smart features of your TV or internet-connected device**Red, Green, Yellow, Blue** – Fasttext/Quick access keys**LIST** – Displays a list of recorded programmes

**Thank you for purchasing the One For All Smart Control.**  
Now you can control all of your Audio/Video devices with a single remote, while enjoying extra features such as the ability to combine devices in a single Activity Mode, sending multiple commands on a single key press (macros) and being able to customise the remote control to your exact requirements.

There is also a handy companion app for iPhone and Android phones which will allow you to keep your remote up to date with the latest devices and codes. It also offers you an alternative way to set up your remote and store the settings.

To get started with your new remote, the first step is to set it up to control all of your Home Cinema devices.

## HOW TO SET UP YOUR REMOTE

## HOW TO SET UP YOUR REMOTE

## HOW TO SET UP YOUR REMOTE

## A – SIMPLESET

## TV



1

Alba / Bush / Goodmans

2

Grundig

3

LG

4

Panasonic

5

Philips

6

Samsung

7

Sharp

8

Sony

9

TCL / Thomson

0

Toshiba



1

Denon

2

Harman/Kardon

3

JVC / LG

4

Marantz / Philips

5

Onkyo

6

Panasonic / Technics

7

Pioneer

8

Samsung

9

Sony

0

Yamaha



1

AUD – AV Receiver, Amp, Tuner, Sound Bar, Speaker Systems

2

TV

3

STB

4

BLU

5

AUDIO

6

MEDIA

7

DEVICES

8

ACTIVITY

9

POWER

0

INFO

1

GUIDE

2

SMART

3

NETTV

4

PP

5

MUTE

6

OK

7

BACK

8

ACTIVITY

9

EXIT

0

INFO

1

FAV

2

INFO

3

0

FAV

4

INFO

5

0

FAV

6

INFO

7

0

FAV

8

INFO

9

0

FAV

0

INFO

1

FAV

2

INFO

3

FAV

4

INFO

5

FAV

6

INFO

7

FAV

8

INFO

9

FAV

0

INFO

1

FAV

2

INFO

3

FAV

4

INFO

5

FAV

6

INFO

7

FAV

8

INFO

9

FAV

0

INFO

1

FAV

2

INFO

3

FAV

4

INFO

5

FAV

6

INFO

7

FAV

8

INFO

9

FAV

0

INFO

1

FAV

2

INFO

3

FAV

4

INFO

5

FAV

6

INFO

7

FAV

8

INFO

9

FAV

0

INFO

1

FAV

2

INFO

3

FAV

4

INFO

5

FAV

6

INFO


7

## LEARNING

Your One For All remote control can learn any function from any other working remote control. This can be useful if you are missing one or more functions from your original remote control and would like to add them to the Smart Control. You can learn onto any key except Magic, Devices or Activity.

You can also learn a complete device if you can't find a code.

To learn, firstly make sure you have all your original remote controls to hand, and that they have working batteries in. To learn functions, the original remote should be approximately 3cm from the OFA remote, pointing towards it as shown below:

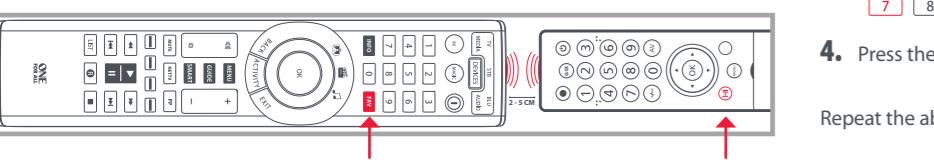

1. Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.

2. Using the DEVICES key, make sure the LED for the device you want to learn functions on is lit.

3. Press 975 – the LED will blink twice.

4. Press and release the key you want to learn a function onto (for example the FAV key) – The Watch TV and Listen To Music LEDs will light up.

5. Press and release the key on the original remote.

6. The LED under the device will blink twice to indicate the key has been learned correctly.

7. Repeat steps 4 and 5 for each key you want to learn – remember you can learn from multiple remotes, but only one function per key.

8. When you have learned all the functions you require, press and hold the MAGIC key until the LED blinks twice and turns off.

### Hints

- If the LEDs show one long blink at step 6, the function was not learned correctly, please try again from step 4.
- If you find one or more keys don't work properly after set up, you can re-enter the learning mode at any time by repeating the procedure from step 1.

## LEARNING

### TO DELETE A LEARNED FUNCTION, THE PROCEDURE IS:

1.

Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.

2.

Using the DEVICES key, make sure the LED for the device you want to delete functions from is lit.

3.

Press 976 – the LED will blink twice.

4.

Press the key to delete twice – the LED will blink twice.

Repeat the above procedure for each key you want to delete.


## ACTIVITIES

An Activity is a grouping of two or more devices into a single mode based upon what you're doing while using your remote - for example TV and Set Top Box can be combined together into a Watch TV mode. In this mode keys will control only the relevant device, so in this example the Volume keys would control the TV, but the channel keys would control the Set Top Box.

The OFA Smart Control features 3 Activity Modes; Watch TV, Watch Movie and Listen To Music. Each of these modes has a choice of devices to combine. These are:


### WATCH TV

Combination 1: TV + STB (Default)  
Combination 2: TV + STB + AUD  
Combination 3: TV + AUD

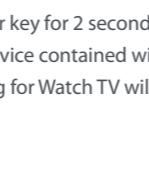


### WATCH MOVIE

Combination 1: TV + BLU (Default)  
Combination 2: TV + BLU + AUD  
Combination 3: TV + MEDIA  
Combination 4: TV + MEDIA + AUD

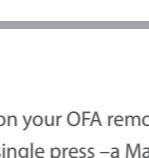

### LISTEN TO MUSIC

Combination 1: TV + AUD + MEDIA (Default)  
Combination 2: AUD + BLU  
Combination 3: AUD only

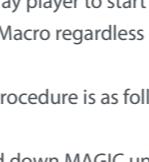

## ACTIVITIES

If you set up the default devices for any Activity on the remote (for example a TV and STB for Watch TV) that Activity will be set up automatically on the remote. If you would like to change to a different combination, the procedure is as follows:

1.

Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.

2.

Use the ACTIVITY key to scroll through the Activities until the one you want to set is flashing.

3.

Press the number of the combination you want to set – e.g 2 for TV + STB + AUD in Watch TV.

4.

The LED will blink twice and go out.

To access the Activities, simply press the ACTIVITY key to scroll through until the desired one is lit. You can return to controlling by device by using the DEVICES key.

### AV Shift

As the AV key is intended to select the input on your TV and most TVs use a menu to select from a list of inputs, when the AV key is pressed in an Activity, the Menu Up, Down, Left, Right and OK keys temporarily control the TV. If the OK key is pressed, or no key is pressed for ten seconds, these keys will revert to controlling the relevant device for the Activity (e.g. STB in Watch TV Mode).

The OFA Smart Control features 3 Activity Modes; Watch TV, Watch Movie and Listen To Music. Each of these modes has a choice of devices to combine.

These are:

### Power Macro

If you hold down the Power key for 2 seconds in any Activity, the remote will send the Power function for each device contained within that Activity. So for example, holding Power in the default setting for Watch TV will turn both the TV and Set Top Box on or off.

Combination 1: TV + STB (Default)  
Combination 2: TV + STB + AUD  
Combination 3: TV + MEDIA  
Combination 4: TV + MEDIA + AUD

## MACROS

### PROGRAM A MACRO

You can program any key on your OFA remote (except Magic and Devices) to send multiple commands on a single press – a Macro. This can be useful for controlling multiple devices to put them in a certain state – for instance you could put your TV on HDMI 1 and press Play on the Blu-ray player to start watching a movie. A key programmed with a Macro will send the same Macro regardless of the device mode, so it is best to select a key you don't use.

To program a macro, the procedure is as follows:

1.

Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.

## MACROS

Press 995 – the LED will blink twice.

Next select the key you want to program the Macro on.

4.

Now use the DEVICES key to select the device you want the first function of the Macro to come from, for example TV.

5.

Next, press the key you want to include in the Macro, for example the AV key.

6.

Repeat steps 4 (if necessary), and 5 to add more keys to the Macro. You can include up to 15 key presses.

7.

To store the Macro, hold down the MAGIC key until the LED blinks twice.

1. Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.

\* Remember to press the keys in the same order you would use your original remotes – so if you pressed AV on the TV remote and then Play on the Blu-ray remote to watch a movie, do it in the same order on the Smart Control.

2. Press 993 – the LED will blink twice.

3. Press VOLUME UP – the LED will blink four times and Volume is now unlocked.

Please note that Volume Lock only applies in Device Mode – Activities are unaffected.

## VOLUME LOCK

If you always use one device to control volume, for example your TV or an AV Receiver, you can set up the Smart Control to always control that device, regardless of which device your remote is controlling.

To do this:

1. Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.

2. Press 993 – the LED will blink twice.

3. Use the DEVICES key to select the Device you want to lock the Volume to.

4. Press MAGIC once – the LED will blink twice and volume is now locked.

To unlock the volume and set every device back to controlling its own volume, the procedure is:

1. Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode will stay lit.

\* If the LED shows a long blink when you press a key in steps 4 or 5, you have entered too many keys, please try again.

2. Press 993 – the LED will blink twice.

3. Press VOLUME UP – the LED will blink four times and Volume is now unlocked.

Please note that Volume Lock only applies in Device Mode – Activities are unaffected.

## THE NETTV FEATURE

Now perform the sequence of keys exactly as would normally. The remote will operate your device and the macro is recorded in real time – so if it normally takes a few seconds for your device to react don't worry.

4.   
MENU → ACTIVITY → OK → NETTV

5.   
NETTV

One you have finished the sequence – and the Streaming Service has started on your device – hold down the NETTV key until the LED blinks twice and goes out. The macro is now stored.

- Tips
- Make sure the Smart Control is operating the device in question before programming
  - If you find the Macro doesn't work as expected, you can just repeat the same sequence to reprogram
  - When programming, wait for your device to respond first, the remote will remember the timing
  - The NETTV macro is tied to one device, remember to make sure you are watching the correct device.

## THE OFA APP

Your One For All Smart Control contains codes for all popular devices and brands, but new codes are added to our online database every day. Using the One For All App on your iPhone or Android phone will allow you to upgrade any new codes into your remote using Bluetooth Smart, also known as Bluetooth Low Energy\*. This will ensure that the remote will never become obsolete. You can also use the app to set up all devices, giving you the ability to enter the model numbers of your equipment to get the right code first time. It can also help with selecting the right inputs for your Activities.\*

\* Dependent on device and commands available.  
If you would like to download the app, follow the links below:



\* Please ensure your phone is compatible with Bluetooth Smart. A list can be found by scanning the QR code above.