
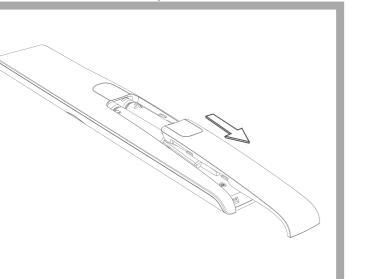



ENGLISH

URC 7980
ENGLISH SIMPLE SET UP GUIDEWELCOME, PREPARE YOUR
REMOTE FOR INSTALLATION

Open the battery door.

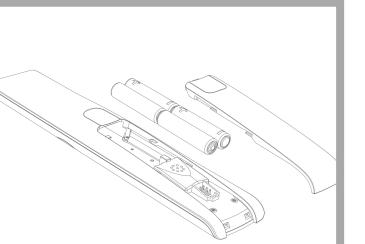

Insert 4 AAA batteries.

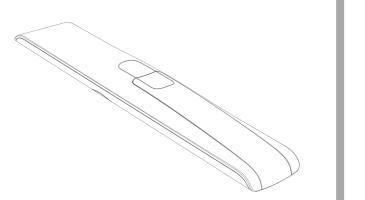

UK
www.oneforall.com

Ireland
www.oneforall.com

South Africa
0861100551
support@oneforall.co.za
www.connoisseur.co.za
www.oneforall.com

New Zealand
0800 1425569
sales@amber.co.nz
www.amber.co.nz
www.oneforall.co.nz

Australia
1 300 888 298
ofa.support@ambertech.com.au
www.ambertech.com.au
www.oneforall.co.au

Universal Electronics BV-
Europe & International
PO Box 33327500 DH Potschade
The Netherlands

URC 7980 R00
RDN 11-7980 R00
70373

ONE
FOR ALL

CE

KEY TABLE


DEVICES – Scroll through the devices your remote is set up to control**AV** – Select the input on the current device**PRODUCT DISPOSAL**
(EUROPEAN DIRECTIVE 2002/96/EC)

The crossed out wheeled bin symbol on this product ensures that this product is manufactured using high quality components that can be recycled and reused according to European Directive 2002/96/EC. Please do not dispose this product with your normal household waste but inform yourself about the local separate collection for electrical and electronic products to dispose this product correctly. This will help preventing potential negative effects on the environment and/or human health.

BATTERY DISPOSAL
(EUROPEAN DIRECTIVE 2006/66/EC)

Please do not dispose your batteries with your normal household waste but inform yourself about the local separate collection for empty batteries to dispose them correctly. This will help preventing potential negative effects on the environment and/or human health.

UNIVERSAL ELECTRONICS INC/ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. Please notice that we need your purchase receipt so that we may establish your eligibility for service. If you have bought this product for purposes which are not related to your trade, business or profession, please remember that you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights.

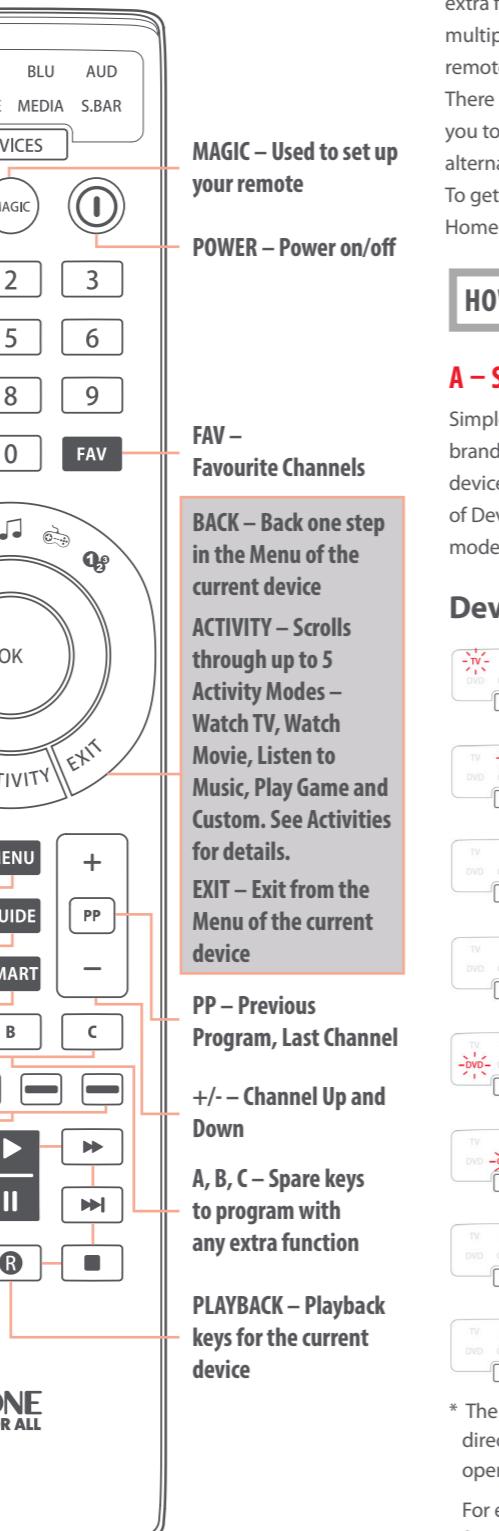LIST – Displays a list of recorded programmes**Red, Green, Yellow, Blue** – Fastext/Quick access keys**MENU** – Shows the menu of the current device**GUIDE** – TV Guide, EPG**SMART** – Access internet and Smart features of your TV or internet-connected device

Thank you for purchasing the One For All Smart Control.

 
Now you can control all of your Audio/Video devices with a single remote, while enjoying extra features such as the ability to combine devices in a single Activity Mode, sending multiple commands on a single key press (macros) and being able to customise the remote control to your exact requirements.

There is also a handy companion app for iPhone and Android phones which will allow you to keep your remote up to date with the latest devices and codes. It also offers you an alternative way to set up your remote and store the settings.

To get started with your new remote, the first step is to set it up to control all of your Home Cinema devices.

HOW TO SET UP YOUR REMOTE

A – SIMPLESET



TV

- 1 Bush
- 2 Grundig
- 3 LG
- 4 Panasonic
- 5 Philips

STB

- 6 Samsung
- 7 Sharp
- 8 Sony
- 9 TCL / Thomson
- 0 Toshiba

AUD

- 1 Apple
- 2 Popcorn Hour / Xtreamer
- 3 Roku / Mede8er / Sky UK
- 4 Emtec / A.C.Ryan / Fantec / iconBIT / iNext
- 5 Sumvision / Cyclone / Poppstar
- 0 Western Digital / DVICO

S.BAR

- 5 Microsoft

BLU

- 1 BSkyB / Sky Ireland / Orange
- 2 Canal+ / CanalSat / Digital+
- 3 Dream Multimedia / TechniSat
- 4 DSTV / Multichoice / Foxtel / Sky New Zealand
- 5 UPC / Cablecom / UPC Direct / Virgin Media

AUD

- 1 Bose
- 2 Canton / Denon
- 3 Harman/Kardon, JBL
- 4 LG
- 5 Maxell / Onkyo

GAME

- 6 Panasonic / Philips
- 7 Samsung
- 8 Sony
- 9 Teufel
- 0 Yamaha

MEDIA

- 1 Pioneer
- 2 Samsung
- 3 LG
- 4 Panasonic
- 5 Philips

S.BAR

- 1 Onkyo
- 2 Harman/Kardon
- 3 JVC / Kenwood
- 4 Marantz / Philips
- 5 NAD

AUD

- 6 Pioneer
- 7 Panasonic / Technics
- 8 Sony
- 9 Yamaha

S.BAR

- 0 Yamaha

*

If you find one or more keys do not work as you expect, start again at step 1 – the remote will start with the next code in the memory.

HOW TO SET UP YOUR REMOTE

A – SIMPLESET



GAME

- 1 Bush
- 2 Grundig
- 3 LG
- 4 Panasonic
- 5 Philips

MEDIA

- 6 Samsung
- 7 Sharp
- 8 Sony
- 9 TCL / Thomson
- 0 Toshiba

GAME

- 1 Apple
- 2 Popcorn Hour / Xtreamer
- 3 Roku / Mede8er / Sky UK
- 4 Emtec / A.C.Ryan / Fantec / iconBIT / iNext
- 5 Sumvision / Cyclone / Poppstar
- 0 Western Digital / DVICO

MEDIA

- 1 Microsoft

AUD

- 1 Apple
- 2 Popcorn Hour / Xtreamer
- 3 Roku / Mede8er / Sky UK
- 4 Emtec / A.C.Ryan / Fantec / iconBIT / iNext
- 5 Sumvision / Cyclone / Poppstar
- 0 Western Digital / DVICO

S.BAR

- 1 Microsoft

*

If you find one or more keys do not work as you expect, start again at step 1 – the remote will start with the next code in the memory.

HOW TO SET UP YOUR REMOTE

A – SIMPLESET



MEDIA

- 1 Bush
- 2 Grundig
- 3 LG
- 4 Panasonic
- 5 Philips

GAME

- 6 Samsung
- 7 Sharp
- 8 Sony
- 9 TCL / Thomson
- 0 Toshiba

GAME

- 1 Apple
- 2 Popcorn Hour / Xtreamer
- 3 Roku / Mede8er / Sky UK
- 4 Emtec / A.C.Ryan / Fantec / iconBIT / iNext
- 5 Sumvision / Cyclone / Poppstar
- 0 Western Digital / DVICO

MEDIA

- 1 Microsoft

AUD

- 1 Apple
- 2 Popcorn Hour / Xtreamer
- 3 Roku / Mede8er / Sky UK
- 4 Emtec / A.C.Ryan / Fantec / iconBIT / iNext
- 5 Sumvision / Cyclone / Poppstar
- 0 Western Digital / DVICO

S.BAR

- 1 Microsoft

*

If you find one or more keys do not work as you expect, start again at step 1 – the remote will start with the next code in the memory.

HOW TO SET UP YOUR REMOTE

B – SET UP BY CODE

If your brand is not listed in section A, you can set up your device by trying codes individually. To do this:

1. Turn your device on (not on standby).

2. Locate the brand of your device in the code list (pages 130-149). Codes are listed by Device Type and Brand.

3. Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.

4. Press the DEVICES key repeatedly until the LED for the device you want to set up is lit.

5. Enter the first 4 digit code listed for your brand (e.g. 0556 for a Bennett TV).

6. The LED will blink twice and go out.

7. Now aim the remote towards your device and press the POWER key.

8. If the device turns off, your remote is ready to use. If not, repeat steps 3-7 with the next code in the list.

* Some codes are quite similar. If you find that one or more keys do not operate as you expect, try again from step 3 with the next code in the list.

* The One For All remote can only control games consoles operated by Infra-Red, either directly or via an adapter. Consoles that are controlled by Bluetooth only cannot be operated.

For each Device type, there is a list of the top brands, each with a number assigned to it, for example 6 for a Samsung TV. Locate your device and brand in the list that follows:

