



URC 1666

ENGLISH SIMPLE SET UP GUIDE

WELCOME, PREPARE YOUR REMOTE FOR INSTALLATION

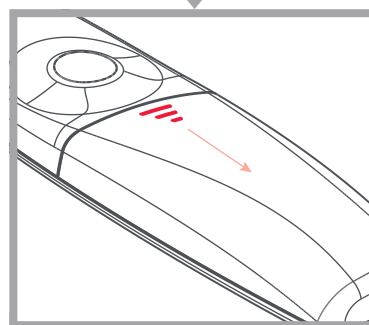

Open the battery door.

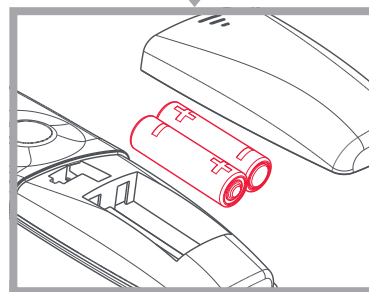

Insert 2 AA batteries.

FINISH

Proceed to step 1: Set up your television, on the next page

PRODUCT DISPOSAL

(EUROPEAN DIRECTIVE 2002/96/EC)

The crossed out wheeled bin symbol on this product ensures that this product is manufactured using high quality components that can be recycled and reused according to European Directive 2002/96/EC. Please do not dispose this product with your normal household waste but inform yourself about the local separate collection for electrical and electronic products to dispose this product correctly. This will help preventing potential negative effects on the environment and/or human health.

BATTERY DISPOSAL

(EUROPEAN DIRECTIVE 2006/66/EC)

Please do not dispose your batteries with your normal household waste but inform yourself about the local separate collection for empty batteries to dispose them correctly. This will help preventing potential negative effects on the environment and/or human health.

UNIVERSAL ELECTRONICS INC/ONE FOR ALL warrants

to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. To obtain warranty service during the warranty period, please call us at the number mentioned on the Customer Service page. Please notice that we need your purchase receipt so that we may establish your eligibility for service. If you have bought this product for purposes which are not related to your trade, business of profession, please remind that you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights.

 
GB : 0901-5510010 (0,50 per minute)

IRL : 016 015 986

Website : www.oneforall.com



http://www.ofa.com/urc1666



STB POWER

Power for Set Top Box, also used in Setup

TV POWER

Power for TV, also used in Setup

HOME

Home, Top Menu, Sky, Sat

MENU

Set Top Box Menu

INFO

Show info for current programme

GUIDE

Shows the TV Guide or EPG of your STB

EXIT

Exit the Menu of your STB

VOL+/-, MUTE

If you set up a TV and STB, the Volume and Mute keys will automatically control your TV

BACK

Go Back one step in the menu of your STB

TIMER

Access the Timer Recording Function of your STB

LIST

Display a List of recorded programmes

FAV

Access your Favourite Channel List

SUBT.

Turn Subtitles on or off

AUDIO


Change Audio format or language

Text

Teletext On/Off

TV/AV

If you set up a TV, you can change input on the TV with this key

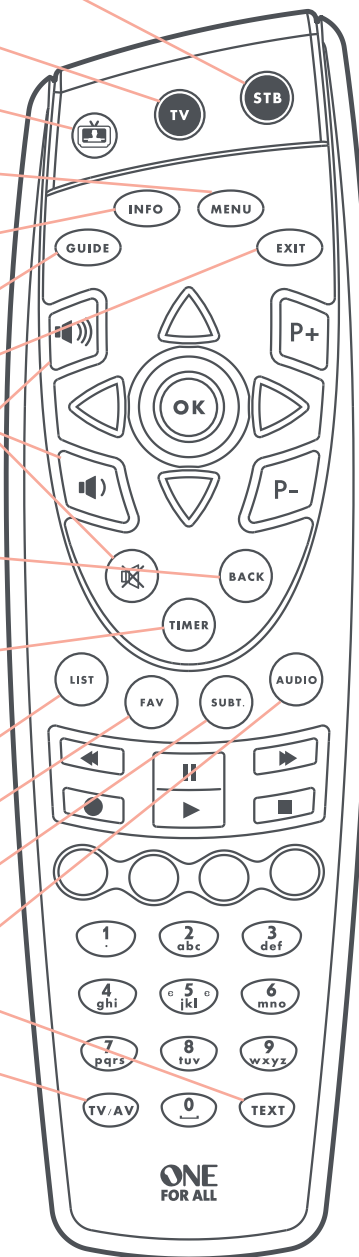


STEP 1: SET UP YOUR TELEVISION

START WITH YOUR BRANDNUMBER: IS YOUR TV BRAND LISTED?


- | | | |
|-------------|-----------|------------|
| 1 Bush | 5 Samsung | 9 Technika |
| 2 LG | 6 Sharp | 0 Toshiba |
| 3 Panasonic | 7 Soniq | |
| 4 Philips | 8 Sony | |

YES: SIMPLESET

Turn on your TV (not standby).
Point remote towards the TV.

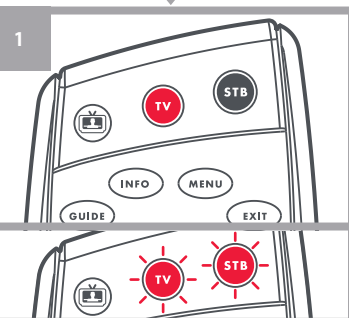

Press and hold the **TV POWER** key for 3 seconds. LEDs will blink twice.

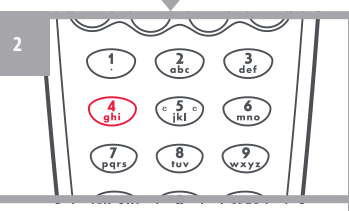


Press and hold the **BRAND NUMBER** until your television switches off. **RELEASE** the key as soon as your television switches off. The remote operates now: Power, Volume, Mute and AV (Input) of your TV

FINISH


Go to step 2: Set up your Set Top Box, on the next page.

NO: DIRECT SET

Locate the brand of your TV in the codebook.

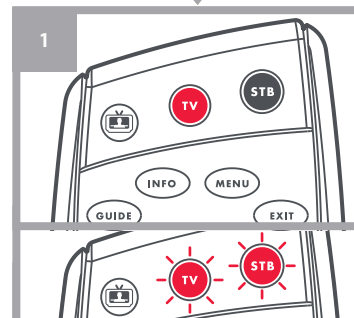

Press and hold the **TV POWER** key for 3 seconds. LEDs will blink twice.

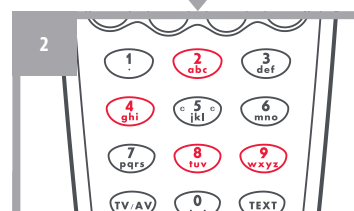

Enter the first Code listed for your Brand. LED will blink twice. Point towards TV and press power. If TV switches off you are ready. If not repeat the procedure using next code.

FINISH

If Direct Set didn't work, go to step 3: Auto Search


STEP 2: SET UP YOUR SET TOP BOX

START WITH YOUR BRANDNUMBER: IS YOUR SET TOP BOX LISTED?

- | | |
|--------------------|-------------------|
| 1 BSKyB, Sky UK | 5 Virgin Media |
| 2 BT, BT Vision | 6 Youview |
| 3 Smallworld Cable | 7 Foxtel |
| 4 TalkTalk | 8 Sky New Zealand |

YES: SIMPLESET

Turn on your STB (not standby).
Point remote towards the STB.

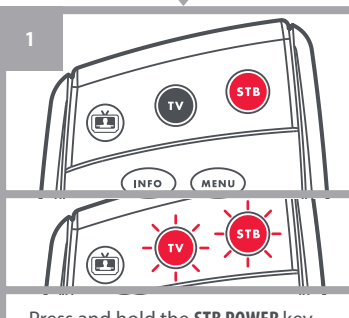

Press and hold the **STB POWER** key for 3 seconds. LEDs will blink twice.




Press and hold the **BRAND NUMBER** until your set top box switches off. **RELEASE** the key as soon as your set top box switches off. The remote will now operate your STB. If you find that some keys operate incorrectly or not at all, repeat from Step 1 to find the next code.

FINISH


Go to step 2: Set up your Set Top Box, on the next page.

NO: DIRECT SET

Locate the brand of your Set Top Box in the codebook

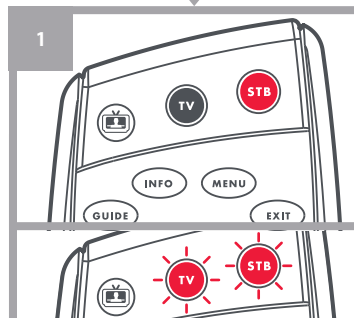

Press and hold the **STB POWER** key for 3 seconds. LEDs will blink twice.

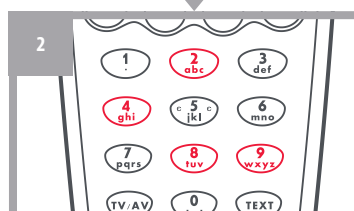


Enter the first Code listed for your Brand. LED will blink twice. Point towards STB and press power. If STB switches off you are ready. If not repeat the procedure using next code.

FINISH


If Direct Set didn't work, go to step 3: Auto Search

STEP 3: AUTO SEARCH (IF SIMPLESET OR AUTOSEARCH DOES NOT WORK)

START: CHOOSE TV OR STB

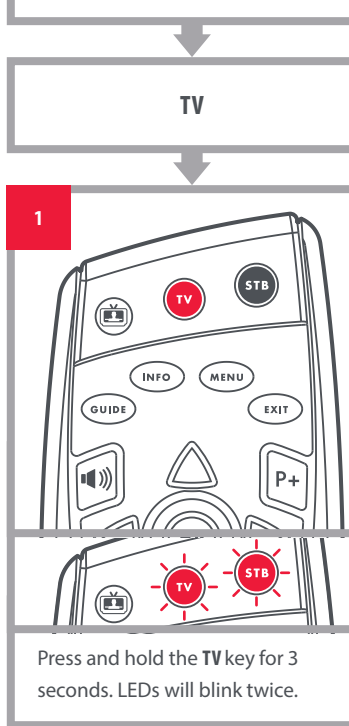


Press and hold the **TV** key for 3 seconds. LEDs will blink twice.

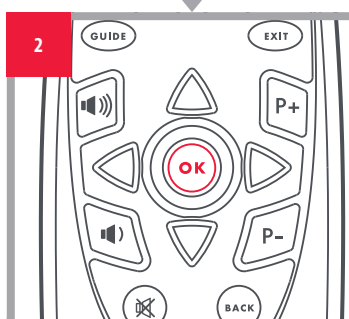


Point the remote at your TV. Press and release the **OK** button. The remote will send every 3 seconds a different Power signal to your TV. As soon as the TV switches off, press OK to store the code. The LED will blink twice. *This may take up to 15 minutes.*

FINISH

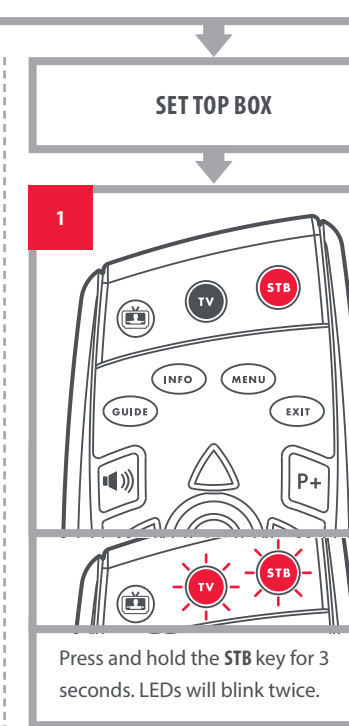

Press and hold the **STB** key for 3 seconds. LEDs will blink twice.

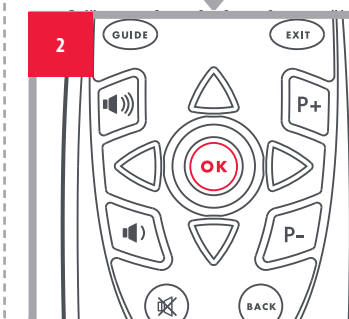


Point the remote at your STB. Press and release the **OK** button. The remote will send every 3 seconds a different Power signal to your STB. As soon as the STB switches off, press OK to store the code. The LED will blink twice. *This may take up to 15 minutes.*

FINISH


STEP 4: COPY LEARN FUNCTION

START: LEARN A NEW FUNCTION TO YOUR REMOTE


Your One For All remote can learn any function from your original (working) remote.

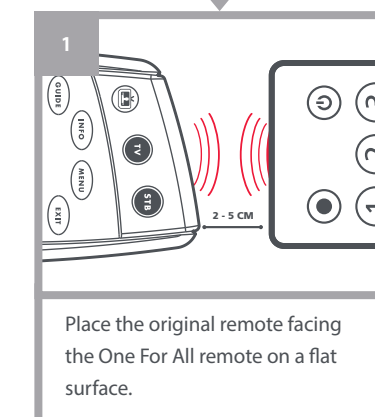

Place the original remote facing the One For All remote on a flat surface.

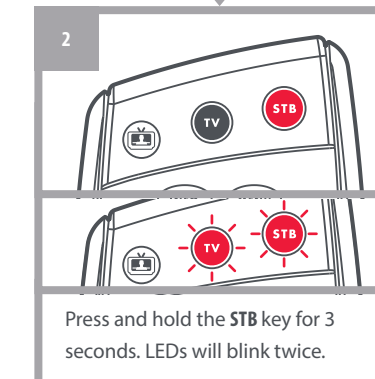

Press and hold the **STB** key for 3 seconds. LEDs will blink twice.

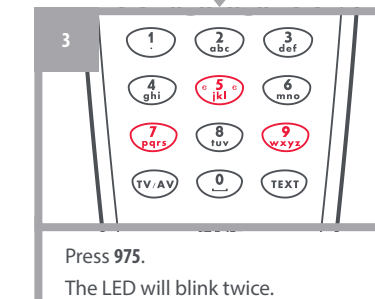

Press **975**. The LED will blink twice.

HOW TO DELETE A LEARNED FUNCTION

1. Press and hold **STB** for 3 seconds. Both LED's will blink twice.
2. Press 976.
3. Hold the **CORRESPONDING** key you wish to delete for 3 seconds until the STB LED blinks twice.
4. Press and hold **STB** for 3 seconds to end the delete feature. The STB LED will blink twice.