

ONE[®]
FOR ALL

Instruction manual



URC-1669

Introduction

Congratulations on the purchase of the URC-1669. The URC-1669 is a replacement remote control that can be set up to control 2 devices.

- **sat** - Satellite Receiver, Digital Box or Cable Box
- **tv** - Television, Plasma- or LCD TV

The URC-1669 is preprogrammed to control your Foxtel iQ Box (no set up required). Simply press the "sat" device key and your will obtain Foxtel iQ Box functionality.

Table of Contents

THE KEYPAD	3
-------------------	----------

SET UP	
SETTING UP THE URC-1669	5
Direct code set up	5
Search Method	6
SET-UP CODES	
TV : Television / LCD / Plasma / Projector / Rear Projector10
SAT : Satellite Receiver / Set-Top-Box / DVB-S / DVB-T / Freeview (UK) / TNT (F) / Digitenne (NL) / SAT/HDD17
CBL : Cable Converter / Set-Top-Box / DVB-C22
VAC : Video Accessory like Media Centres / AV Accessories / AV Selectors23










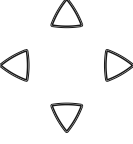 


CODE BLINK OUT (To find out which code is currently programmed)	7
QUICK CODE REFERENCE	7
EXTRA FEATURE • Volume Punch-Through	8
TROUBLE-SHOOTING	9
CUSTOMER SERVICE	9









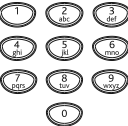 


Installing the Batteries

Your URC-1669 needs 2 new "AA/LR6" alkaline batteries.

- 1 Remove the battery cover from the back of your URC-1669.
- 2 Match the batteries to the + and - marks inside the battery case, then insert the batteries.
- 3 Press the battery cover back into place.

The Keypad

- 1**  **Power**
The POWER key operates the same function it did on the original remote control.
- 3**  **sat (LED) - device key for:**
Satellite Receiver, Cable Converter, DSS / Video Accessory (e.g. Media Centres) Personal Video Recorder or Hard Disc Recorder.
The red LED (Light Emitting Diode) underneath the sat key will light up every time a key is pressed in sat mode.
As default: when in "sat" mode your URC-1669 will be set to control your Foxtel iQ Box.
- 2**  **tv (LED) - device key for:**
Television, LCD, Plasma, Projector or Rear Projector. *The red LED (Light Emitting Diode) underneath the tv key will light up every time a key is pressed in tv mode.*
- 4**  **tv guide**
This key gives you the possibility to preview the complete tv listings.
- 5**  **box office**
This key allows you to access the Box Office programs.
- 6**  **services (setup)**
Displays the Setup screen where you can change the set-top unit's settings. This key provides a range of features such as e.g. parental controls, subtitles and favourites. For your particular device this key may provide menu control.
- 7**  **interactive (active)**
This key provides a selection of interactive services.
- 8**  **volume +/- Keys**
These keys operate in the same way as the keys on your original remote. *In "tv" mode you may obtain Colour + / - when you press and release the magic key and then press Volume + / - .*
- 9**  **channel +/- Keys**
These keys operate in the same way as the keys on your original remote. *In "tv" mode you may obtain Brightness + / - when you press and release the magic key and then press Channel + / - .*
- 10**  **Directional Keys**
If available on your original remote, these keys will allow you to navigate through the menu mode of your device.
- 11**  **select**
The select key will confirm your choice in the corresponding menu.
- 12**  **Mute Key**
The Mute key operates the same function it did on your original remote control.

- 13**  **i (info) Key**
This key provides information about the program you're watching.
- 14**  **back up Key**
This key allows you to go back to the previous page.
- 15**  **text**
Puts the television in the Teletext mode.
- 16**  **text off**
Switches the television back to regular viewing mode. On some televisions, this may be done by pressing the text key several times.
- 17**  **16:9**
This key provides you the (16:9) wide screen view function, if available on your original remote.
- 18**  **help / FOXTEL**
Takes you back to the last channel being watched on Foxtel, also returns the remote from "AV" mode back to "Foxtel".
- 19**  **Transport Keys**
If available these keys operate the transport functions (PLAY,FF, REW etc.) of your Foxtel iQ Box / Satellite Receiver / Set Top Box / Cable Box. To prevent accidental recording, the RECORD key must be pressed twice to start recording.
- 19**  **red, green, yellow, blue**
After pressing the tv key and accessing the text mode, the keys marked red, green, yellow and blue, allow you to access the Fastext functions of your television. If on your original remote control these keys are used for Menu navigation, the ONE FOR ALL Fastext keys may operate in the same way.
- 20**  **Number Keys**
The Number keys (0-9, / -/-) provide functions just like your original remote. If your original remote has an 20 key, this function can be found under the AV key.
- 21**  **magic Key**
The magic key is used to set up your URC-1669.
- 22**  **tv/sat Key**
In tv mode you will obtain the AV / Input function. In sat mode you will obtain the "TV/SAT" or "TV/DTV" function, if available on your original remote.




 
 

Please note that the key pad description is mainly based on Foxtel iQ Box functionality. This may differ from your particular device.

Setting up the URC-1669

Before you start, please read these instructions carefully

Direct code set up

Example: To set up the URC-1669 for your television:

- 1  Find the code for your device in the Code list (page **10 - 23**). Codes are listed by device type and brand name. The most popular code is listed first. **Make sure your device is switched on (not on standby).**
- 2  Press the **tv key** on the URC-1669 for the device you wish to Set-Up.
- 3  Press and **hold down** the **magic key** until the red LED underneath the tv key blinks twice (the red LED will blink once then twice).  **x2**
- 4  Enter your **(four-digit device code)** using the number keys. The red LED will blink twice.
- 5  Now, aim the URC-1669 at your device and **press POWER** If your device switches off, the **URC-1669 is ready to operate your device.**
- 6 Turn your device back on and try all the remote's functions to ensure they are working properly. If the functions do not work properly, repeat steps 1-5 using another code listed under your brand.
- 7 **If your device does not respond, follow steps 1 to 5 with each code listed for your brand. If none of the codes listed for your brand operate your device, or if your brand is not listed at all, try the search method described on page 6.**










Important notes:

- If your Set Top Box is not a standard Foxtel iQ Box, please follow the steps above pressing "sat" instead of "tv" during step 2.
- Most Televisions do not switch on pressing the POWER key. Please try pressing a "number" key or the "TV-text off" key to switch your TV back on.
- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.
- CBL and VAC codes can be set up in "sat" mode.
- Remember to press the correct device key before operating your device.

The Search Method

If your device does not respond to the URC-1669 after you have tried all the codes listed for your brand, try searching for your code. The Search Method allows you to find the code for your device by scanning through all the codes contained in the memory of the URC-1669. The Search Method may also work if your brand is not listed at all.

Example: To search for your TV code:

- 1 Switch your television on (not on standby) and aim your ONE FOR ALL at your TV.
- 2  Press the **tv** key on your URC-1669.
- 3  Press and **hold down** the **magic** key until the red LED underneath the POWER key blinks twice (the red LED will blink once then twice).  **x2**
- 4    Press **9 9 1**. The red LED will blink twice.
- 5  Next, press **POWER**.
- 6  Aim the URC-1669 at your Television. Now press **CH+** over and over, until your Television turns off (everytime you press the CH+ key the URC-1669 will send out a POWER signal from the next code contained in the memory). You may have to press this key many times (up to 150 times) so please be patient. If you skip past a code, you can go to the previous code(s) by pressing the CH- key. Remember to keep pointing the URC-1669 at your Television while pressing this key.
- 7  As soon as your television turns off, press the **MAGIC** key to store the code.

Important notes:











- If your Set Top Box is not a standard Foxtel iQ Box, please follow the steps above pressing "sat" instead of "tv" during step 2.
- Most Televisions do not switch on pressing the POWER key. Please try pressing a "number" key or the "TV-text off" key to switch your TV back on.
- To search for the code for another device follow the instructions above only press the appropriate device key instead of TV during step 2.

Code Blink out

(To find out which code is currently programmed)

Once you have Set-Up your URC-1669, you can blink back your SET-UP CODE for future reference.

Example: To blink out your Television code:

- 1  Press **tv** once.
- 2  Press and **hold down** the **magic key** until the red LED underneath the POWER key blinks twice (the red LED will blink once then twice).  **x2**
- 3    Press **9 9 0**. The red LED underneath the POWER key will blink twice.
- 4  For the first digit **of your four-digit** code, press **1** and count all the red blinks. If there are no blinks, the digit is "0".
- 5  For the second digit, press **2** and count all the red blinks. If there are no blinks, the digit is "0".
- 6  For the third digit, press **3** and count all the red blinks. If there are no blinks, the digit is "0".
- 7  For the fourth digit, press **4** and count all the red blinks. If there are no blinks, the digit is "0". **Now you have your four-digit code.**

Important notes:

- If your Set Top Box is not a standard Foxtel iQ Box, please follow the steps above pressing "sat" instead of "tv" during step 2 to blink out the code programmed in "sat" mode.




Quick Code Reference

Device	Code
sat _____	<input style="width: 25px; height: 25px; border: 1px solid black;" type="text"/> <input style="width: 25px; height: 25px; border: 1px solid black;" type="text"/> <input style="width: 25px; height: 25px; border: 1px solid black;" type="text"/> <input style="width: 25px; height: 25px; border: 1px solid black;" type="text"/>
tv _____	<input style="width: 25px; height: 25px; border: 1px solid black;" type="text"/> <input style="width: 25px; height: 25px; border: 1px solid black;" type="text"/> <input style="width: 25px; height: 25px; border: 1px solid black;" type="text"/> <input style="width: 25px; height: 25px; border: 1px solid black;" type="text"/>




Volume Punch Through

When controlling your Set-Top-Box (e.g. Foxtel iQ Box) you normally need to press the "tv" button first if you wish to control the volume for your Television. The URC-1669 gives you the possibility to punch through TV-VOLUME without pressing the tv mode key. This is only possible if you have programmed the URC-1669 to also control your Television.

To punch through to TV volume while in "sat" mode:

- 
Press and hold down the magic key until the red LED underneath the POWER key blinks twice (the red LED will blink once then twice).
- 
Press 9 9 3.
- 
Then press the tv key and the red light will blink twice.

To cancel the "Volume Punch Through":

- 
Press and hold down the magic key until the red LED underneath the POWER key blinks twice (the red LED will blink once then twice).
- 
Press 9 9 3.
- 
Press the Volume (+) key and the red light will blink four times.

Problem & Solution

Problem:	Solution:
Your brand is not listed in the code section?	Try the search method on page 6.
The ONE FOR ALL does not operate your device(s)?	A) Try all the codes listed for your brand. B) Try the search method on page 6.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Try repeating the Direct Set-Up using another code listed under your brand or start the search method over again to locate the proper code.
Problems changing channels?	Enter the programme number exactly as you would on your original remote.
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the one for all at your device.
The red LED does not blink when you press a key?	Replace batteries with 2 fresh, new "AA" alkaline batteries.

Customer Service

Australia

1 300 888 298

ofa.support@ambertech.com.au

www.ambertech.com.au

www.oneforall.com

TV

A.R. Systems	0037 0373 0556
Accent	0037 0556
Accusound	0860
Acentic	0556
Acer	1339
Acoustic Solutions	1667 1727 1545 1585 1523 1865 1037 1163
Adcom	0625
Admiral	0093 0264
Advent	1613
AEA	0037 0556
AEG	0606 1556 1324 1037 1667 1163 1585 2239 2197 2241
Aftron	0891
Agashi	0264
Agfaphoto	2239
Agora	1585 0037
Aiko	0037 0556 0371 0035 1681 0880 0361 0191 0264
Aim	0037 0556 0753 0208 0706 0698 0634 0606 0499
Airis	1833 0556
Aiwa	0701 1916 1505
Akai	0361 1326 2197 0208 0371 0037 0191 0035 0753 0806 0714 0706 0698 0715 0556 0480 0264 0178 0606 1037 0473 0812 1248 1727 1308 1865 1163 1523 1652
Akashi	0860
Akiba	0037 0556
Akira	2241 0753 0037
Akito	0037 0556
Akura	1770 1687 0714 1709 1667 1037 0037 0556 1645 0668 1585 0264 1982 1983 1363 2239 2059
Alba	1037 1585 0714 0037 1997 0668 0556 0371 0587 0487 0443 2007 1865 1163 2214 1667
Alios	2168
Alkos	0035
Allstar	0037 0556
All-Tel	0865
Amitech	1849
Amstrad	1667 1163 0264 0371 0037 0556 1037 1324 1982
Anam	0037 0556 0650
Anam National	0037 0650 0556
Andersson	1163 1667 1585 0037
Anglo	0264
Anitech	0264 0037 0556
Ansonic	1582 0037 0556 0668 0292
AOC	0625 1588 2111 2214
Apollo	0473
AquaVision	1606
Arc en Ciel	0109
Arçelik	0714 2125 0037 1308
arctic	1652
Ardem	0486 0714 0037 0633 0556 0715
Arena	0037

10

Aristona	0556 0037
ART	1037
Art Mito	1585 1667
Asberg	0037 0556
Astra	0037 0556
Asuka	0264
ATD	0698 0706
Atec	1606
Atlantic	0037 0556
Audiosonic	0037 0820 0556 0109 1308 1681 0714 0715 2059 0264 0486 1983
Audioton	0486 0264
Audioworld	0698 0706
Autovox	1163 1585 1667
AWA	2241 0037 0698 0178 0556 0606 0108 0264 1681 3296
Axxon	0714
Azuki	2239
Baier	1324 2239
Baird	0109 0343 0208 0606
Bang & Olufsen	0565 0620
Base	0780 0698
Basic Line	1667 1163 0037 0668 0556 1037
Bauer	2197 0698 0706 0264
Bauhn	2461
Baur	0535 0195 0512 0037 0556 0191 0361 1505
BBK	1523 1645
Beaumark	0178
Beko	0714 0486 0035 0715 0037 1308 0556 0606 0808 1652 2125
Belson	0698 0706 2241 2032 3296 1667
Belstar	1037
Bennett	0556 0037
BenQ	1562 1523 2214
Bensten	1326 1413
Beon	0037 0556
Beond	1833
Berthen	0668 0556
Bestar	0037 0556
Bestwell	1326
Black Diamond	0820 1037 0556 0753 1163 0587
Black Strip	0035
Blaupunkt	1709 2106 0195 0191 0535 0170
Blu:sens	1849 2241
Blue Media	1606
Blue Sky	0037 1324 1037 0714 1709 1667 0487 0668 0715 0625 1652 0624 0556 0808 1363 1916
BlueDiamond	2106
Blush	1775 1709
Boca	1652
Boman	1324
Bork	1363
BPL	0037 0556 0373
Brandt	0625 0109 0287 0335 0343 0560 1585 1667
Brandt	
Electronique	0287 0335
Brimax	1709
Brinkmann	0037 0556 0668 0486
Briovega	0037 0556
Brother	0264
Bruns	0486
BSR	0361

Bush	1037 2032 1326 1585	Deitron	0037 0556
	2214 2125 1667 0371	Denko	0264
	1556 0714 0037 0668	Denver	0037 1324 0556 0606
	1916 1652 0264 0361		0587 1849 2239 1709
	0487 0208 0698 0706		2139 2197 1770
	0556 1982 1248 1682	Desmet	0037 0556
	0587 1687 1308 2053	Dew	1770
	1983 2241 2239 1865	DGM	2239 2059
	1720 0443 2007 2059	Diamant	0037 0556
	2223 1645	Diamond	0264 0698 0371 0860
Cameron	1523 0556		0820 0896 1681 0706
Camper	0037 0556 0486	DiBoss	0037 0556
Capsonic	0264	Dick Smith	
Carad	0610 0037 0556 0668	Electronics	1326 2241 3296
	1037	Digatron	0037 0556
Carena	0037 0556	Digihome	1667 1163
Carrefour	0037 0556	Digiline	0037 0556 0668
Carver	0170	DigiLogic	0037 0556 1997
Cascade	0037 0556	Digimate	2239
Casio	0037 0556	DigiMax	0891
CAT	1682	Digital Device	1606
Cathay	0037 1727 0556	Digitek	1709
CCE	0037 0556	Digitex	0820
Celcus	1163 1667 1585 0037	Digitor	0037 0556 0888 0698
	1037		0706
Celestial	0820	Digivision	0361
cello	1770	DigiX	0880
Centrex	0780 0891 0698 1702	DiK	0037 0556
Centrum	1037	diVision	2197
Centurion	0037 0556	Dixi	0037 0556
CGE	0074	DL	0891 0780 0037 0587
Changhong	3296		0865 1363 1326
Chimei	1666	DMTECH	1163 1849 2001 2223
Cinex	1556 1982	Domeos	0668 0037 1037
Clarity	1720	DSE	0698 0888 1556 0820
Clarivox	0037 0556		0706 1682 2241 2032
Clatronic	0037 0371 0714 0264		2098 1326 3296
	0556 0606 1324 1163	Dual	0343 0037 0556 1137
Clayton	1037		1667 1037 2032 2241
CMX	3296		1324 1163 1585 0714
Cobolt	0891		2197
Condor	0037 0556 0264	Durabrand	0037 0556 1652 1037
Conia	1687 0754 1645 2032		0714
	0820 1702 1523	Dux	0037 0556
Conrac	0808	D-Vision	0037 1982 2197 2239
Conrad	0037 0556		0556
Contec	0264 0037 0556	DVX	0891
Continental		Dynatron	0037 0556
Edison	0109 2241 0287 0487	Dyon	2241
Cosmel	0037 0556	E.S.C.	0037 0556
CPTEC	0625 1363	e:max	1324 0606
Crosley	0074	Easy Living	1248 1709 1613 1308
Crown	0712 0486 0037 0556		2005 2007 1556 1666
	0487 0714 0606 0715	Easy Touch	2059
	0373 0208 0653 1037	Ecco	0706 0698
	1652 0668	ECG	2197 2239 2125 0037
Curtis Mathes	0093		1037
CWR-Tech	1324	Edison-Minerva	0487
Cyberpix	1667	Elbe	0610 0292 0037 0556
Cytronix	1298		0191 0361
D.Boss	0037	Electrion	1585
Daewoo	0634 1849 2098 2125	Elekta	0037 0556 0264
	0661 0499 0624 0037	Elfunk	1208 1037
	0556 1137 0880 0865	ELG	0037 0556
	0698 0714 0706 2037	Elin	0037 0556 0361
Dansai	0037 0556 0264 0035	Elite	0037 0556
	0208	Elonex	1776
Dantax	0486 1652 1916 0714	Elta	0264
	1037 0606 0715	Emerson	0714 0178 0037 0556
Datron	0625		0371 0361 0624 0486
Datsura	0373 0208		0668
Dawa	0037 0556	e-motion	0865 1709 2106
Daytek	0698 0706 0264	Enzer	0753 0860
Daytron	0037 0556	Erison	1682
de Graaf	0208	Erres	0037 0556
DEC	0860 0891 1326 0896	Etron	0037 0556 0820
Decca	0037 0556 1137	Eurofeel	0264

EuroLine 0037
 Euroman 0264 0037 0556
 Europa 0037 0556
 Europhon 0037 0556
 Eurovision 1163 1667
 Evesham 1667 1248 1606
 Excel 0037 0556
 Excello 1037
 Exquisit 0037 0556
 Fagor 0037 0556
 Family Life 0037 0556
 Fenner 1667 1163
 Ferguson 0625 0335 1037 0287
 0109 0560 0343 2393
 0037 0556 0035 0653
 0108 0361 0443 2007
 1916 2053 1865 2106
 Fidelity 0512 0037 0556 0371
 0264 0361
 Finlandia 0208 0361 0287 0343
 Finlux 0037 0556 0714 1585
 1667 0715 0480 1556
 0473 0606 0808 1248
 1163
 Fintec 1982
 Firstline 0037 0556 0668 0714
 0624 0208 0361 1037
 0808 1363 1163 1308
 Fisher 0208 0361
 Flint 0037 0556 0610 0264
 Foehn & Hirsch 0178
 Force 1667
 Formenti 0037 0556 0486
 Fortress 0093
 Fraba 0037 0556
 Freesat 1636
 Friac 0037 0556 0499 0610
 Frontech 0264
 Fuchsware 0780
 Fujicom 1709
 Fujimaro 0865
 Fujitsu 0853 0037 0556 0361
 Fujitsu Siemens 1666 1298 1248 1163
 0808
 Funai 1817 1394 1037 1666
 1595 0668 0264 1505
 0714 1652
 Furichi 0860
 Futronic 0264 0860 0698
 Future 0037 0556
 Gaba 1037 0037
 Galaxi 0037 0556 0361
 Galaxis 0037 0556
 Garza 0556
 GE 0343 0178 0560 0287
 0109 0335 0625
 GEC 0361 0037 0556
 General 0109 0287
 General Electric 0343 0287
 Genesis 0037 0556
 Genexxa 0037 0556
 Gericom 0865 1606 1298 0880
 0808
 G-Hanz 1681 1363
 GoGen 1163 1667 0037 1037
 1585
 Gold 1833 1770
 Goldfunk 0668
 GoldStar 0037 0178 0556 0361
 0109 0606 0714 0715
 Gooding 0487

Goodmans 0634 1248 2393 1667
 1795 1585 1687 1037
 0624 1983 0037 0499
 0556 1916 0714 0668
 1163 0264 0487 0371
 0343 0035 0480 0560
 0335 0661 0880 1308
 0587 1727 1645 1682
 1720 2053 2223 1523
 1709 0808 1997 2214
 Gorenje 1585 1667
 GP 0753
 Gradiente 0653 0170 0037 0556
 Graetz 0714 0361 0371 0037
 0556 1163 1585 1667
 Gran Prix 2197
 Granada 0037 0556 0226 0108
 0208 0473 0335 0560
 0343
 Grandin 1652 0037 0556 0610
 0714 0715 0668 1037
 0865 0880 2125
 Grundig 0195 0508 1223 2059
 3296 2239 2125 1582
 0443 0191 1687 0535
 1037 0487 0037 2007
 0706 0556 0587 1916
 1308 0178 0343 1667
 2053 1324 1645 1523
 Grunkel 1163 1523
 GVA 1326 2098 2037
 H&B 0808 2001
 Haaz 0706
 Haier 0698 0264 0706 2214
 2241
 Halifax 0264
 Hammerstein 0264
 Hanns.G 1613
 Hannspree 1351 1613 1776 2214
 Hanseatic 0037 0556 0499 0361
 0292 0634 0661 0373
 0714 0808 0486 0625
 2001
 Hantarex 2197 0037 0556 0865
 Hantor 0037 0556
 Harsper 0865
 Harwood 0037 0556 0487
 Hauppauge 0037 0556
 HB 1324
 HCM 0037 0556 0264
 Hedzon 0556 0037
 Hicon 1298
 Hifivox 0109
 Highline 0264 0037 0556
 Hikona 1983
 Hinari 0208 0037 0556 0443
 2007 0487 0264
 Hisawa 0610 0714
 Hisense 1363 2341 2098 0208
 2037 0698 0891 0860
 0780
 Hitachi 1576 2207 1772 1585
 0481 0578 0108 1667
 0744 1037 1687 0634
 0473 0343 2214 1163
 0499 2005 2007 0480
 0443 0037 0556 0109
 0178 1137 0361
 Hitachi Fujian 0108 0037 0556 0860
 0499
 Hitsu 0610
 Höher 0714 1556 0865 1163
 Home Electronics 0606
 Horizont 1617
 Hornyphon 0037 0556
 Hugoson 1666
 Humax 1295 1539

Hypersonic 0361
 Hypson 0037 0556 0714 0715
 0264 1037 0668 0486
 Hyundai 0860 0037 0556 2139
 0698 1326 0753 1681
 1770 0264 0888 1037
 0865 1606 0706 1556
 1163
 Iberia 0037 0556
 ICE 0264 0037 0371 0556
 Ict 0037 1137 0556
 Ideal 1556
 IISonic 1613
 Imperial 0037 0074 0508 0556
 2197 0361
 Indiana 0037 0556
 Ingelen 0487 0610 0714 0361
 Ingo Devices 2239
 Inno Hit 1037 1667 0037 1308
 0556 1163 1585
 Innovation 0037 0556
 Innowert 0865 1298
 Inotech 0820
 Inspira 1324 1556
 Interactive 0037 0556 0512 0361
 0109
 Interbuy 0037 0264 0512 0556
 Interfunk 0037 0556 0512 0361
 0109
 Internal 0037 0556 0624 0499
 Intervision 0037 0371 0486 0487
 0264 0556
 Irradio 0037 0556 0371 0714
 Isis 1163 1037
 Isukai 0037 0556
 ITS 0037 0371 0264 0556
 ITT 2125 0480 0361 0473
 0208 0610 1523 1163
 ITT Nokia 0361 0473 0480 0208
 0606 0610
 ITV 0037 0264 0556
 Jay-tech 2239
 JDV 1982
 JEC 0035
 JGC 1709
 JMB 0037 0499 0634 0556
 0443 2007
 JNC 1702 0896
 Jocel 0712
 JTV 0860
 Jubilee 0556
 JVC 0653 1795 1818 1163
 2118 0606 1653 0371
 0093 0650 3296 2005
 Kaisui 0037 0556
 Kambrook 0264
 Kapsch 0361
 Karcher 0037 0556 0610 0264
 0714 1556 0606 1982
 2125 1308
 Kathrein 0556 0037 0880
 Kawa 0371
 Kendo 0037 0610 0556 0512
 1585 1037 0486 1667
 1163 1137
 Kenmark 2393
 Kennex 1037
 Keydo 1702
 Keymat 1326 1413
 Kingsbrook 1037
 Kiota 0371
 Kiton 0556 0037 0668
 Kneissel 0037 0610 0499 0556
 0292
 Kobra 1298
 Kolster 0037 0556

Konka 0037 0556 0371 0714
 0587 0754 0606
 Kontakt 0487
 Korpel 0037 0556
 Kosmos 0037 0556
 Kotron 0264
 Küppersbusch 0037 1667
 Kuro 0373
 Kyoshu 0264
 L&S Electronic 0865 0714
 LaSAT 0486
 Lavis 1037 0037
 Lecson 0037 0556
 Lenco 0037 0556 0587 1037
 1983
 Levis Austria 0037 0556
 Leyco 0264 0037 0556
 LG 2182 1423 1663 0178
 0037 1305 1842 0714
 1637 0606 0556 0715
 1681 0698 0706 1859
 1667
 Liesenkötter 0037 0556
 Lifetec 0037 0668 1037 1137
 2001 0512 0556 0714
 0264 1248
 Linetech 1163
 Linsar 1585 1667 1163 1037
 Lodos 1037 1667
 Loewe 0512 0633 1884 0292
 0556
 Logik 0698 0706 1865 1037
 0880 0264 1585 1702
 1687 1645 2241 0037
 0371
 Logix 0668
 Luker 1982
 Luma 0037 0556
 Lumatron 0037 0556 0361 0264
 Lumenio 0037
 Lux May 0037 0556
 Luxor 0480 0361 0208 0473
 1037 1667 1163
 LXI 0178
 Madison 0037 0556
 MAG 2239
 Magnavox 0037 0556 0780 0753
 Magnum 0714 0037 0556 0715
 1556
 Mandor 0264
 Manesth 0037 0556 0264 0035
 Manhattan 0037 0556 0668 1037
 Manta 1702
 Maqma 1298 1702 1709 1606
 Marantz 0037 0556
 Mark 0037 0556 0714 0715
 Marks & Spencer 1770
 Mascom 1556 0556 0037 2125
 1585 2197
 Mastec 1997
 Master's 0499 0037
 Masuda 0371 0264 0037 0556
 Matsui 1163 0443 1037 2007
 1916 0037 0195 0556
 0487 0371 0035 0208
 0191 0335 0714 1666
 0880 1667 0744
 Matsushita 0650
 Matsuviana 0587
 Maxam 0264
 Maxdorf 0698 0706 0264
 Maxim 1982 1556
 Mediator 0037 0556

Medion	0714 0808 0037 0668 0556 0512 2239 1137 0698 0706 1037 1248 0880 1916 1556 1667 2001 1849 1163	Nikkai	0037 0556 0264 0035 1667
Megas	0610	Nikkei	0714 2197 1585 1667
Megatron	0178	Nikko	0178
MEI	1037 0037 0556	Nintaus	0891
Melectronic	0037 0512 0109 0343 0480 0287 0556 0624 0634 0361 0191 0195 0661 0714 1652	Nogamatic	0109
Memorex	0178 0650	Nokia	0361 0480 0473 0208 0606 0610 0109
Memory	1983	Nordmende	0560 0891 0109 0287 2001 0343 0195 0037 0556 0335 1248 0714 1413 0443 2007 1585 1667 1163 1308 0625
Mercury	0037 0698 0264 0556 0706	Normerel	0037 0556
Merritt	0361	Nortek	0668
Metz	1533 0746 0447 1163 0195 0535 0191 0037 0556 0587 0668 1037 1637	Novak	0037 0556
MGA	0178 0037 0556	Novatronic	0037 0556
Micromaxx	0037 0556 0668 1037 0808 1324 2001 0714	Novex	1523
Microspot	1614	Novita	1585
Microstar	0808	Nurnberg	0361
MicroTEK	0820 0698 0860 0706 0264	Nu-Tec	0698 0820 0037 0556 0706 0264
Mikomi	1667 1163 0744 1585 0037	O.K.Line	1037 1324 1556
Minato	0037 0556	Oceanic	0361 0208 0473 0480 2001
Minerva	1248 0487 0535 0195 0191 0108	Odeon	0264
Ministry of Sound	1667	Odys	1795 2239 2241
Minoka	0037 0556	OK.	2239
Mirai	1666 1852 1651 1505	Okano	0037 0556 0264
Mitsai	1556	OKI	1037 2125 1667 1585 1308 1163
Mitsubishi	0108 0512 0093 0178 0037 0535 0556 0208 1037	Ölevia	1588
Mivar	0609 0292	Omega	0264
Moree	0037	Omni	0780 0891 0698 0706
Morgan's	0037 0556	Onei	1667
Motorola	0093	Onimax	0714
mp man	3296	Onix	0698 0706
MTC	0512 0361	Onn	1709 1556 1667 2125 0556 1770
MTlogic	0714 1308	Onwa	0371
Multitec	0037 0556 0486 0668 1037 1556 1982	Onyx	1709 1770
Multitech	0486 0037 0556 0264	Opera	0037 1308 0556 0714 1585
Murphy	2005 1849 0443 2007 1667 1163	Optimus	0650
Musikland	0037 0556	Optonica	0093
Mx Onda	1687 1983 1645	Orava	1037 1667 1163
MyCom	0178	Orbit	0037 0556
Myryad	0556 0037	Orbitech	2422
Mystery	3296	Orion	2007 2032 2005 0037 0443 0714 2108 0556 0264 1916 0880 2001 1037 0808
NAD	0178 0865 0361	Orline	0037 0556
Naiko	0037 1982 0606 0556	Ormond	0668 1037 0037 0556
Nakimura	0037 0556	Osaki	0264 0037 0556
Narita	1982	Osio	0037 0556
NAT	0226	Osume	0037 0556
National	0226	OTIC	1687 1645 1983
NEC	0170 2461 0587 1367 1775 0037 0556 0499 0653 0661	Otto Versand	1505 0093 0512 0037 0556 0535 0195 0191 0361 0109 0226 0343 0373
Neckermann	0037 0191 1505 0556 0512	Pacific	0037 1916 0556 1137 0714 1037 0443 1324 2007
NEI	0037 0556 0371 1037	Palladium	0037 0714 1137 0191 1505 0556 1982
NEO	0754 1324	Palsonic	0698 2461 0264 0037 0706 0556 1326 1681 1795
Neon	1770 0753	Panache	1585
Neovia	0865	Panama	0264 0037 0556
Netsat	0037 0556	Panasonic	1636 0650 1650 0226 0361 0853 0037 0556 0108
Neufunk	0037 0556 0610 0714	Panavision	0037 0556
New Tech	0037 0556 0343	Papouw	0037 0556
Nikai	1163		

Pathe Cinema	0292	Rectiligne	0037 0556
Pathe Marconi	0109	Red	2032
Perdio	0037 0556	Red Star	0037 1556 0556
Perfekt	0037 0556	Rediffusion	0361
Philco	0074 0037 0556	Reflex	0037 0556 1037 0668
Philips	0556 1744 1506 0037	Relisys	0865 1298 1585 1645
	0639 2015 1583 1867	Reoc	0714 0624 0634 2197
	0605 0343 0361 2214	Revox	0037 0808 0556
Phocus	1308 0714 1652	Rex	0264
Phoenix	0037 0556 0486	RFT	0292 0264 0037 0556
Phonola	0037 0556		0486
Pilot	0556 0037 0712 0706	Ricoh	0037 0556
	1709	Rinex	0698 0264 0706
Pioneer	1260 0760 1457 0170	R-Line	0037 0556
	0679 0037 0556 0343	Roadstar	1037 0715 0037 0556
	0361 0109 0287 0486		0714 0668 0264 1916
	0512		1326
Pionier	0486	Rodex	0037 0556
Plantron	0037 0556 0264	Rolsen	0037 0556 2098 2037
Playsonic	0714 0037 0715 1652		2001
Polar	0037	Rowa	0264 0698 0712 1441
Polaroid	1523 1667 1720 1645		0706 0587 0037 0556
	3296 1687 2125	Royal	0606
Policom	0109 0361 0074 0535	Royal Lux	0335
Portland	0624	Rukopir	0556 0037
Powerpoint	0487 0037 0556 0698	Saba	0625 0109 0560 0343
	0706 1770		0287 0361 0335 0650
Pragma Digital	0808		0714 1588 1585
Prandoni-Prince	0361	Saga	2197
Premier	0264 0891	Sagem	0610 0830 0618
President	0860	Saisho	0634 0264
Prima	0264	Saivod	0037 1982 0556 1163
PrimeView	1606		1556 0668 0712 1037
Princess	0698 1326		1667
Prinston	1037	Salora	0361 0373 0208 0480
Prinz	0361		1556 2125 2197 2001
Pro Vision	0499 0037 0556 1037	Salsa	0335
	0714 1324	Samsung	2051 0812 0618 0587
Profex	0361		1458 1619 0556 1249
Profilo	1556		1312 2103 2137 1630
Profitronic	0037 0556		0644 1235 0037 1584
ProLine	0634 1727 1613 1037		0264 0718 0178
	1545 0625 0037 0556	Sandström	2197
	2223 2393 1163 1585	Sansui	0037 1682 1709 0556
	1667		0706 0371 0888 0753
Prosonic	0037 0556 1865 0880		0698 0264 0806 0714
	0371 0668 0714 2139		1248 1681 1556
	2001 1324 1770 2106	Sanyo	0208 1208 0292 0373
	1709 1163 0606 2197		0037 0556 0486 0170
	2100 2125 1545 1849		1037 1667 1163 1585
	0715 1523		2461
Protech	0037 0556 0264 0668	Save	0037 0556
	0486 1037	SBR	0037 0556
Proton	0178	Schaub Lorenz	2241 0714 0361 2197
Proview	1687 1645		0606 0486 1324 1363
PVision	2001		2100 1667 2125 1308
Pye	0037 0556		1163 1585
Quadro	0753 1326 0556 0037	Schneider	1137 0037 0556 1585
	1667 1163		0343 0371 0361 0668
Quartek	1606		1037 0714 0624 1982
Quasar	0650 0865		1916 1617 1324
Quelle	0037 1505 0109 0512	Schöntech	1037
	0535 0191 0361 0074	Scott	1983 0178 1523 1795
	0668 0556 0195 0264	Sears	0178
	1037	Seaway	0634
Radialva	0109 0037 0556 0287	Seelver	0556 1037 0037
Radiola	0037 0556	SEG	1037 2239 1709 0037
Radiomarelli	0037 0556		1163 0556 0668 0487
Radionette	0714		0264 0634 0624 1667
RadioShack	0037 0556 0178		2125 1523 1585
Radiotone	0037 0556 0668 0264	SEI	1505 0037 0556
	1037	Sei-Sinudyne	1505 0037 0556
Rank Arena	0753	Seitech	1324
RCA	0625 0093 0560 0335	Selecline	3296
	0343 0753	Seleco	0371 0264
Realistic	0178	Sencor	0714 2239 2197
Recor	0037 0556	Sense	1849

Sentra	0035	T+A	0447
Serie Dorada	0178	Tandberg	0109 0361
Serino	0610 0093 1193	Tandy	0093
Sharp	1659 0093 1193 2214	Targa	0618
	1587 1819 0653 1163	Tashiko	0170
Shinelco	2241	Tatung	1720 0037 1248 1556
Shintoshi	0037 0556		0556 1324 1916
Shivaki	0037 0556 0443 2007	Taurus	2197
	0178	TCL	1916 0625
Show	0698 0264 0706 0037	TCM	0714 0808 2001 1308
Siemens	0191 0535 0195 0037	Teac	0698 1645 2168 0037
	0556 0361		0712 1037 0556 1795
Siera	0037 0556 0587		0512 0668 0706 0264
Silva	0037 0556 0361		0624 0178 0170 0714
Silva Schneider	0753 1556 2125 2197		1667 1617 1363 0587
Silver	0037 0361 0556 0715		1770 1709 2032 2241
SilverCrest	1037 0037 0556		1983
Singer	0806 0698 1556 0037	TEC	0335 0037 0556 0361
	0556 0335	Tech Line	0037 1585 0556 0668
Sinotec	0606 0698		1163
Sinudyne	1324 1667 0361 1505	Technica	1982
	0037 0556 0606	Technical	1667
Sky Media	0037 0880 1614 0178	Technics	0650
	0556 1613 1606 1775	Technika	2106 2032 1865 2168
	1709 0661 0865		2059 1849 1667 1983
Skysonic	0753		1585 2125 2197 1982
Sliding	0865 0880 1324	TechniSat	0037 0556 2422
SLX	0668	Technisson	0714 1652
Smaragd	0487	Techno	1585 1037
Soemtron	0865 1298	Technol Ace	0698 0264 0634
Solavox	0361 0037 0556	Technosonic	0625 2032 1982 0499
Sonic	0753 1702		0556 1324 0880 0037
Soniko	0037 0556		1326 0714
Soniq	1298 1702	Technotrend	1702
Sonitron	0208	Techvision	1709 2032
Sonneclair	0037 0556	Techwood	1163 1037 1667
Sonoko	0037 0556 0264	Tecnimagen	0556
Sonolor	0208 1505 0361	Teco	1523
Sontec	0037 0556	Tedelex	0698 0706 0606 0037
Sontech	1983		0208 0891 0587 0556
Sony	1825 1505 1651 1751		0806 1709 1681 0264
	1625		1682
Sound & Vision	0037 0556	Tek	0820 0037 0698
Soundesign	0178	TELE System	2125 1585 1037 0037
Soundwave	0037 0556 0715		2241 1667
SOVOS	2239	Teleavia	0109 0287 0343
Soyo	1709	Telecor	0037 0556
Standard	0037 2032 0556 1682	Teledex	0037
	1037 1709	Telefunken	0625 2239 1667 0560
Starion	1037		0808 0587 0074 0109
Starlite	0037 0556 0264		0698 0712 0343 0820
Stern	0264		0896 0754 0780 0891
Stevison	1982 1556		0287 0335 1681 0753
Strato	0037 0556 0264		0706 0037 0556 0486
Strong	1163 1667 1037 0037		0714 1556 1585 1588
	0556		1163
Sungoo	1248 2037	Telefusion	0037 0556
Sunic Line	0037 0556	Telegazi	0037 0264 0556
Sunkai	0610 0037 0556 0487	Telemeister	0037 0556
	0865 1523	Telesonic	0037 0556
Sunny	0037 1617	Telestar	0037 0556 1849
Sunstar	0371 0037 0556 0264	Teletech	0037 0556 0668 1037
Sunstech	2001 2241	Television	0037 0556
Sunwood	0037 0556	Telstar	1702
Supersonic	0208 0556 0698 0264	Tempest	0037 0556 0264
	0037	Tennessee	0037 0556
SuperTech	0037 0556	Tensai	0037 0556 0371 0715
Supervision	0698 0264		1037
Supra	0178 0037	Tesla	1037 0037 0668 0714
Susumu	0335 0287		1652 0715 1137 0371
SVA	0698 0264 0208 0706		0753 0556 0610
Svasa	0698 0208 0706 0264	Tevion	1248 1298 0556 1645
Swedex	1606		1556 1667 2032 0668
Swisstec	1775 1709 1614 1606		0808 0865 2100 1137
	1613 0880 0865 1776		1687 1037 2241 1585
	1849 2059		0714 0037 2125 2197
Sysline	0037 0556		1523

Thes 1849
 Thomson 0625 0560 0343 0287
 0109 0335 1588 0037
 0556
 Thorn 0108 0109 0343 0361
 1505 0074 0499 0535
 0037 0556 0335 0512
 0035
 Thorn-Ferguson 0108 0109 0361 0499
 0335 0035
 Time 1702 1997
 TMK 0178
 Tokai 0037 0556 0668 1037
 Tokaido 1037
 Tokyo 0035
 Tongtel 0780 0587
 Top Show 0698 0264 0706
 Topline 1037 0668
 Toshiba 1508 0508 0035 1667
 0714 0718 1582 0195
 0191 0618 1916 0037
 1556 0650 1037 1163
 1652
 Tosumi 1982 1770
 Toyoda 0371 0264
 Trakton 0264
 TRANS-continents 0668 1037 0865 0556
 0037 0486
 Transonic 0037 0556 0587 0512
 0264 0698 0712 1363
 1326 0780 0706
 Triad 0037 0556
 Trio 1687 1248 1645
 Tristar 0264
 Triumph 0556 0037
 TVE 2239
 TVTEXT 95 0556
 Uher 0037 0556 0486 0480
 Ultravox 0037 0556 1585
 UMC 1606 1775 1709 1614
 1849 2059 2106 2168
 Unic Line 0037 0556 0473
 Uniden 1585 1037 0037 1667
 1163
 United 0714 1983 0037 0715
 0556 1916 1037 0587
 1982 2241 1652 1849
 3296 1770 0508 1523
 2125 1163
 Unitek 1709
 Unitron 1681
 Universal 0714 0037 0556
 Universum 0808 1037 0037 1163
 0668 0480 0195 0473
 1667 0535 0361 0512
 0264 0556 0074 1505
 0109 0170 0618
 Univox 0037 0556
 V7 Videoseven 0178 0880 1666 0618
 1651 1505
 Vanguard 0037 0556
 Venturer 1727 1545 1865
 Venus 1326
 Vestel 1037 1163 1585 1667
 0037 0668 0556
 Vexa 0037 0556
 Victor 0653
 Videocon 3296
 VideoSystem 0037 0556
 Vidtech 0178
 ViewSonic 1588 2111
 Vision 0037 0264 0556
 VisionPlus 2106
 Vistar 0361
 Vistron 1363
 Visual Innovations 2106

Vivax 1326 1308 1617 1702
 0037 1709
 Vivo 2032 2100
 Vortec 0037 0556
 Voxson 0037 0556 0178 2197
 Vue 1236
 Walker 1667 1163 0037 1037
 1585
 Waltham 0287 0037 0556 0668
 0109 1037 0443 2007
 Watson 1037 1248 0556 0037
 0668
 Watt Radio 0486
 Wega 0037 0556
 Wegavox 0037 0556 1667
 Welltech 0714 1652
 Weltblick 0037 0556
 Weltstar 1037
 Weston 0037 0556
 Westwood 1585
 Wharfedale 0896 1983 1613 1667
 1324 0891 0860 0698
 0706 0037 1037 1681
 0714 0556 1556
 White
 Westinghouse 0037 0556 0624
 Wilson 0556
 Windsor 0668 1037
 Windy Sam 0556
 Wintel 0714
 World-of-Vision 0880 0865 1298 1606
 XDome 0508
 Xenius 0634 1667 1585
 Xiron 1983 1037
 XLogic 0698 0860 0706
 XMS 1441
 Xomax 1770
 Xoro 1324
 Xrypton 0037 0556
 Yakumo 1613
 Yamaha 0650 1576
 Yamishi 0037 0556
 Yokan 0037 0556
 Yoko 0037 0556 0264 0373
 YU-MA-TU 0037
 Yüsmart 1613
 Zenith 0624
 Zepto 1585

SAT

@sat 1300
 @Sky 1334
 ABSat 1323 0713
 Acoustic Solutions 1284
 ADB 0887 2553 1473 1492
 2152 2367
 Adcom 0200
 AGK 2139
 Agora 1284
 Airis 1659 1993
 Akai 0200
 Akura 1626
 Alba 2296 1284 1659 0713
 2034
 Allsat 0200
 AllTech 0713
 Allvision 1232 1334
 Alpha 0200
 Altech UEC 1959 2097 1960 2059
 Amitronica 0713
 Ampere 0396 0132

Amstrad	0132 1693 0847 0885
	1175 1662 2139 0396
	0713 0742 0501
AMTC	1993
Anglo	0713
Ankaro	0713
Ansonic	2418
Antiference	1284
Apro	1672
Arcon	0132
Arena	1736
Armstrong	0200
Arnion	1300
ASA	0299 0740
Asat	0200
ASCI	1334 0114
Asda	1284
ASLF	0713
AssCom	0853
Aston	1129
Astra	0713
Astratec	1743 1929
Astell	0885 1986 2418
Astro	0133 0173 2026 0501
	0658 1099 1100 0200
Atlanta	2418 1993
Atlantic Telephone	1333
Audiola	2418
Audioline	1429
Aurora	0879 1333 1433
Austar	1459 0879
Austriasat	1195 1197
Auvisio	2531
Avalon	0396
Avanit	0299 1631
AWA	1659
Axil	1777 1993 1659 2418
Axis	1111
Axitronic	1626
B.net	1672
B@ytronic	0299 0740
Balmet	1232
Base	1718
Belson	2418 2139 1993
Best Buy	1993 2139 2728 2418
Beyonwiz	2379
Black Diamond	1284
Blaupunkt	0173
Blizoo	2145 1736
Blue Sky	0713 0885
Boca	0132 0713 1232 2026
	2308 2458 2533
Boshmann	1413 1631
Boston	0132
Boxer	1458 1957 1692 2443
Brainwave	0658 1672
British Sky	
Broadcasting	1662 1175 0847
Broco	0713
BSkyB	1662 1175 0847
BT	1176
BT Vision	1176
Bubu Sat	0713
Bush	1284 1626 1672 2418
	1645 1743 2376 1291
	0742 1935 2034
Cablecom	1195 1197 1545
Cabovisão	1300 1631
Caiway	2443
Cambridge	0501
Canal Digitaal	0853 1499
Canal Digital	0853 1780 1004 2553
	1334
Canal Plus	2107 2657
Canal+	0853 2107 2657 1722
	1986 1232
CanalSat	2107 2657 0853

CanalSatellite	0853 2107 2657
CDV	1993
CGV	1413 1567 2034 1232
	1986
Challenger	1956
Cherokee	1323
Chess	1334 0114 0713 2026
	1626
Chili	1718
CityCom	1176 1232 0299 1777
	0658
Clarke-Tech	1806
Clatronic	1413
Clayton	1626
Clemens Kamphus	0396
Cobra	0396 2531 2728
Colombia	0132
Columbia	0132
Com Hem	1176 1915 2357
Comag	1232 1413 2026 0132
	2101 2308 2533 2458
Comsat	1413
Commwell	1956
Connexions	0396
Conrad	0573 0501 0132
Continent	1986
Coship	1672
Crown	1284
CS	1631
Cyfra+	1076 2593 1409 0853
Cyfrowy Polsat	0253 0853 1409
Cyrus	0200
Daeryung	0396
Daewoo	0713 1743 1111
DAK	1993
Dantax	1626
D-box	1114 0723
Delta	1176 2443
Denver	2418
DGTEC	1631 1718
Digenius	0299 0740
Digi	2026 1195 1197 1300
Digi Raum	
Electronics	1176
Digitality	1334
DigiFusion	1645 1743 1929
Digihome	1284 2034 1935
Digiline	2273
DigiLogic	2034 2241 1993
DigiMax	2273
DigiQuest	1473 1300 1631
DigiSat	1232
Digital	2308 2273
Digital Vision	1929
Digital+	0853
DigitAlb	1232
DigitalBox	1631 2540 1100 1886
Digitel+	1659
Digittrade	1659
DigiTurk	2097 1076
Dikom	2531
Dilog	1780 1957
DiPro	1473
Distratel	0885
Distrisat	0200
Diunamai	2531
DNA	2357 1780 1957 1176
	2144 1545 1323
DNT	0200 0396
Doro	1672
DRE	1176
Dream	
Multimedia	1237 1923 1652
DSE	2280 2418
DStv	0879 2059 2060 1959
	1960 1333 1433
Dual	2034

Durabrand	1284 2241 2034
DVX	1993
Echostar	1200 0853 0396 0713 1323 1473 1409
Eco-Star	1413
Edision	1631 2306 2712
Einhell	0132 0713 0501
Elap	0713 1409 1611 1129 1567 1413
Elbe	2418
Electron	1956
Elless	0740
Elsat	0713
Elta	0200 1659
Emtec	1659
Energy Sistem	1631 2418
Engel	1777 0713 1672 1993
Etisalat	2443
Eurieult	0885
Europa	0501 0200
Europhon	0299 0132 0713 1334
Europsat	1413 1611
Eurosat	1567 1886
Eurosky	0132 0299 0114 0501 0740
Euro-Vox	0744
Eutelsat	0713
Eutra	0740 0299
Evesham	2034
Evolve	1993
F&U	2139
Fagor	1611
FaVal	1631
Fenner	0713
Ferguson	1291 1743 1929 1935 2034 1284
Fidelity	0501
Finepass	1780
Finlux	1626 2034 0573 1232 1284
FinnSat	0740
Flair Mate	0713
FMD	1413 0114
FoneStar	1777
Foxtel	1356 1459 0879 1176
FPE	1993
Free Wave Technology	1743
Freecom	0501 0173
Freesat	2376 1692
Freesat+	2443
Fte Maximal	0713 1886
Fuba	0396 0173 0573 0299
Fuji Onkyo	1631 2728 2101
Galaxis	1111 1176 0853 0879
Galaxy	1956
General Satellite	1176
Geser	1631
Get	1004
Globalteq	2145
Globo	2273 1626 1429 1334 2026 0740
Go	1780
GOD Digital	0200
Gold Box	0853
Gold Vision	1631
GoldMaster	1334 1722
Goodmans	1284 2034 1291 2376 1743 2296
Gradiente	0887
Gran Prix	0740
Grandin	1626
Grococ	1409
Grundig	0173 0847 2367 1291 1284 2376 1672 0879 0885 0853 0501 1780 2034

Haier	2418
Hallo	1626
Hama	1567
Handan	1780 1957
Hanseatic	1099 1100
Hänsel & Gretel	0132
Hauppauge	1672
HB	1736
HE@D	2183
Hills	1232
Hirschmann	0396 1886 1111 2026 0173 0573 2308 0299 1232 0501 0740
Hitachi	2034 1284
HNE	0742 1232 0132
Homecast	1680 1736
Houston	0396
Humax	0215 1176 1232 1808 1427 1915 2144 1882 1788 1675 1743 2357 2443
Huth	0132
Hyundai	2034
i-Box	1652
i-CAN	2367
Icecrypt	1631
ID Digital	1176
ID Sat	2145 1334 1631
Illusion Sat	1631
Image	1993
Imagin	1195 1197
Imperial	1429 1334 1099 1100 1197 1195 1351 0200 1672 1631
iNETBOX	1652
Ingelen	0396
Inno Hit	1626 2728
Intek	2204
International	0132
Interstar	2200
Inves	1993 1743
inVion	2418
iotronic	1413 0132
i-SET	1567
Isis	1284 2034
ITI Neovision	2152
ITT	2418
ITT Nokia	0573 0723
Jaeger	1334
Jepssen	2204
JVC	1284
Kabel Deutschland	1195 1197 1882 2443 1915 1672
KabelBW	1882 1915 1195 1197 2176 1176 1429
KabelNoord	2443
Kamm	0713
Kaon	1004 1300
KaTelco	1111
Kathrein	2569 1561 0707 1567 0658 0249 1717 0114 0173 0200 0713 0742 1323
Kendo	1284
Kenwood	0853
Key West	0132
Kiton	0114
Kocmoc TB	1333
Kongque	1300
König	1631 1567
Koscom	1956
KPN	1986 1545
Kreiling	0658 0249 0114 1626
Kreiselmeyer	0173
Krystel	1284
K-SAT	0713
Kyostar	0132

L&S Electronic 0132 1334
 Labgear 0744
 LaSAT 0132 0299 0740 0173
 Lauson 2531
 Legend 1718
 Legend Digital 1718
 Leiker 2728
 Leiko 1626
 Lemon 1334
 Lenco 0713
 Lennox 1611
 Lenson 0501
 Lexus 0200
 LG 1414
 Lifesat 0132 0299 0713
 Linsar 1284
 Listo 1626
 Liwest 1195 1197
 Lodos 1284
 Logik 1284 2441 2034
 LogiSat 2026 2458
 Lorenzen 0299 0742 2026 0132
 Lowry 1284
 Luxor 1935 2034 0573 0501
 M vision 2273
 Macab 0853
 Manata 0713 0132
 Manhattan 1300
 Maplin 2034
 Marantz 0200
 Marks & Spencer 2441
 Mascom 1680
 Maspro 0713 0173
 Matsui 1626 0173 1743 1929
 1284 0200
 Maximum 1334 2552 1986
 Mediabox 0853
 Mediacom 1206
 MediaSat 0501 0853 2107
 Mediaset 2367 1427 1473
 Medion 1232 0299 0713 0132
 1626 1334 0740 2026
 Medison 0713
 Mega 0200
 Megasat 1631 1886 0740 0299
 2034 1284
 Metronic 1284 1659 1935 0713
 1631 2418 0132 0885
 1993 1986 1413 1672
 Metz 0173
 MiCO 1993
 Micro 2308 0501 0713
 Micro electronic 0713 2308 2458
 Micro Technology 0713
 Micromaxx 0299
 Microstar 0299
 Microtec 0713
 Morgan's 0132 0713 0200 1232
 1409
 Motorola 0856 1473
 Multichoice 2059 0879 1959 1960
 2060 1333 1433
 Murphy 2034
 Mx Onda 1659
 Myryad 0200
 Mysat 0713
 MySky Italia 1693
 MySky
 New Zealand 1356
 N 2152
 NanoXX 2204 1631
 NC+ 2593
 Nekkasant 0744
 Neom 1993
 Neosat 2273
 Neotion 1334
 Netgem 1322

Neuf TV 1322
 Neuhaus 0501 0713
 Neuling 1232 0132 2458 2026
 Neusat 0713
 Nevir 1659 2728
 New Line 1993
 Newton 0396
 NexPRO 1631
 Next 2200
 NextWave 1956
 Nikko 0713 0723 0200
 Noda Electronic 0885
 Nokia 1114 1023 0723 0853
 0573
 Noos 0853
 Nordmende 1611
 Nova 0879 1959 1960 2059
 2060 1333
 1631 2531
 NPG 1692
 NTV Plus 1692
 Numericable 0853 0099
 OctalTV 1429
 OKI 1567
 Omni 1993
 Onn 1284 2034
 Openbox 1662 1956
 Opensat 1956
 Opentech 2525
 Opentel 1232 2525
 Optex 1777 1232 1993 0114
 0713 1611 1626 1413
 Opticum 2273
 Optus 1356 0879 0853
 Orbis 1334 1232
 Orbit 0215
 Orbit Showtime
 Network 1959 1960 0879
 Orbitech 1195 1099 1100 1197
 0200 0501 0114 1351
 Orion Express 1986
 Orton 2273
 P&T Luxembourg 1322
 P/Sat 1232
 Pace 1175 1693 1717 2097
 2593 2657 1356 0847
 2059 1662 2060 1323
 0887 1682 0200 0853
 1284
 Pacific
 Packard Bell 1111
 Palcom 0299 1611 1409
 Palladium 0501 0396
 Palsat 0501
 Panasat 0879 1959 1960 1333
 Panasonic 0847 1304
 Panda 0173
 Patriot 0132
 peeKTON 1993 2418
 Philips 0099 2097 2107 2176
 2593 1076 1114 1499
 0853 0133 0200 1672
 1743 0173 1429
 Phoenix 2418 1956
 Phonotrend 1200
 Pino 1334
 Pioneer 0853
 Planet 0396
 PMB 1611 0713
 Polytron 0396
 Power Sat 1886
 Preisner 0132 0396
 Premiere 1114 1915 0723 1176
 1195 1100 1882 1675
 1788 0249 1111 0658
 1717 2176 1499 1197
 Premium 1736
 Primacom 1111
 Pro Basic 0853 2531

ProLine	1284 1659
Prosonic	0742
Quadral	1323
Quelle	0742 0299
Radiola	0200
Radix	0396
RCA	1291
RFT	0200
RiksTV	2367 1692
RIO Media	1780
Roadstar	0713 0853
Rollmaster	1413
Ross	2540
Rover	0713
Rownsonic	1567
SAB	1956 1300 1631
Saba	2205 0885
Sagem	2107 2553 1114 1690
	1692 1004
Sagemcom	1692
Saivod	2418
Salora	1232
Samsung	2176 1662 1693 1458
	1206 0853 1682 0253
	1175
Sansui	1545
Sanyo	1626
Sappa	2204
SAT	0501
Sat Control	1300
Sat Industrie	1611
Sat Partner	0501
Sat Team	0713
SAT+	1409
SatCatcher	1956
Satec	0713
Satlink	2273 1567
Satplus	1100
SatyCon	1631
Schaub Lorenz	2034 2418
Schneider	1206
Schwaiger	2533 1334 1631 2458
	0740 0885 1111 1429
	1672 2308 0132
SCS	0299
Sedeia	
Electronique	0132 1626 0114
Seeltech	1993
Seemann	0396
SEG	2235 1626 0742 0114
	1993 1659 1284 2034
Septimo	0885
Servimat	1611
ServiSat	0713
Set-One	2728
SFR	1322
Shark	1631
Sharp	2034 1935
Sherwood	1611 1409
Siemens	0173 1626 1657 1334
	1429 2418 1672
Sigmatek	2139 2418
SignalMAX	1956
Silva	0299
Silva Schneider	0740
SilverCrest	2026 2101 2308 2458
Simz	2241
Skantin	0713
SKR	0713
SKT	0132
Sky Deutschland	1114 1915 0723 1197
	1176 1195 1100 1882
	1675 1788 1499 1111
	0249 0658 1717 2176
	0099 1351 2443 2357
Sky Italia	1693
Sky New Zealand	0856 0887 1356

Sky UK	1662 1175 0847
Sky+ UK	1175 1662
Skylink	1986 1722 2443 1631
	2034 1545 1195 1197
	1680 1957
Skymaster	1409 1611 0713 1200
	1334 1567 2205 1545
	2409 2728 2241
Skymax	0200 1413
Skypex	0299 0740
skyplus	2026 1232 1334 1175
	0740
SkySat	0713 0501 0114
Skyworth	1631
SL	2026 0132 0742 0740
	1672
SM Electronic	0713 1200
Smart	0132 1631 0299 0396
	1232 0713 1413 2285
	0740
Sogo	2139
Sonera	1780 1957
Soniq	1567
Sony	0847 1558 0639 0853
SR	0132
Star Sat	0132
Star View	2145
Starcom	0114
Starland	0713
Stream System	1300
Strong	1409 0713 2235 1626
	2418 0853 1284 1300
	0879 1473 0744 1993
	2034 1806
STV	1986 2145 1736 1176
Sunny	1300
Sunsat	0713
Sunstar	0132
Sunstech	1993 2139 2418
Supratech	1413 2139
Systec	0132 1334
Sytech	2139 2418
S-ZWO	1722
TBoston	2418 1659 2139
TBS	1284
Teac	1322 1957
Tecatel	1200
Technika	2034 2441 1284 1672
	1626
TechniSat	1195 1197 2540 1100
	1099 0501 1351 1322
	0200 0114 0396
Technosat	1206
Technosonic	1672
Technotrend	1429 1672
Technowelt	0885 0132
Techwood	0114 1284 1626 2034
	1935
TELE System	1611 1409 0396 1993
Tele2	1195 1197
Telecom	0713
Teleka	0396 0501
Telestar	0501 1099 1100 0114
	0200 1429 1334 1351
	1626 1672 1195 1197
	2540
Teletech	0114
Televés	0501 2101 0132 1300
	1334 1409
Telewire	1232
TelSKY	2540
Telstra	1356
Tesla	1626
Tevion	1672 1334 0713 1409
	1567 2205
T-Home	1692 1004

Thomson	0847 1291 2107 2176 1175 0853 1662 1459 1935 0713
Tiny	1672
Tioko	0132
Titan	1886 2205
Tividi	1429 1736
T-Mobile	1545 2443
TNT Pass	1567
TNT SAT	2235 1692 1986 1195 1197
Tokai	0200
Tonna	1777 1611 2458 0501 0713
Top Up TV	1935
Topfield	1986 1545 1783 1722 1206 1824
Toshiba	1284
Triasat	0501
Triax	0501 1722 1986 0200 0396 0713 0853 0114 1291 0132 1099 1626 1611 1413 2101 1886
Tricolor TV	1176 1915
TT-micro	1429
Turnsat	0713
TV Vlaanderen	0853
TVonics	2441
Twiner	0132 0713 1611
UEC	0879 1356
UfaNet	1986
Umax	1993
Unisat	0200 0132
United	2418 1626
Unitymedia	1429 1882 1176 1195 1197 1915 2443
Univers	1886
Universum	0173 0299 0742 0114 1099 0740
UPC	1176 1076
UPC Direct	2443
Van Hunen	0299
Vantage	2297 1458 2204
Vaova	1993
Variosat	0173
VEA	2418
Vectra	1195 1197
Ventana	0200
Vestel	0742 1284 0114 1626
VH Sat	0299
Viasat	0253 1323 1682 1023 1195 2235 1197
Viola Digital	1672
Virgin Media	2441
Vision	1626 1886
VisionNet	1631
Visiosat	1718 1413 1631 0713 0114 1129
Vistron	0740 0299
Vitecom	1413 2531
Volcasat	2418
Volia	1957 1780
Voo	0853
Walker	2034
Wavelength	1232 1413
Welho	2357
Wetekom	0501
Wharfedale	1284 2034 0200 1935
Wisi	0173 0396 0299 0501 0132 0740 1232 1986
Worldsat	1473 0114
Woxter	2418 2139
Xsat	0713 1323
Xtreme	1300
Yakumo	1413
Yamada	1718 1993 2139
YES	0887

Youview	1176
Yukai	1659
ZapMaster	0740
Zehnder	1777 1334 1232 1413 0114 0742 1631 2388 0744 2235 1886 2034 0740
Zenith	0856
Zeta Technology	0200
Ziggo	1657 1499 2443
Zinwell	1176 2280
Zircon	1631
Zodiac	2531

CBL

@Home	1666 2015 0660
ADB	2343
Akado	2339 2043
Altibox	2030
Amino	1615
Belgacom TV	2132
BT Vision	2294
Cablecom	1582
Caiway	2015 0660 1666
Canal Digital	2030
Cisco	2506 2589 2132 1582
ClubInternet	2132
Com Hem	0660 1666 2015
Comcor	2339
Cyfrowy Polsat	1666
Delta	0660 2015 1666
Deutsche Telekom	2132
Digi	0660
DNA	1666 0660 2030
Elion	1615
freebox	1976 1482
Gala	2030
Glashart Media	1615
GuestComm	2030
Humax	0660 1813 2043 2339 1885 1983 2165 1981 2620
Jambox	2030
Kabel Deutschland	1981 1983 2165 1666 2174 2620
KabelBW	1813 2174 1981 1983 1060
KabelNoord	2015
Kiss	2132
Kreatel	2030
Lattelecom	2030
Magio Sat	2132
Magnet	1615
Motorola	2030
MTS	1615
NTL	1060 1068
Ono	1068
Optus	1060
Orange	2407
Pace	1068 2620 1060 2294
Philips	1619 2174 2294 1582
Premiere	2620 2174 1813
PrimeTel	2030
PrimeTV	2030
Qwerty	1615
RIO Media	2030
Sagem	2407
Sagemcom	2407 0660
Samsung	2407 2015 2174 1060 1666 1987 2610 2368 2589
Scientific Atlanta	2132

Sky Deutschland	2620 1813 2174 1619
	1885 0660
Sonera	1666 0660
Starman	0660
Stofa	2015
STV	0660
T-Com	2132
TDC	2368
Tele2	0660
Telewest	1068 1060 1987
Telia	2030
Telset	0660
TelstraClear	2343
Teo	2030
T-Home	2132
Thomson	1582 1981 2174 2407
	1983
TP	2407
Unitymedia	2610 1813
UPC	0660 1582
UPC Cablecom	1582
Vector	2030
Viasat	2030
Viken Fibernet	2030
Virgin Media	1060 1068 1987
Vodafone	1615
YouSee	2368
Ziggo	2015 2589 0660 1666

Pinnacle Systems	1447
PopBox	2260
Popcorn Hour	2260
RaidSonic	2238
Ricavision	1272
Sitecom	1843
Sony	1733
SoundGraph	2037
Sumvision	2628
Thermaltake	2037
Trust	1272
TViX	2153
Via Technologies	1272
Western Digital	2558
Woxter	2628 2535 2709
XBox	1272

VIDAC

A.C.Ryan	2709 2535
Antec	2037
Apple	2615
Argosy	2270
ASRock	1272
Asus	1272
ATMT	2270
Bang & Olufsen	0875
Best Buy	2522
Captiva	2270
chilIGREEN	2535 2628
CnM	2535
Dane-Elec	2628
Digitech	2260
DVICO	1921 2153
EGreat	2260
Elonex	1272
Eminent	2260
Emtec	2535 2709
EverTech	2535
Fantec	2535 2522 2709
Freecom	1843
Fujitsu Siemens	1272
Galaxy	2238
Hauppauge	1408
Hewlett Packard	1272
hFX	1272
iconBIT	2709
ICY Box	2709
iMON	2037
INOi	2270
lomega	2270 2238
ISTAR	2260
LaCie	2238 2626
me2	2535 2270
Memup	2270 2522
Microsoft	1272
Muvid	2522
Netgear	2036
Nilox	2522
Olidata	2270
Packard Bell	2238
peekTON	2116

English

UNIVERSAL ELECTRONICS INC./ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. To obtain warranty service during the warranty period, please call us at the number mentioned on the Customer Service page. Please notice that we need your purchase receipt so that we may establish your eligibility for service. If you have bought this product for purposes which are not related to your trade, business or profession, please remind that you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights.

Universal Electronics BV
Europe & International
P.O. Box 3332
7500 DH, Enschede
The Netherlands



URC-1669
710441

RDN-1080515