



# URC 1920

## ENGLISH SIMPLE SET UP GUIDE

### WELCOME, PREPARE YOUR REMOTE FOR INSTALLATION

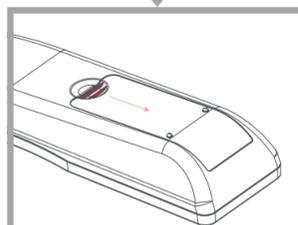

Open the battery door.

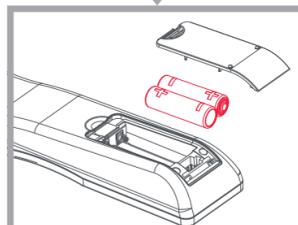

Insert 2 AAA batteries.

### FINISH

Proceed to step 1: Set up your television, on the next page

### PRODUCT DISPOSAL

(EUROPEAN DIRECTIVE 2002/96/EC)  
The crossed out wheeled bin symbol on this product ensures that this product is manufactured using high quality components that can be recycled and reused according European Directive 2002/96/EC. Please do not dispose this product with your normal household waste but inform yourself about the local separate collection for electrical and electronic products to dispose this product correctly. This will help preventing potential negative effects on the environment and/or human health.

### BATTERY DISPOSAL

 
(EUROPEAN DIRECTIVE 2006/66/EC)  
Please do not dispose your batteries with your normal household waste but inform yourself about the local separate collection for empty batteries to dispose them correctly. This will help preventing potential negative effects on the environment and/or human health.

UNIVERSAL ELECTRONICS INC/ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. To obtain warranty service during the warranty period, please call us at the number mentioned on the Customer Service page. Please notice that we need your purchase receipt so that we may establish your eligibility for service. If you have bought this product for purposes which are not related to your trade, business of profession, please remind that you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights.

GB : 0901-5510010 (0,50 per minute)  
IRL : 016 015 986  
Website : www.oneforall.com



http://www.ofa.com/urc1920



### TELEVISION and FREEVIEW

Select control of your TV or Freeview/ Freesat Box

### WATCH TV

This key allows you combine control of your Freeview Box and your TV. In this mode you can control the Volume and AV Input of your TV and the other keys will all control the Freeview Box.

### POWER

On/Off. In Watch TV Mode, holding down this key for 3 seconds will turn the TV and Freeview Box off.

### TEXT

Teletext On

### TV

Text Off

### AV SOURCE

Change Input of your TV

### FAV

Favourite Channel List

### WWW

Internet

### EPG

Electronic Program Guide, TV Guide

### PP

Last Channel

### I

Info

### 16:9

Change screen format

### Library

View Recordings List

### S

Subtitle

### AD

Audio Description




## STEP 1: SET UP YOUR TELEVISION

### START WITH YOUR BRAND NUMBER: IS YOUR TV BRAND LISTED?

- |             |           |            |
|-------------|-----------|------------|
| 1 Bush      | 5 Philips | 9 Technika |
| 2 Hitachi   | 6 Samsung | 0 Toshiba  |
| 3 LG        | 7 Sharp   |            |
| 4 Panasonic | 8 Sony    |            |

#### YES: SIMPLESET

Turn on your TV (not standby).  
Point remote towards the TV.

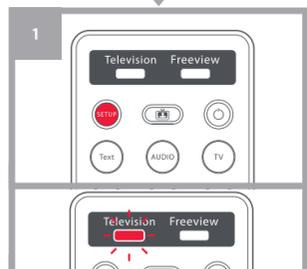

Press and release the TV key. Hold down the SETUP key until the TV key blinks twice.



Press and release the BRAND NUMBER, e.g number 4 for Panasonic. Next press and hold the OK key until the TV switches off. RELEASE the key as soon as your television switches off. The remote will now operate your TV. If you find that some keys operate incorrectly or not at all, repeat from Step 1 to find the next code.

### FINISH

 
Go to step 2: Set up your Set Top Box, on the next page.

#### NO: DIRECT SET

Locate the brand of your TV in the codelist overleaf.



Press and release the TV key. Hold down the SETUP key until the TV key blinks twice.



Enter the first Code listed for your Brand. LED will blink twice. Point towards TV and press power. If TV switches off you are ready. If not repeat the procedure using next code.

### FINISH


If Direct Set didn't work, go to step 3: Auto Search

## STEP 2: SET UP YOUR SET TOP BOX

### START WITH YOUR BRAND NUMBER: IS YOUR BRAND LISTED BELOW?

#### YES: SIMPLESET

Turn on your STB (not standby).  
Point remote towards the STB.

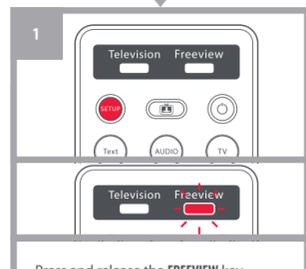

Press and release the FREEVIEW key. Then hold down the SETUP key until the Freeview key blinks twice.




Enter the 2 Digit BRAND NUMBER, e.g number 06 for Amstrad. Next press and hold the OK key until the Set Top Box switches off. RELEASE the key as soon as your Freeview/Freesat box switches off. The remote will now operate your Set Top Box. If you find that some keys operate incorrectly or not at all, repeat from Step 1 to find the next code.

### FINISH

If Simpleset didn't work, go to Direct Set

#### NO: DIRECT SET

Locate the brand of your Set Top Box in the codelist overleaf.

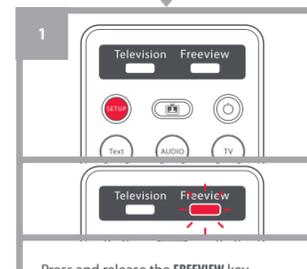

Press and release the FREEVIEW key. Then hold down the SETUP key until the Freeview key blinks twice.



Enter the first Code listed for your Brand. LED will blink twice. Point towards STB and press power. If STB switches off you are ready. If not repeat the procedure using next code.

### FINISH

If Direct Set didn't work, go to step 3: Auto Search

## STEP 3: AUTO SEARCH (IF SIMPLESET OR DIRECT SET DOES NOT WORK)

### START: CHOOSE TV OR FREEVIEW

#### TV



Press and release the TV key. Then hold down the SETUP key until the TV key blinks twice.



Point the remote at your TV. Press and hold the POWER key. The remote will send a different Power signal to your TV every 3 seconds. As soon as the TV switches off, release the Power key to store the code. The LED will blink twice, and the remote should now operate your TV. If you find that some keys operate incorrectly or not at all, repeat from Step 1 to find the next code.

This may take up to 15 minutes.

### FINISH

#### FREEVIEW



Press and release the FREEVIEW key. Then hold down the SETUP key until the Freeview key blinks twice.



Point the remote at your Freeview/ Freesat box. Press and hold the Power key. The remote will send a different Power signal to your box every 3 seconds. As soon as the Set Top Box switches off, release the Power key to store the code. The LED will blink twice, and the remote should now operate your box. If you find that some keys operate incorrectly or not at all, repeat from Step 1 to find the next code.


This may take up to 15 minutes.

### FINISH

## STEP 4: COPY LEARN FUNCTION

### START: LEARN A NEW FUNCTION TO YOUR REMOTE

Your One For All remote can learn any function from your original (working) remote.

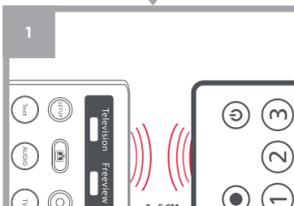

Place the original remote facing the One For All remote on a flat surface.



Press the key for the mode you want to learn functions in - e.g TV. Press and hold the Setup key until the Mode LED blinks twice.



Press 975. The LED will blink twice.

### HOW TO DELETE A LEARNED FUNCTION

1. Press the key for the mode you want to delete functions from - e.g. TV
2. Hold down the SETUP key until the Mode LED blinks twice
3. Press the key you wish to delete (e.g. the Red key) twice. The Mode LED will blink twice.