






**ONE
FOR ALL**

URC 7966

**SMART
CONTROL PRO**
ENGLISH




     www.oneforall.com/mynevo

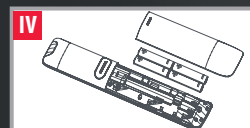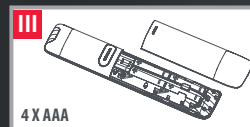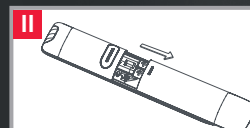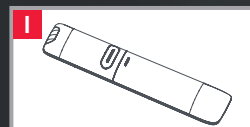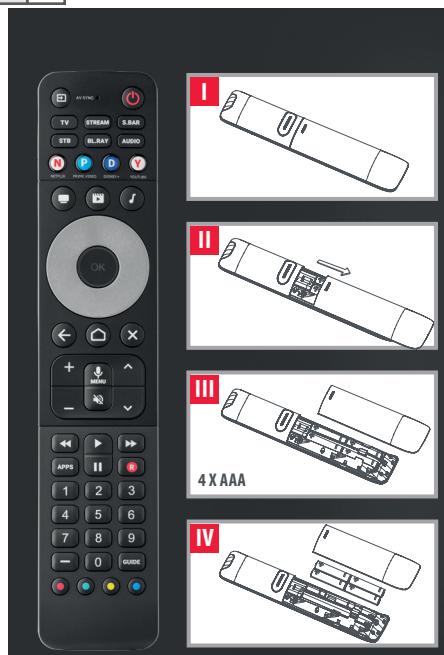

KEY DESCRIPTION

 - 1** INPUT Selects the Input of the current device
- 2** POWER On / Off
- 3** TV_STREAM_S.BAR_STB_BLRAY_AUDIO Device keys – press these to select the device you want to control
- 4** NETFLIX Netflix (if available). Can be programmed as an App Shortcut
- 5** PRIME VIDEO Amazon Prime Video (if available). Can be programmed as an App Shortcut
- 6** DISNEY+ Disney+ (if available). Can be programmed as an App Shortcut
- 7** YOUTUBE YouTube (if available). Can be programmed as an App Shortcut
- 8** WATCH TV Combines up to 3 Devices; a TV, a source device and an audio device
- 9** WATCH MOVIE Combines up to 3 Devices; a TV, a source device and an audio device


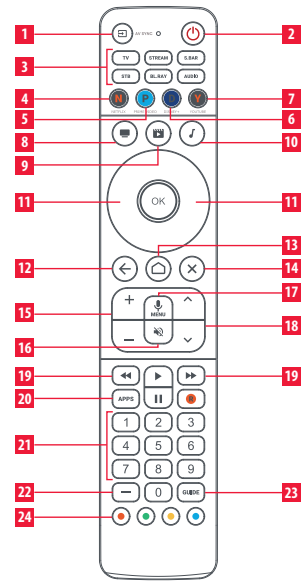


KEY DESCRIPTION

- 10** LISTEN TO MUSIC Combines up to 3 Devices; a TV, a source device and an audio device
- 11** UP_LEFT_OK_RIGHT_DOWN Navigate and select items in the menu of the current device
- 12** BACK One step back in the menu
- 13** HOME Home /Smart Menu
- 14** EXIT Exit the Menu
- 15** VOL + VOL - Controls the Volume of the current Audio Device
- 16** MUTE Mute
- 17** MIC /MENU Settings or Options Menu – When controlling a device using the Google TV OS, holding this key down will give access to Voice Commands
- 18** CH +_CH - Channel Up and Down
- 19** REW_PLAY_FF_PAUSE_REC Controls the playback of the current show or disc
- 20** APPS Apps Menu
- 21** Digits 0-9 Digits 0-9 for channel selection for channel selection
- 22** DASH Delimiter for selection of sub-channels
- 23** GUIDE TV Guide
- 24** RED_GREEN_YELLOW_BLUE Quick access buttons for the menu of the current device


GETTING STARTED

  Your One For All Smart Control Pro is a Universal Remote Control capable of controlling up to 6 Audio Video devices. To set up the remote to control your devices, you will need to install the My Nevo app. This can be downloaded from either the Apple App Store or Google Play Store. Once downloaded, please open the app and give it permission to use Bluetooth. This is used to communicate between your phone and the remote.

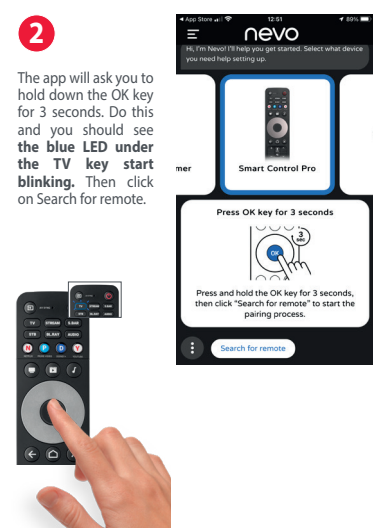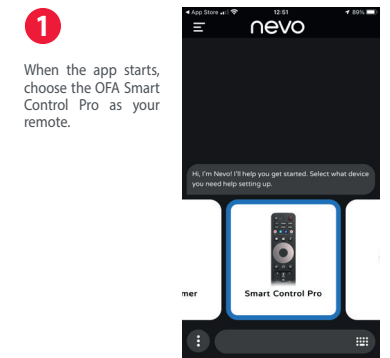


DEVICE SETUP

 Once the app has located your remote, you can follow the instructions to set it up to control your Audio Video devices – we recommend setting up your TV first of all.

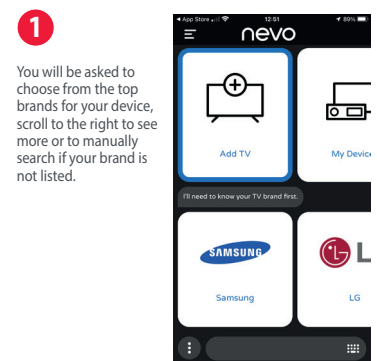


 2 Next you will be asked to test the remote with the device you are setting up. Point the remote towards the device and try some keys as prompted.

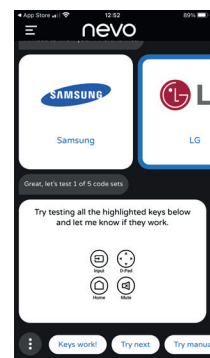

Note that the keys shown are just examples and may not be present on your original remote. You can try any of the keys on the remote to see if it behaves the same as your original remote.

 Once you are satisfied the remote is controlling the device, select "Keys work!".

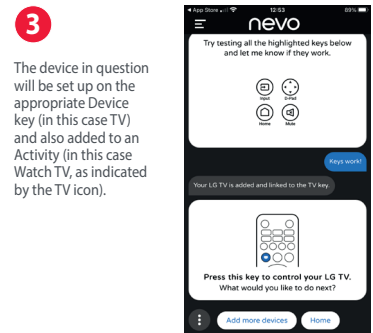

4 Repeat these steps for any other devices you want to set up, such as a Sound Bar, set Top Box etc.



DEVICES AND ACTIVITIES

The Smart Control Pro has 2 ways of controlling your AV equipment; Device Mode and Activity Mode.

DEVICE MODE

In Device Mode, the remote behaves exactly as your original remote does, all the keys will control the device you have selected. To control a device, just press the key that corresponds to the device type you set up. For Instance, if you press the TV key, all the keys on the Smart Control will control your TV. If you then press the STB key, the remote will then control your Set Top Box. This gives you the most complete control over each of the devices you have set up. You can program the remote to control up to 6 devices.

ACTIVITY SETUP

Activities are combinations of devices. Up to 3 devices are combined into one Activity. These will be your TV, an Audio device such as a sound bar, and a source device like a Streaming box or Blu-ray player.

ACTIVITY SETUP

The Smart Control Pro features 3 Activities as shown here; namely Watch TV, Watch Movie and Listen to Music.

As you add devices, they will be automatically added to Activities. Your TV and Audio device will first be set up on the Watch TV Activity. The next device you set up will be added to Watch Movie Activity (along with the TV and Audio) and the third device you set up will be added to Listen To Music.

If you are adding a device which is connected to your TV (for example a Set Top Box), you will be asked to test to see which HDMI input of your TV it is connected to. The remote will remember this.

ACTIVITY CONTROL

When you press an Activity key, the remote will make sure that the devices you want to control are powered on and the correct input on your TV is selected. After that the remote will control a combination of devices. If you set up a Streaming box and you select the Watch Movie Activity, the remote will power on your TV, Streaming Box and Sound Bar and make sure the TV is on the correct HDMI input. After that, the Volume keys will control your Sound Bar, the Input key will work for the TV, and the Playback keys will control the Streaming Box. All other keys will also control the Streaming Box.

 


AV SYNC If one or more devices did not power on or the TV is not on the right HDMI Input when you selected the Activity, hold down the Input key while pointing towards the TV to perform the AV Sync function. This should correct the issue for you.



Pressing the Power key when in an Activity mode will turn all the devices in that Activity Off.

If you would prefer a different combination of Activities, this can be changed by selecting Activities in the My Nevo app.

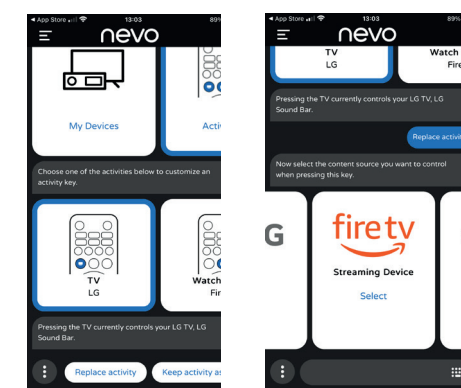

AV SYNC



The Input key is used to manually select the HDMI Input of your TV. If you press and release it you should see the Input Selection screen of your TV. But it also has a secondary function. After pressing the Activity key, if you find that one or more of the desired devices did not power on, or that the TV is on the wrong HDMI Input, hold down this key for 2 seconds. The remote will then try to correct this for you, by resending the appropriate Power and Input commands.

 
TIPS AND TRICKS

- To power on the devices in the Activity, press the Activity key.
- To power off your devices, press the Power key.
- The remote will remember which devices are on or off and which HDMI Input was last selected.
 - This can go out of sync, for example if the original remotes are used
 - If you don't see the picture or a device is not powered on when it should be, press and hold the AV sync key.
- If you need help, the My Nevo app has a help section, just scroll to the right from the main menu and select "Help".


AMAZON FIRE STICK / CUBE SETUP

If you have an Amazon Fire Edition Television, this can be setup as a normal TV. However if you have an Amazon Fire Stick or Cube, the procedure is slightly different. You will need the original Fire remote control. Next perform the following 5 steps:


- HDMI** First, simply turn on your TV and select the input you have the Fire device connected to.
- Secondly, press any button on the original Fire remote to wake it up.
- Next, using your original Fire remote select "Settings > Controllers and Bluetooth Devices > Amazon Fire Remotes > Add New Remote"

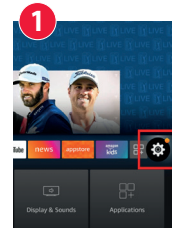


Settings

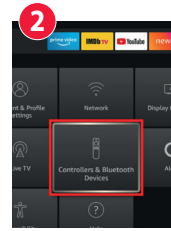 


Controllers and Bluetooth Devices

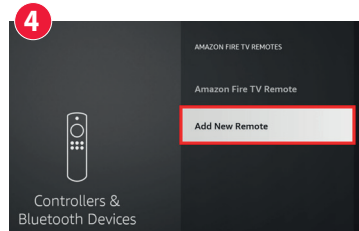 

Add New Remote

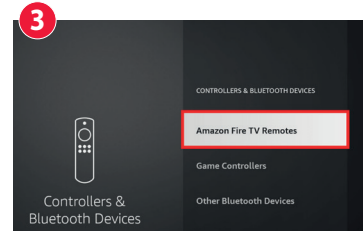 

Amazon Fire TV Remotes

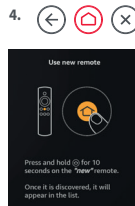 


Use new remote

- Hold down the Home key on your NEW Smart Control Pro Remote for 10 seconds. The remote will appear as an Amazon Remote, now press the Select key on the ORIGINAL AMAZON REMOTE to select it. The OFA Remote is now paired with the Amazon Fire device, but it needs to be added to an Activity to control it.

- The Amazon Fire will automatically be set up on the STREAM device key, as well as added to an Activity.

 Step 2 – Pair the remote with the TV via Bluetooth

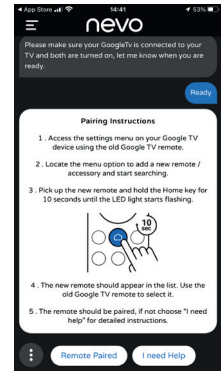

Once your TV has been set up, the next step is to pair the remote with the TV via Bluetooth. To do this, select the option to add another device, and select Streaming Device. Next select Google TV. The next step is to prepare your TV to be paired with the Smart Control. Please use your TV's ORIGINAL remote control to do the following:



AV SYNC



- Select the Setting icon on your TV (generally speaking a gear icon on the top right) and scroll to the setting for adding remotes and/or accessory.
- Select the option for adding an accessory - the TV should start searching for a new accessory.
- Following the instructions on the app, hold down the Home key on the Smart Control Pro for 10 seconds, until the blue Stream LED starts blinking.
- The remote should appear in the list of accessories to pair. It may appear as AR (Advanced Remote). If it does not appear in a few seconds, press back on the original remote and search again.
- Once the AR remote appears press OK / Select on the original remote control. The TV should then pair with the remote.
- Once paired, the remote will appear in the accessories list as OFA Smart Control Pro.

USING THE VOICE SEARCH

Once the procedure has been completed, you can use Voice Search on your TV by selecting the Stream Device mode, or the Watch Movie Activity mode. Then when you want to use voice, hold down the Menu/Mic button, wait one second and speak clearly into the top center of the remote.

APP SHORTCUTS

 
The Smart Control Pro also gives you quick access to your favorite streaming apps, even if there was no key for them on your original remote. The four keys shown below can each open one app and have been designed to resemble the icons for Netflix, Amazon Prime Video, Disney + and YouTube.



If available on your original remote, these keys should perform the same function and open the app directly. If there is no way of directly opening that app on your device, you will be asked to program a real time macro (series of commands) that will always open the app, for example, pressing the Home key, waiting a couple of seconds and then pressing Menu Right twice and then OK. To program these keys, select App Shortcuts from the main menu of the app.

LEARNING

Once you have set up your Devices and Activities using the My Nevo app, it is also possible to add extra functions from your existing infrared remote controls (this is not possible for remotes that use Bluetooth like Amazon Fire or Google TV Voice remotes). This can be useful if you find that there is a key that you use occasionally on the original remote that is not available of the Smart Control Pro. Firstly, choose a key that you do not use for the device you wish to learn from – in this example we will use the Dash key which is not used for Blu-ray. Next, take the original remote and point towards the top of the Smart Pro, approximately an inch apart.

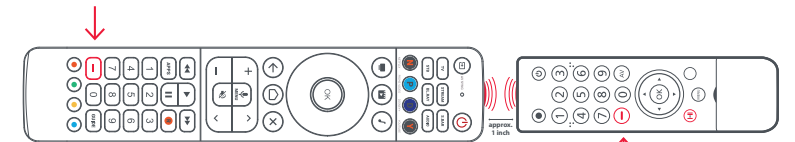


- BL.RAY** Press and release the Device key to learn the functions to (for example BL. RAY)
 - ← X** Press and hold Back and Exit until the LED under the key blinks twice
 - 1 2 3** Press 975 (LED should blink twice)
4 5 6
7 8 9
 - Press and release the key to learn onto on the Smart Pro (e.g. Dash). The LED should rapidly flash
 - Press the key to learn from the original remote. If successful the LED should blink twice
 - If you want to learn more than one key, then within 5 seconds repeat steps 4 and 5 with the subsequent keys
 - When all keys are learned, do not touch a key for 10 seconds or more – the remote will time out of the learning mode
- After this, the keys you have learned should work as they do on the original remote control.

HOW TO SET UP TV WITH GOOGLE TO USE VOICE ON THE SMART CONTROL PRO

If you have a TV running the Google TV Operating System, for example a Sony or TCL TV, most of the functionality works by infrared (IR). But in order to use voice search, it is necessary to pair the remote with the TV using Bluetooth Low Energy (BLE). To do this:

 Step 1 – Set up your TV

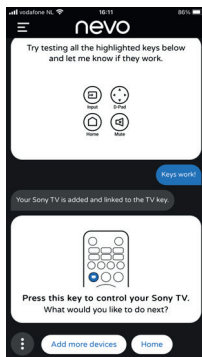

Firstly install the My Nevo app and follow the instructions to communicate with the Smart Control Pro remote. The app will check to see if your remote has the latest firmware and if it doesn't it will automatically update the remote. Once this has been done you will be prompted to set up your TV. Select the brand of your TV and the app will ask you to test some keys to see if it works. You can test all the keys on your remote, including for example the Netflix key to make sure you have exactly the right code. If there is a key you have on your original remote that is not working on the Smart Control Pro, select Try Next. Once the keys work, select Keys Work. Your TV is now set up.

WARRANTY / GUARANTEE

PRODUCT DISPOSAL (EUROPEAN DIRECTIVE 2012/19/EU)

The crossed out wheeled bin symbol on this product ensures that this product is manufactured using high quality components that can be recycled and reused according to European Directive 2012/19/EU. Please do not dispose of this product with your normal household waste, refer to local regulations for the proper collection or disposal of electrical and electronic products. This will help this will help in preventing negative effects on the environment and/or human health.

BATTERY DISPOSAL (EUROPEAN DIRECTIVE 2006/66/EC)

Please do not dispose of your batteries with your normal household waste, refer to local regulations for the proper collection or disposal. This will help preventing potential negative effects on the environment and/or human health.

GUARANTEE TERMS AND CONDITIONS UNIVERSAL ELECTRONICS warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of 3 years from the date of original purchase. This product will be repaired or if necessary, replaced free of charge if it has been proven to be defective within the 3 year warranty period. The forwarding costs are on the account of the owner; the costs of returning the product are on the account of UNIVERSAL ELECTRONICS.

This warranty does not cover damage or failures caused by products or services not supplied by UNIVERSAL ELECTRONICS, or which result from not mounting the product according to manual instructions. This also applies when the product has been modified / repaired by others than UNIVERSAL ELECTRONICS or if a fault is the result of accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, improper maintenance, alteration, modifications, fire, water, lightning, natural disasters, wrong use or carelessness.

To obtain warranty service during the warranty period contact [...], and please note that we need your original purchase receipt so that we may establish your eligibility for service. If you have bought this product for purposes which are not related to your trade, business or profession, you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights. www.oneforall.com

Download the App



www.oneforall.com/mynevo



Universal Electronics BV – Europe & International
P.O. Box 3332, 7500 DH Enschede
The Netherlands



713348 ENGLISH RDN1080124