
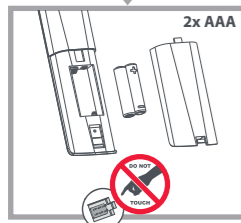


**ONE
FOR ALL**

**OFA SAMSUNG
Universal
Replacement Remote
URC 4810**

ENGLISH 4
ESPAÑOL 8
AUDIO CODELIST 12

BATTERIES

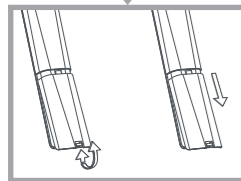

English: **CAUTION:** Risk of explosion if battery is replaced by an incorrect type. Use quality Alkaline batteries.

Español: **ADVERTENCIA:** Riesgo de explosión si se cambian las pilas por un tipo de pilas incorrecto. Usar pilas alcalinas / de calidad.

Customer Support: 855-716-2573 (toll free)
OFA warranty/terms & conditions:
855-569-6595 (toll free)
www.oneforall.com

Universal Electronics Inc.
15147 N. Scottsdale Road, Suite H300,
Scottsdale, Arizona 85254

One For All is a registered trademark of UEI,
Made in China, Hecho en China

712965 RDN1210422

URC 4810 Samsung: SAMSUNG® is a registered trademark of Samsung Electronics Co., Ltd.

WARRANTY / GUARANTEE INFORMATION

Terms and Conditions for "100% Guaranteed To Work" policy, and the separate 1 Year Limited Warranty against defects in material and workmanship can be found at www.oneforall.com/remoteguarantee, or you may request hard copies via mail to Universal Electronics Inc. 15147 N. Scottsdale Road, Suite H300, Scottsdale, Arizona 85254. Please include your full name, product information, and contact information in your request communication.

LEGAL NOTICES FCC STATEMENT:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ESPAÑOL GARANTÍA / INFORMACIÓN DE GARANTÍA

Los términos y condiciones de garantía aplicables a este producto se encuentran en el sitio www.oneforall.com/remoteguarantee, o puede solicitar una copia física llamando al 855-716-2573, o por correo a Universal Electronics Inc. 15147 N. Scottsdale Road, Suite H300, Scottsdale, Arizona 85254. Por favor incluya su nombre completo, información de su producto y todos sus datos de contacto en su petición. Para productos de venta en México los términos y condiciones a continuación se aplican.

Los términos y condiciones de garantía a continuación solo se aplican a productos de venta en México

GARANTÍA LIMITADA

Garantía: Universal Electronics Inc., garantiza que este producto estará libre de defectos de materiales y mano de obra por un periodo de un año a partir de la fecha de la compra. Esta garantía no se aplica al daño causado por el manejo y envío, o daños causados por accidente, abuso, uso indebido, desgaste natural, mantenimiento inadecuado, incumplimiento de las instrucciones o aquellos daños que resulten de modificaciones o reparaciones no autorizadas. La garantía anterior se aplicará únicamente al comprador original, y es y será en lugar de cualquier otra garantía, ya sea expresa o implícita y de todas las demás obligaciones o responsabilidades por parte de Universal Electronics Inc., siendo así que no asume responsabilidad por, ni tampoco autoriza a cualquier otra persona que pretenda actuar en su nombre para modificar o cambiar esta garantía, ni a asumir ninguna otra garantía u obligación con respecto a este producto. La responsabilidad máxima para Universal Electronics Inc., bajo cualquier circunstancia en relación con cualquier garantía se encontrará limitada al reemplazo del producto defectuoso. Se recomienda que el cliente revise constantemente su equipo para su correcto funcionamiento.

Recursos: Su recurso exclusivo bajo esta Garantía Limitada es que Universal Electronics Inc., a su elección, reparará o reemplazará, sin cargo las partes y/o la mano de obra, del equipo que se encuentre defectuoso.

Procedimiento del Servicio: Para obtener el servicio de garantía, visite la Página de Garantía y complete la forma en www.oneforall.com/warranty con su nombre completo, información de contacto, número de serie del producto, y la descripción del problema junto con una copia/imagen del recibo de compra, en donde se muestre la fecha de compra. Si es necesario, Universal Electronics Inc., le proporcionará instrucciones de envío para el producto. En caso de que haya un defecto, Universal Electronics Inc., reparará su equipo o le enviará un reemplazo. Usted pagará los costos de envío y devolución (con excepción de California y México).

Aviso Legal: LA GARANTÍA ANTERIOR ES LA ÚNICA Y EXCLUSIVA GARANTÍA POR PARTE DE UNIVERSAL ELECTRONICS INC., EN RELACIÓN CON LOS PRODUCTOS. NO HAY DECLARACIONES O GARANTÍAS ADICIONALES, EXPRESAS O IMPLÍCITAS, SALVO LO DISPUESTO POR LA LEY APLICABLE. CUALQUIER GARANTÍA IMPLÍCITA REQUERIDA POR LA LEY ESTÁ LIMITADA EN DURACIÓN AL PERIODO DE GARANTÍA ESTABLECIDO EN LA PRESENTE. ALGUNOS ESTADOS NO PERMITEN LIMITACIONES SOBRE LA DURACIÓN DE UNA GARANTÍA IMPLÍCITA, POR LO QUE LAS LIMITACIONES ANTES MENCIONADAS PUEDEN NO SERLE APLICABLES.

EN NINGÚN CASO UNIVERSAL ELECTRONICS INC., O SUS FILIALES, SERÁN RESPONSABLES DE DAÑOS INCIDENTALES, ESPECIALES, INDIRECTOS, CONSECUENTES O MÚLTIPLES, INCLUYENDO DE MANERA ENUNCIATIVA MÁS NO LIMITATIVA, LAS PERDIDAS DE GANANCIAS, PERIDAS O DAÑOS DEL SOFTWARE O LOS DATOS, O DAÑOS AL EQUIPO DERIVADOS DEL USO DE CUALQUIER PRODUCTO, INCLUSO SI SE ADIERTE LA POSIBILIDAD DE DICHAOS DAÑOS. LA GARANTÍA ESTABLECIDA LE DA LOS DERECHOS LEGALES ESPECÍFICOS, Y USTED PUEDE TENER DERECHOS ADICIONALES, QUE PUEDE VARIAR DE UN ESTADO A OTRO. ALGUNOS ESTADOS NO PERMITEN LA EXCLUSIÓN O LIMITACIÓN DE LOS DAÑOS INCIDENTALES O CONSECUENTES, POR LO QUE LAS LIMITACIONES ANTES MENCIONADAS PUEDEN NO APLICARSE. La Garantía Limitada aplica a los siguientes productos:

URC 4810


AVISOS LEGALES DECLARACIÓN DE LA FCC:

Este equipo ha sido sometido a prueba y se ha determinado que satisface los límites establecidos para ser clasificado como dispositivo digital de Clase B, de acuerdo con la Parte 15 del reglamento FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en un ambiente residencial. Este dispositivo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no es instalado y utilizado de acuerdo a las instrucciones, puede causar interferencias perjudiciales en las comunicaciones de radio. Sin embargo, no se garantiza que no ocurrirá interferencia en una instalación particular. Si el equipo causa interferencias perjudiciales en la recepción de la señal de radio o televisión, lo cual puede comprobarse entendiéndolo y apagándolo alternativamente, se recomienda al usuario corregir la interferencia por uno de los siguientes procedimientos:

- Cambie la orientación o la ubicación de la antena receptora.
 - Aumente la distancia entre el equipo y el receptor.
 - Conecte el equipo a un tomacorriente de un circuito distinto de aquel al que está conectado el receptor.
 - Solicite consejo al distribuidor o a un técnico experto en radio y televisión para obtener ayuda.
- Este dispositivo satisface la parte 15 del reglamento FCC. Su utilización está sujeta a las siguientes dos condiciones: (1) este dispositivo no puede causar interferencia dañina, y (2) este dispositivo debe aceptar cualquier interferencia recibida incluyendo interferencias que puedan causar una operación no deseada.

Cuidado: Cualquier cambio o modificación que no esté aprobado expresamente por la parte responsable por el cumplimiento puede anular la autoridad del usuario para operar el equipo.

-2-

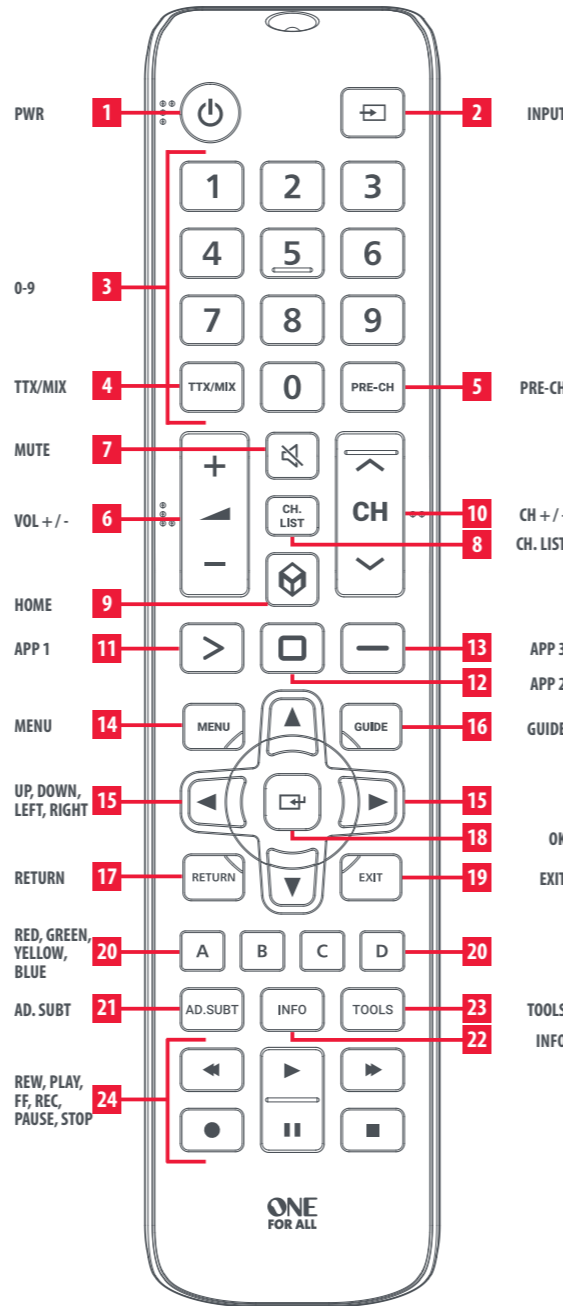

PWR 1 INPUT 2

0-9 3

TTX/MIX 4 PRE-CH 5

MUTE 7

VOL +/- 6 CH +/- CH. LIST 8 10

HOME 9

APP 1 11 APP 3 13

MENU 14 APP 2 12 GUIDE 16

UP, DOWN, LEFT, RIGHT 15

RETURN 17 OK 18 EXIT 19

RED, GREEN, YELLOW, BLUE 20

AD. SUBT 21 TOOLS 23 INFO 22

REW, PLAY, FF, REC, PAUSE, STOP 24

-3-

ENGLISH

- PWR** Power Toggle
- INPUT** Input Select
- 0-9** Digits for Channel Entry
- TTX/MIX** Teletext on and off
- PRE-CH** Previous Channel
- VOL +/-** Volume Up and Down
- MUTE** Mute
- CH. LIST** Channel List
- HOME** Home, Smart Hub
- APP 1** Rakuten TV / App Shortcut Key
- APP 2** Netflix / App Shortcut Key
- APP 3** Amazon Prime Video / App Shortcut Key
- MENU** Menu
- UP, DOWN, LEFT, RIGHT** Navigate the Menu
- GUIDE** Guide
- RETURN** Back on level in the Menu

STEP 1: SET UP YOUR TELEVISION

THE MAJORITY OF NEWER SAMSUNG TV'S SHOULD WORK DIRECTLY. After putting batteries in, just test some of the keys, and if they work, your remote is ready. If not, follow the next steps:

- Make sure your TV is on (not on standby).
 - Hold down **Red + Blue** until the LED behind the **Power Key** blinks twice.
 - Point towards the TV and hold down the **Power key** until the TV turns off
 - The remote will send a different Power signal every 3 seconds. As soon as the TV turns off, let go of the **Power key**.
 - The light will blink twice. Now test the rest of the keys on the remote, if they work as your original did, your remote is ready to use. If you find some keys do not work as expected (or at all), proceed to the next step.
- If you find some keys still do not work as expected (or at all), proceed to the next step.

-4-

ENGLISH

STEP 2: IF STEP 1 DOES NOT WORK AS EXPECTED

ARE SOME KEYS NOT WORKING AS EXPECTED?


If you find some keys do not work as expected (or at all), proceed to the next step.

- Make sure your TV is on (not on standby).
- Hold down **RED + BLUE** until the LED behind the **Power Key** blinks twice
- Point towards the TV and hold one of the keys that is not working correctly (for example **Menu**).
- The remote will send a signal every 3 seconds.
- When the correct function is shown on the screen (in this case the Menu), let go of the key.
- The LED will blink twice - your remote is ready to use.

LEARNING

LEARN A NEW FUNCTION TO YOUR REMOTE

Your One For All remote can learn any function from your original (working) remote.



- Place the original remote facing the One For All remote on a flat surface.
- Hold down **GREEN + YELLOW** until the LED blinks twice.
- Press **975**. The LED will blink twice.
- Press the key on the One For All remote you want to learn on, for Example: the **VOL +** key. The LED will blink rapidly.
- Press the key on the Original remote you want to learn, for Example: the **VOL +** key of your Audio Device
- Two blinks:** ok. Repeat from step 4 for any more keys to learn. **Long blink:** try again from step 4.
- When you have learned all the keys you need, press and hold the **OK** key for 3 seconds. The LED will blink twice.

HOW TO DELETE A LEARNED FUNCTION

- Hold down **GREEN + YELLOW** until the LED blinks twice.
- Press **976**.
- Press the key to reset twice.
- The LED flashes twice and the key will revert to the original function.

-5-

ENGLISH

SOUND BAR / AUDIO RECEIVER VOLUME CONTROL

SOUND BAR / AUDIO RECEIVER VOLUME CONTROL

If you have your TV connected to a Sound Bar or Audio Receiver, it's possible to set up your One For All remote to control the Volume and Mute of this device. There are two ways to do this:

AUDIO SIMPLESET

If you have a Sound Bar or Audio Device from one of the brands listed in the table below, you can use the SimpleSet method to program your remote to control it. If you do not have one of the below brands, please proceed to the next section.

Digit	Brand
1	Bose
2	Denon
3	Samsung / Harman/Kardon / JBL
4	LG / JVC
5	Marantz / Philips
6	Onkyo
7	Panasonic / Technics
8	Pioneer
9	Sony
0	Yamaha

Note that each of the brands has a digit associated with it, for example 4 for LG (and JVC).

To set up your remote to control your Sound Bar / Audio Device, first make sure your TV and Sound Bar / Audio Device are both powered on, and that there is something playing that you can hear (this procedure will test the Mute function). Next:

- Hold down the **VOLUME UP** and **VOLUME DOWN** buttons together until the LED under the **POWER** key blinks twice.
- Now point the remote towards your Sound Bar / Audio Devices and hold down the digit key for your brand (for example 4 for LG). The remote will send the Mute function to your device every 3 seconds.
- As soon as your Sound Bar / Audio Device mutes the volume, release the digit key. The LED under the **Power** key will blink twice, and the Volume Up, Down and Mute keys should now control your Sound Bar / Audio Device.

AUDIO CODE SETUP

If your Sound Bar / Audio Device is not one of the brands listed above, you can also set up the remote to control it by entering a 4 digit code. The codes are listed in the Audio Codelist section of this manual, and are listed by brand and then popularity. Locate the brand of your Sound Bar / Audio Device in this code list and then the procedure is:

-6-

